



Sony VAIO VPC-EB33FM RAM Replacement

This guide will inform readers on how to safely...

Written By: Bret Omsberg



INTRODUCTION

This guide will inform readers on how to safely uninstall the RAM components of the Sony VAIO VPC-EB33FM laptop.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [PC3-10600 2 GB RAM Chip](#) (1)
- [PC3-10600 4 GB RAM Chip](#) (1)

Step 1 — Battery

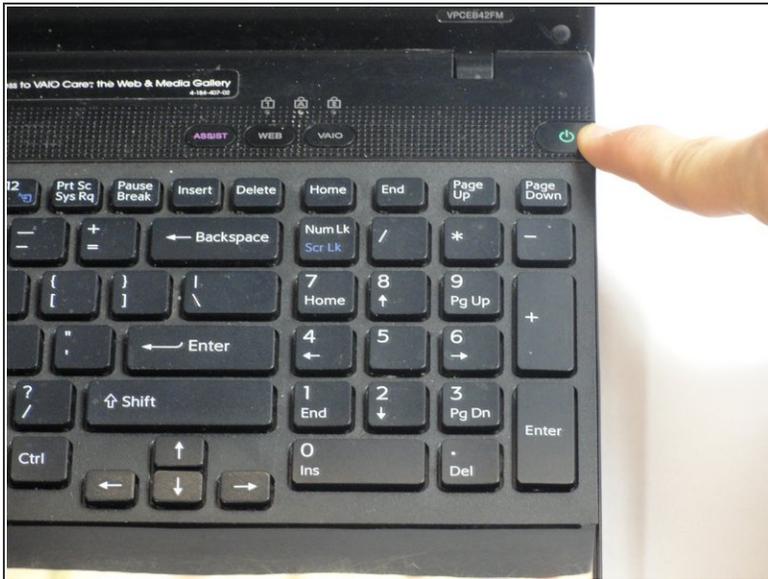

- Power down the laptop by pressing the power button.
- Turn the laptop onto its backside.

Step 2



- To release the battery, hold both the release button and the unlock button at the same time.

Step 3




- Remove the battery out from the notch while continuing to hold the release button.

Step 4 — RAM



- Remove the one screw with a Phillips #00 screwdriver.
- ⓘ The screw cannot be removed from the RAM casing cover.

Step 5

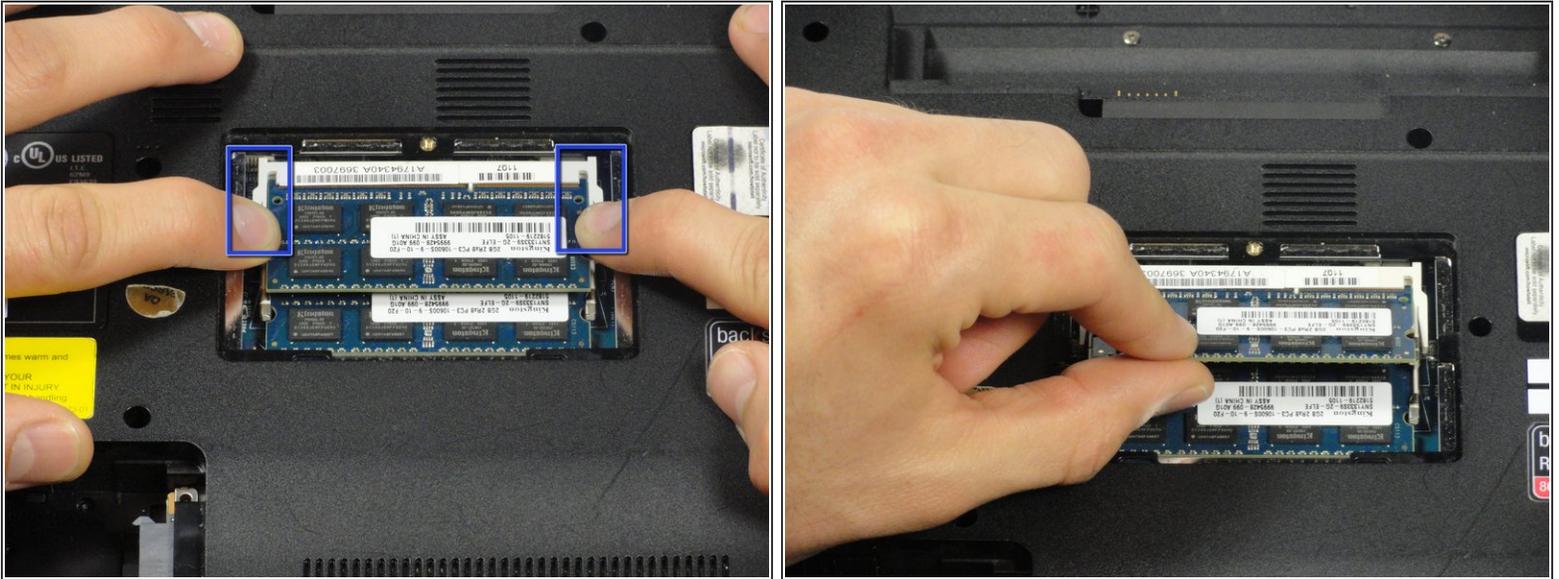

- Pull the two retaining arms away from the center of the RAM chip.
- The RAM will make a "pop" sound and the RAM stick will rise for ease of handling.

Step 6



- Pull the RAM stick out of its socket.
- To remove the second stick of RAM, repeat steps six and seven.
- When installing RAM, make sure sticks are firmly in place or the computer will not register them.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2023-02-08 09:39:45 PM (MST).

