



# LG VX5300 Front LCD Screen Replacement

This guide aids in disassembly, repair, and reassembly of the front LCD screen.

Written By: stephanie



---

## INTRODUCTION

Outline what you are going to teach someone how to do.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front LCD Screen



- Remove the rubber stoppers from the four corners of the front screen.

## Step 2



- Using the Phillips screwdriver, carefully remove all four screws.

## Step 3



- To pry open the face plate, place the iFixit Opener tool in the crease of the phone.

To reassemble your device, follow these instructions in reverse order.