 


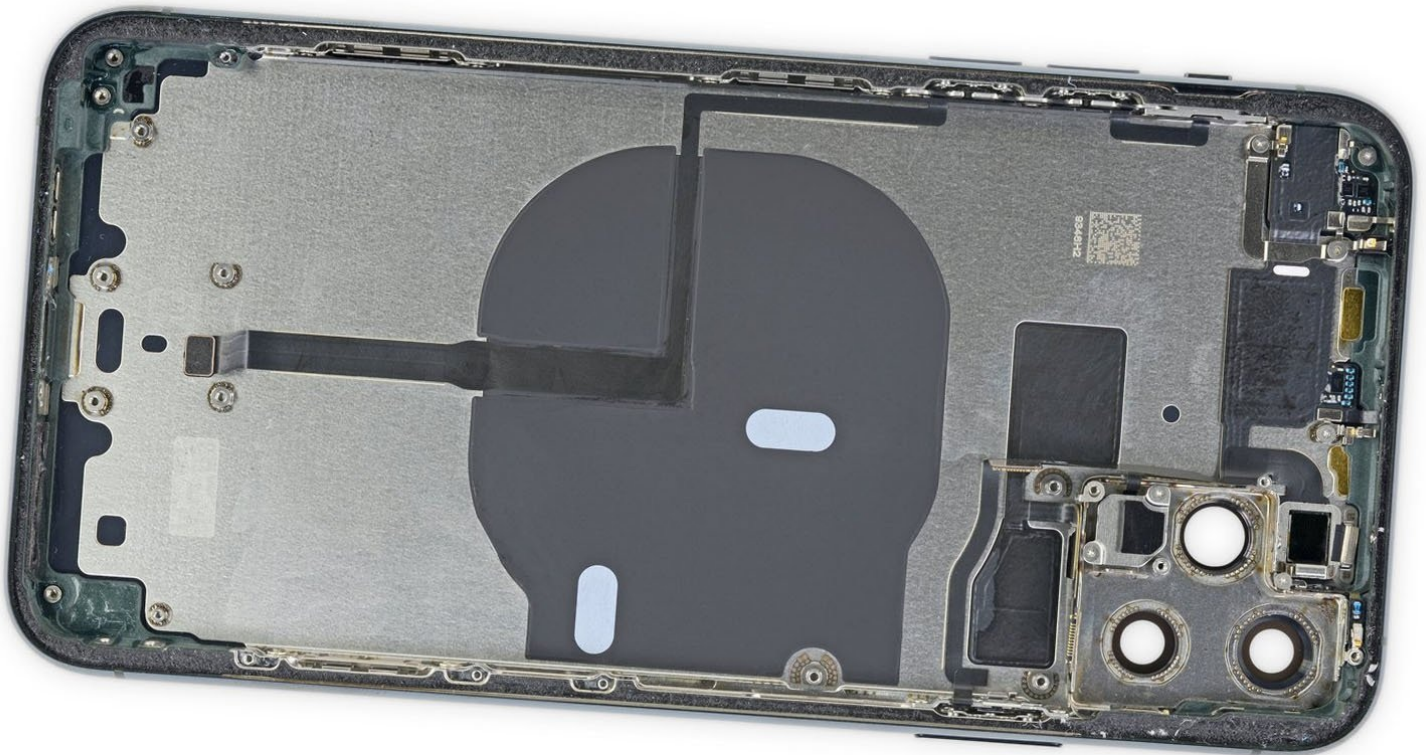

# iPhone 11 Pro Rear Case Replacement

Use this guide to remove all components from...

Written By: Arty



# INTRODUCTION

[video: [https://www.youtube.com/watch?v=dYuDcT\\_et\\_8](https://www.youtube.com/watch?v=dYuDcT_et_8)]

Use this guide to remove all components from the rear case of your iPhone 11 Pro. This guide will show you how to remove speaker, cables, taptic engine, battery, logic board, and button covers so you can replace a dented or bent cover.



## TOOLS:

[P2 Pentalobe Screwdriver iPhone](#) (1)  
[Tri-point Y000 Screwdriver](#) (1)  
[Phillips #000 Screwdriver](#) (1)  
[Tweezers](#) (1)  
[Suction Handle](#) (1)  
[Spudger](#) (1)  
[Standoff Screwdriver for iPhones](#) (1)

 


## PARTS:

[iPhone 11 Pro Aftermarket Blank Rear Glass Panel with Lens Covers](#) (1)

---

## Step 1 — Remove the pentalobe screws

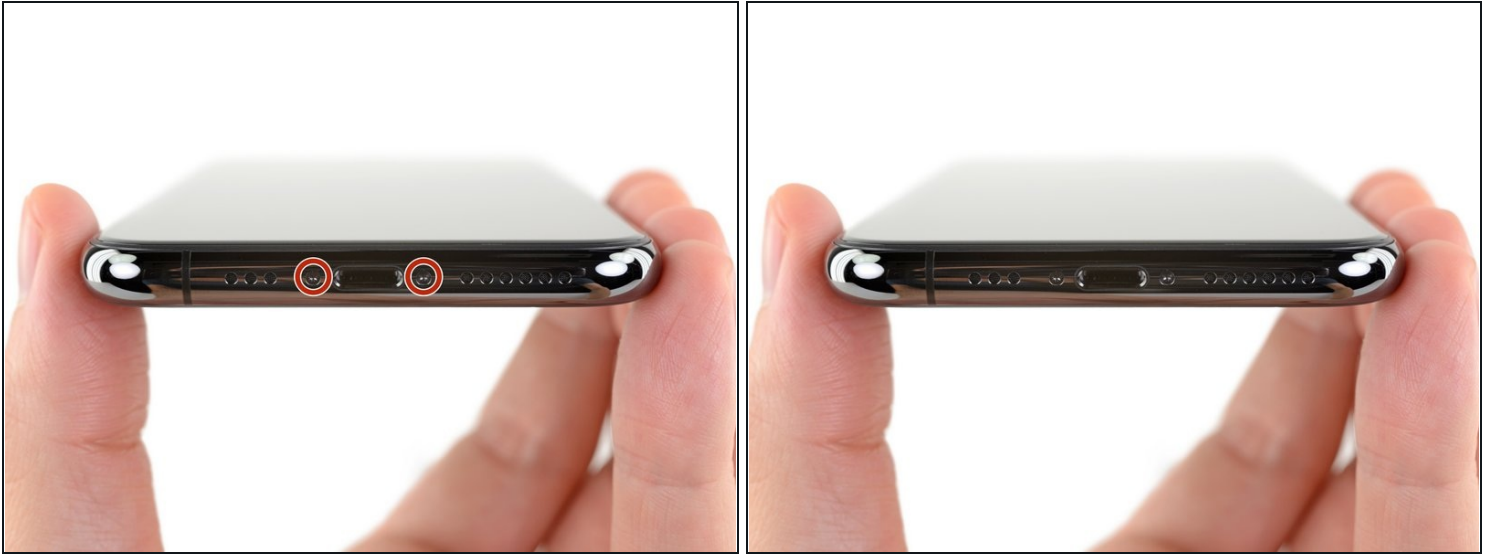

**⚠ Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.**

- Power off your iPhone before beginning disassembly.
- Remove the two 6.7 mm-long pentalobe screws at the bottom edge of the iPhone.
- ⓘ Opening the iPhone's display will compromise its waterproof seals. Have replacement seals ready before you proceed past this step, or take care to avoid liquid exposure if you reassemble your iPhone without replacing the seals.

---

To reassemble your device, follow these instructions in reverse order.