




Dell Inspiron 13-7373 Daughterboard Replacement

In this guide, you will see how to replace the...

Written By: Kristen Gismondi

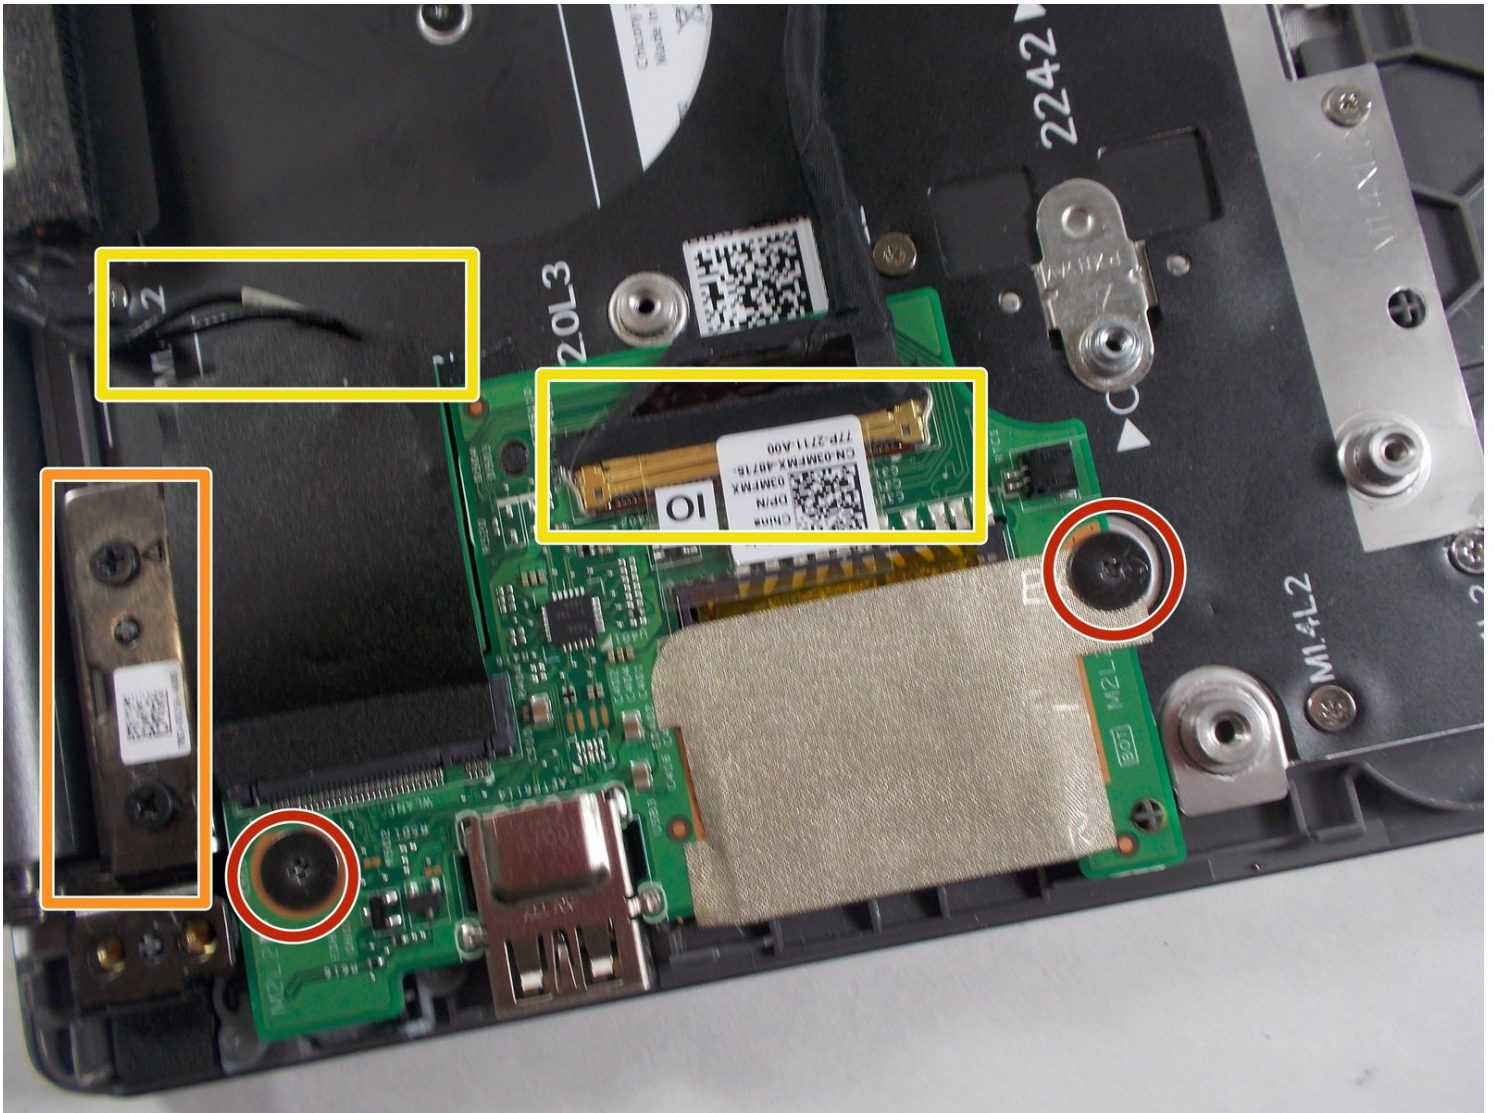

INTRODUCTION

In this guide, you will see how to replace the daughterboard of your Dell Inspiron 13-7373 laptop. This replacement would most commonly be needed if there has been damage to the original part, which may result in no output from; one of the I/O ports such as the SD card or USB readers, or wireless network adapter board.



TOOLS:


[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Phillips #0 Screwdriver](#) (1)

Step 1 — Back Cover

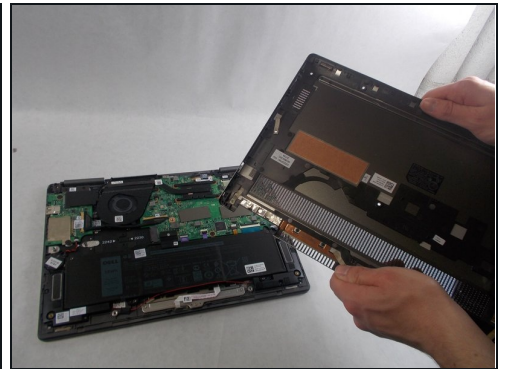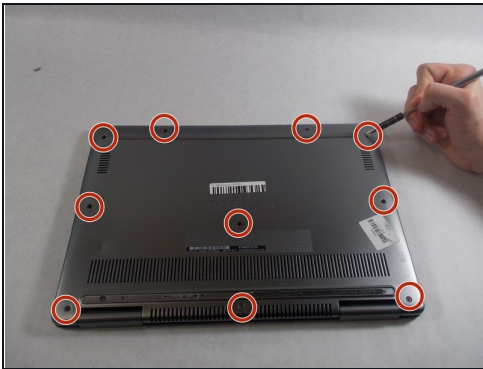

 Before you begin, be sure to turn off your laptop and unplug it from the outlet.


- Remove the ten 7.5mm Phillips #00 screws from the bottom of the laptop.
- Use an opening tool to remove the bottom half of the case from the laptop.

Step 2 — Network Card




- Use the Phillips #00 screwdriver to remove the single screw holding in the network card.
- Remove the network card from the laptop.

Step 3 — Daughterboard

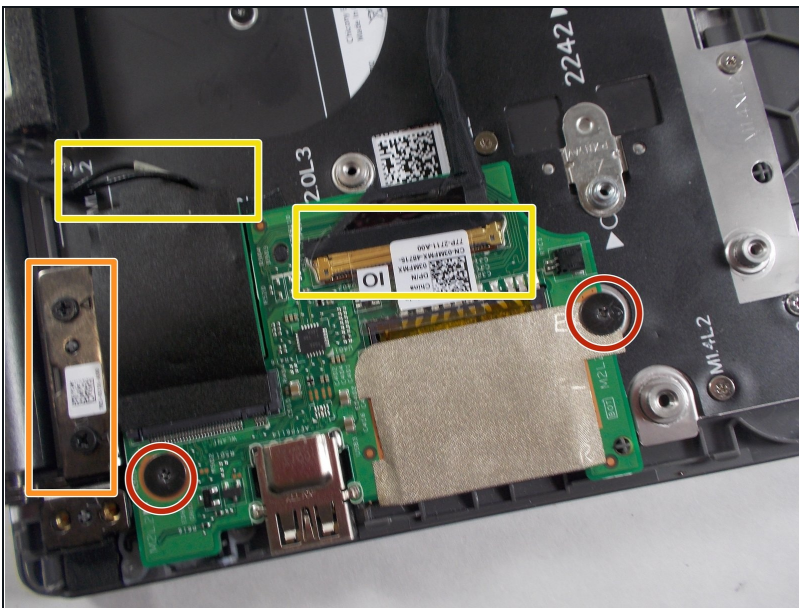

- Use the Phillips #00 screwdriver to remove the two 1mm screws holding in the daughterboard.
- Remove the metal piece holding in the daughterboard.
- Disconnect the two cable connectors from the daughterboard.
- If the cables are stuck, gently wiggle them until they disconnect.

Step 4

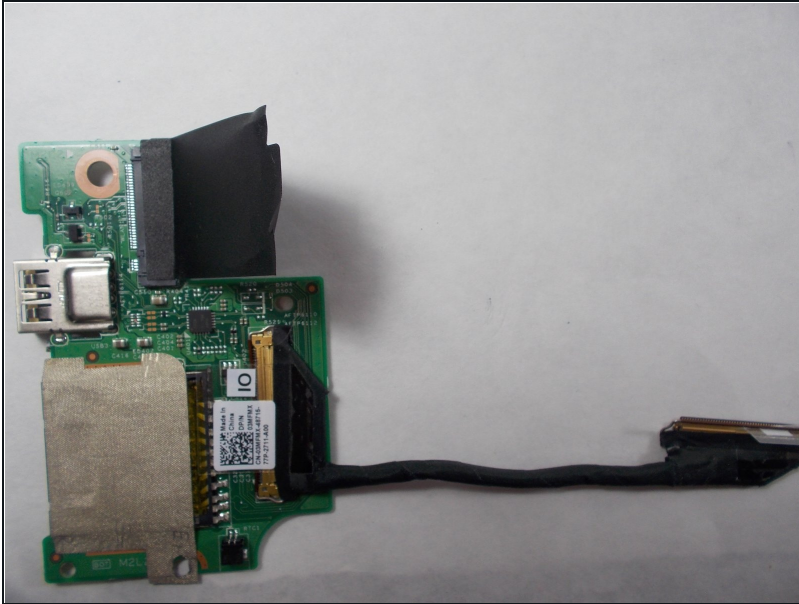

- Remove the daughterboard.

To reassemble your device, follow these instructions in reverse order.