




Toshiba Satellite L305-S5875 RAM Replacement

This guide will demonstrate how to install additional RAM modules into your laptop.

Written By: Elliot Fiske

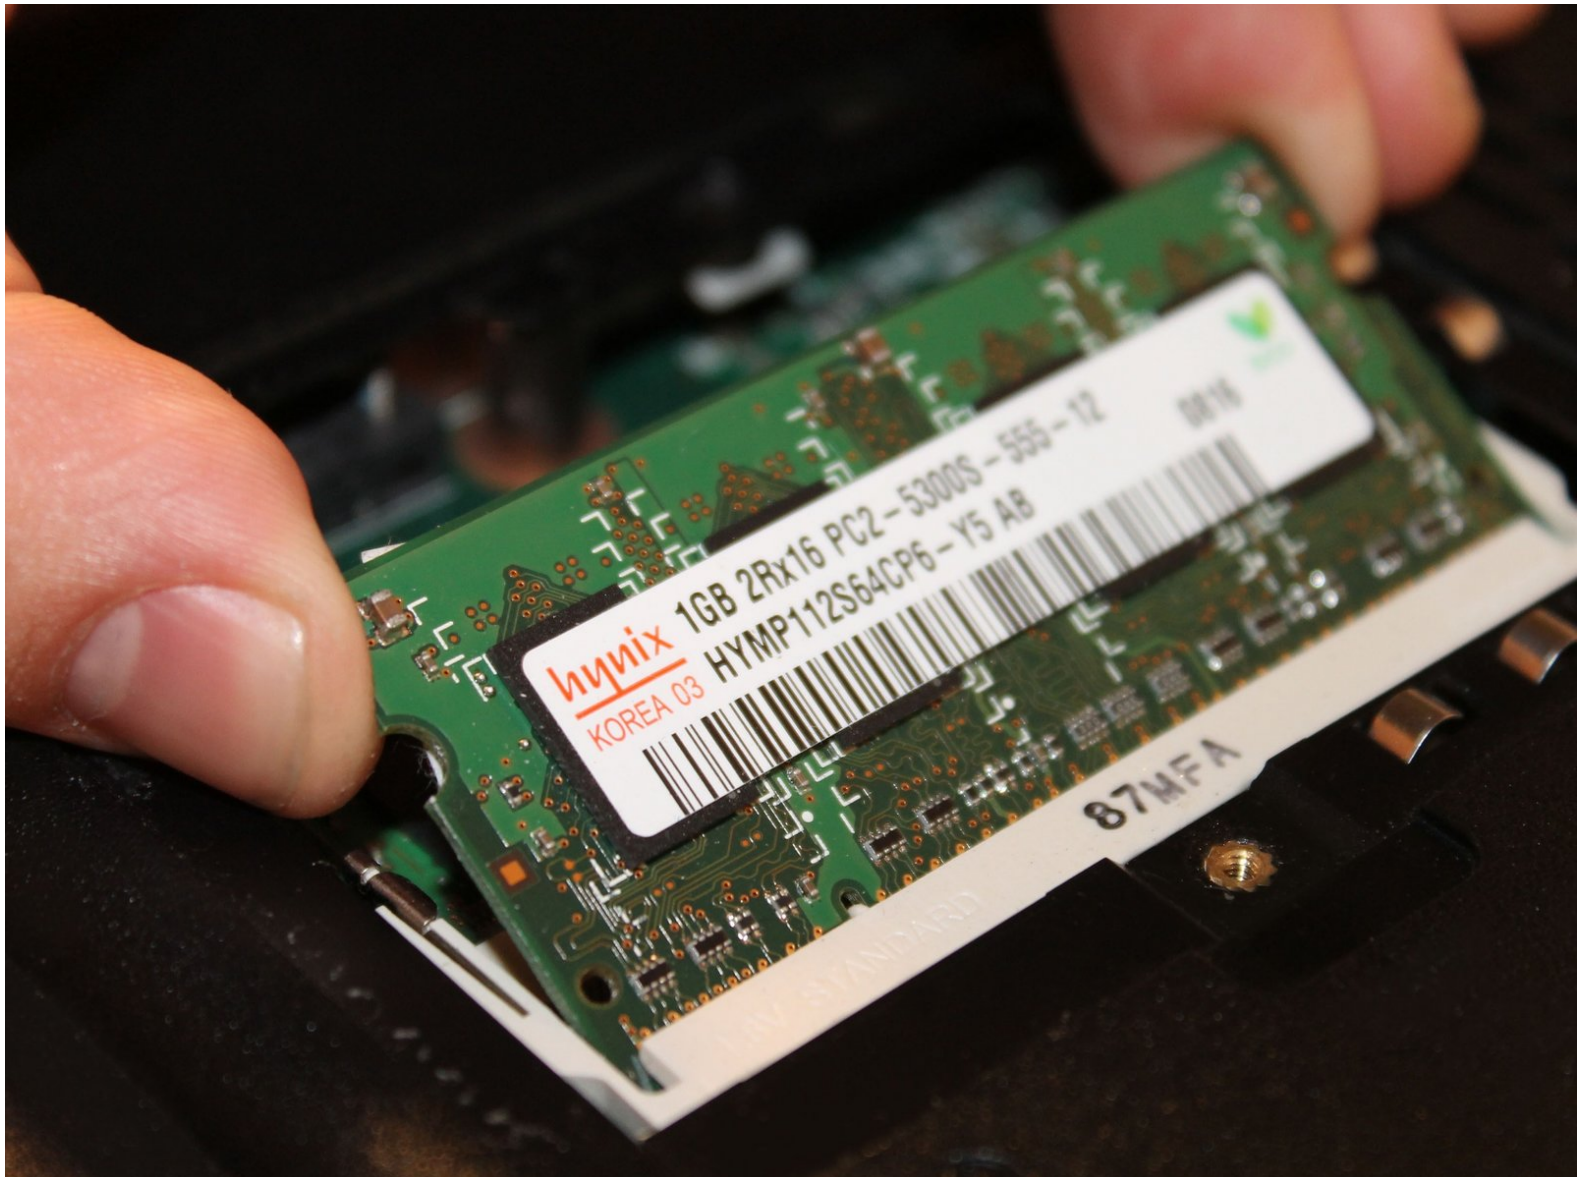

INTRODUCTION

Installing additional RAM modules will increase the performance of your laptop, and is relatively easy to do.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [PC2-5300 1 GB RAM Chip](#) (1)
- [PC2-5300 2 GB RAM Chip](#) (1)

Step 1 — Battery



- Close the laptop lid and flip the laptop over.
- Switch the lock button on the left to the unlock position. (The unlock position is to the left side.)

Step 2



- Push the release button to the right.
- Hold the release button to the right and lift the battery out of its housing.

Step 3 — RAM



- Locate the RAM Module compartment on the bottom side of the laptop.
- Carefully remove the 4.6mm 0 Phillips head screw and put it in a safe place.
- Locate the notch on the screw side of the lid and lift to remove it.

Step 4



- Push the metal tabs on the sides of the RAM outward and the RAM will pop up.
- Gently pull the RAM out.
- Replace the RAM by sliding the new one into the angled socket similarly to how you removed the old RAM.
- Gently apply pressure until the metal tabs on the sides click into place.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2022-05-27 06:16:25 PM (MST).

