

Hover-1 Eagle Kickstand Replacement

How to replace the kickstand on a Hover-1 Eagle scooter.

Written By: Andrew Gaskell



INTRODUCTION

This guide will walk you through how to replace a faulty or wobbly kickstand on a Hover-1 Eagle scooter. You should replace your kickstand if your kickstand is defective, wobbly, or not the proper length. To determine if you need to replace your kickstand, refer to our <u>Troubleshooting Guide</u>.



TOOLS:

• 4 mm Hex Key (1)

Step 1 — Kickstand





- Remove the two 6mm axle screws using a hex bit 4.0.
- Remove the kickstand from the scooter.

To reassemble your device, follow these instructions in reverse order.