



# Hover-1 Eagle Front Wheel Replacement

How to replace the front wheel on a Hover-1 Eagle scooter.

Written By: Andrew Gaskell



## INTRODUCTION

This guide will walk you through how to replace a faulty or worn-down front wheel on a Hover-1 Eagle scooter. You should replace your front wheel if your front wheel has been worn down or damaged. To determine if you need to replace your front wheel, refer to our [Troubleshooting Guide](#).



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Groove Joint Pliers](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Front Wheel



- Wedge the spudger underneath the red reflective sticker and peel it back.

## Step 2



- Remove the four 2mm screws with a Phillips #2 screwdriver.

### Step 3



- Remove the plastic axle cover by sliding the cover downwards.

### Step 4



- Use pliers to remove the locknut.



## Step 5



- Slide the wheel out in a downwards motion to remove it from the fork.

To reassemble your device, follow these instructions in reverse order.