




# Philips BiPAP S/T Blower Replacement

Use this guide to replace the blower unit of your BiPAP S/T ventilator.

Written By: Benjamin LaVigna

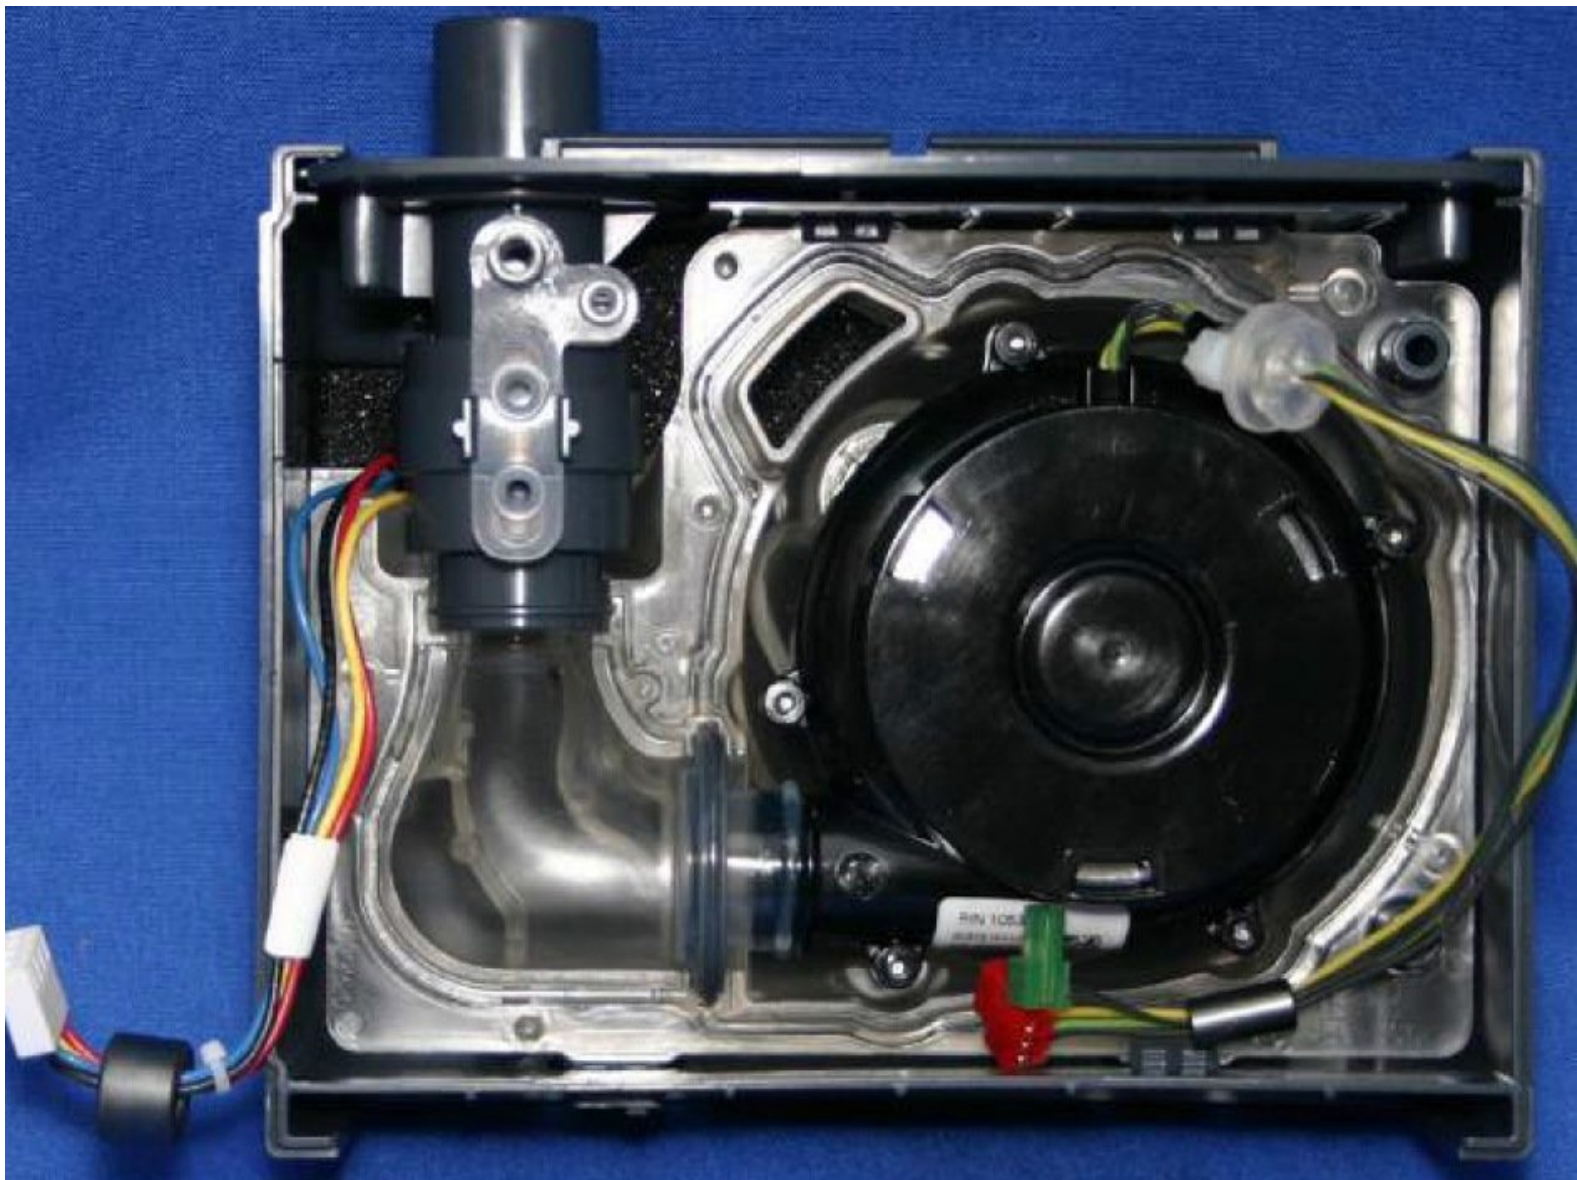

## INTRODUCTION

Under high usage the blower assembly is under a large amount of stress causing the whole unit to malfunction. Thus, needing to replace the whole blower.

For more information on replacing the blower assembly, please refer to **page 6-16** in the service manual.



### TOOLS:


- [T8 Torx Screwdriver](#) (1)
- [T15 Torx Screwdriver](#) (1)



### PARTS:

- [Repironics BiPAP Blower Assembly](#) (1)

## Step 1 — Blower

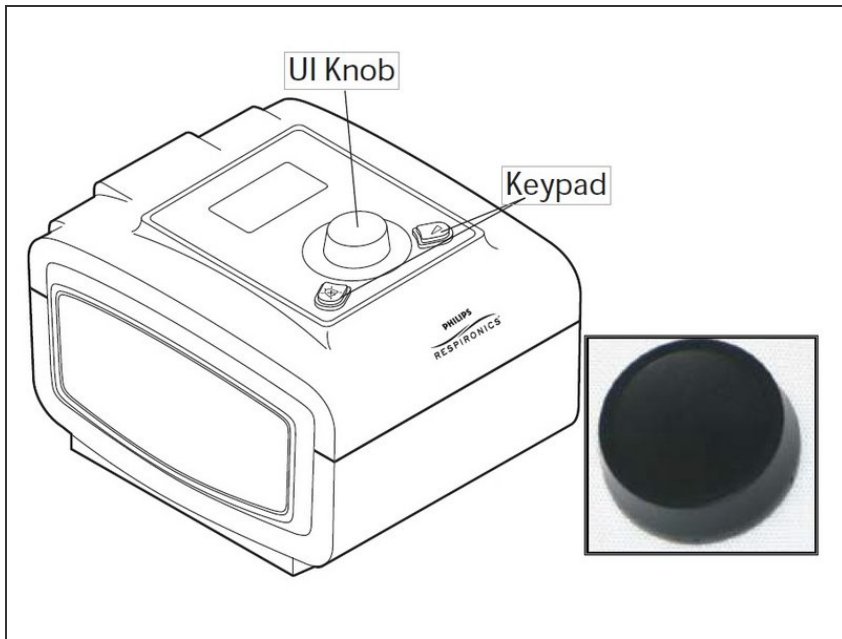


- Remove the UI Knob by pulling it straight out.

## Step 2




- Remove the top cover by using a Torx T15 to remove the 2 screws on the back of the enclosure.

### Step 3

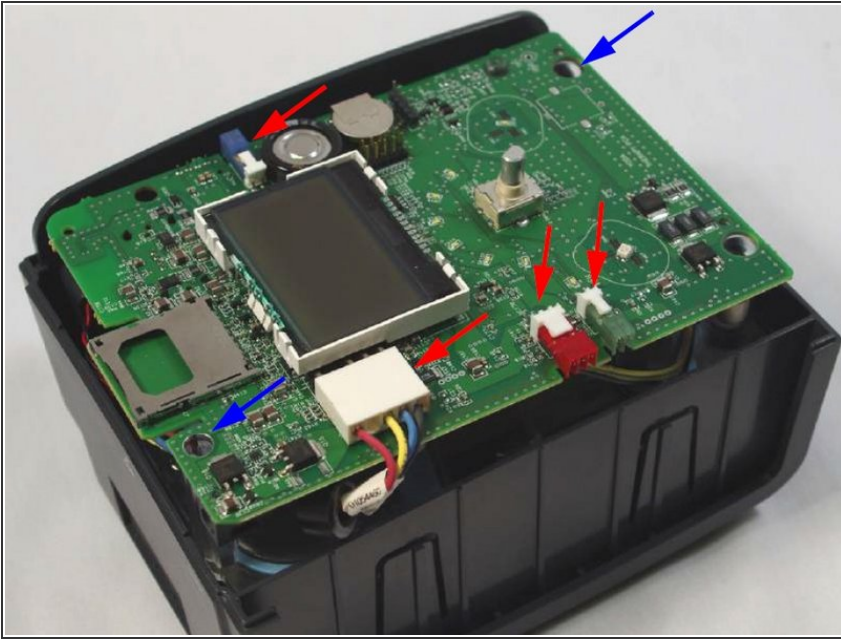

- Remove the Main PCA by removing the wiring harnesses and squeezing the 2 standoffs in the corners of the board.

### Step 4

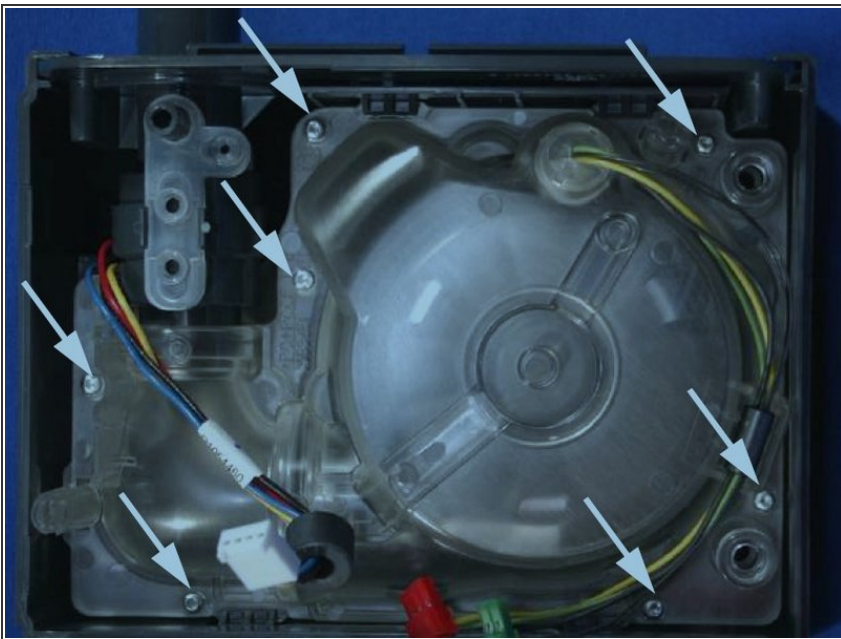

- Remove the Blower Cap by using the T8 Torx screwdriver to remove the 7 screws that secure the Cap to the enclosure.

## Step 5



- Lift the Blower Assembly out of the blower housing.
- Remove the blower Outlet Bellows from the blower assembly.


## Step 6



- Place the New outlet bellows onto the blower assembly.



## Step 7

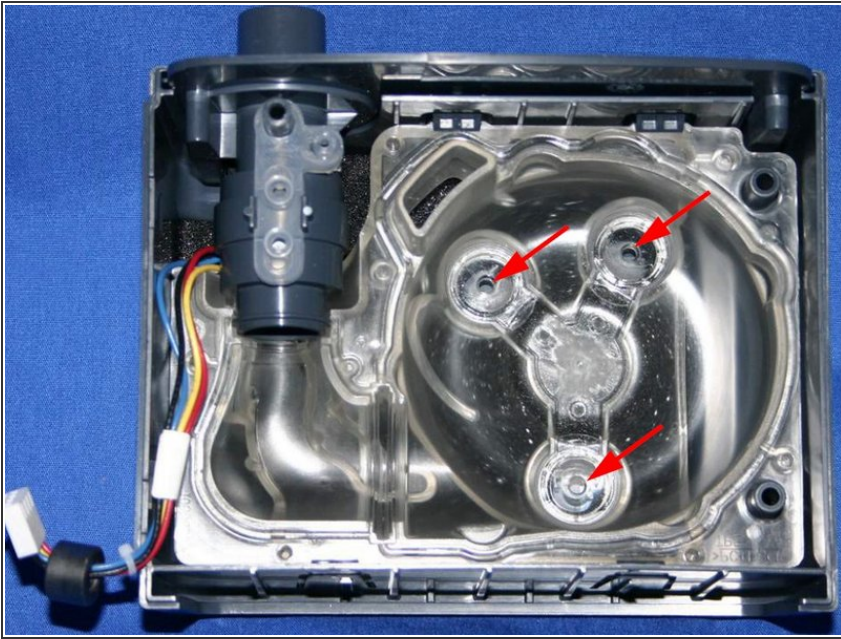

- Align the stands located on the bottom of the blower assembly with the holes in the blower housing.

To reassemble your device, follow these instructions in reverse order.