



Toyota Corolla Headlight/ignition key buzzer disable

Disable the buzzer that warns of keys in ignition/lights on when you open the door.

Written By: bt1993



INTRODUCTION


Warning:

You can disassemble the instrument cluster for a neater solution, however beware, the buzzer is linked to the ECU so any electrical circuit modifications like actually disconnecting the buzzer could lead to a ECU malfunction.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)

Step 1 — Toyota Corolla Headlight/ignition key buzzer disable

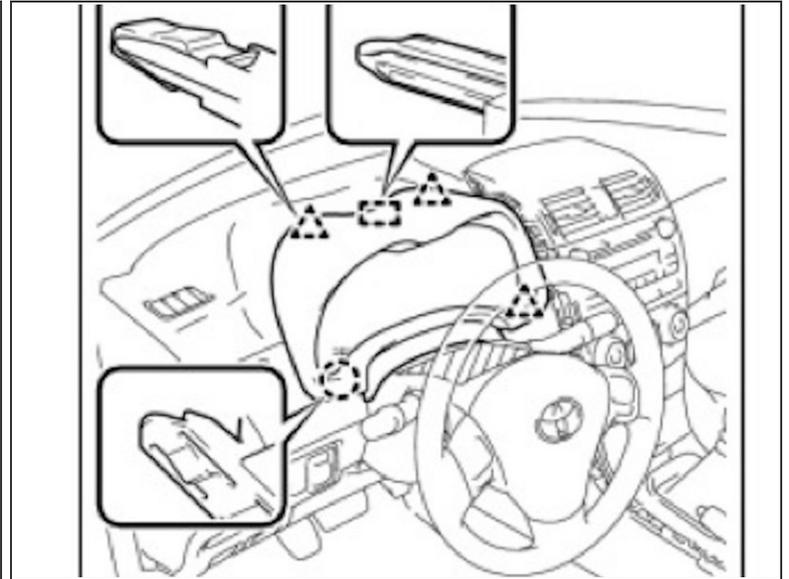

- Start by removing the hood over the instrument cluster. Pull the hood straight out towards the steering wheel.

Step 2

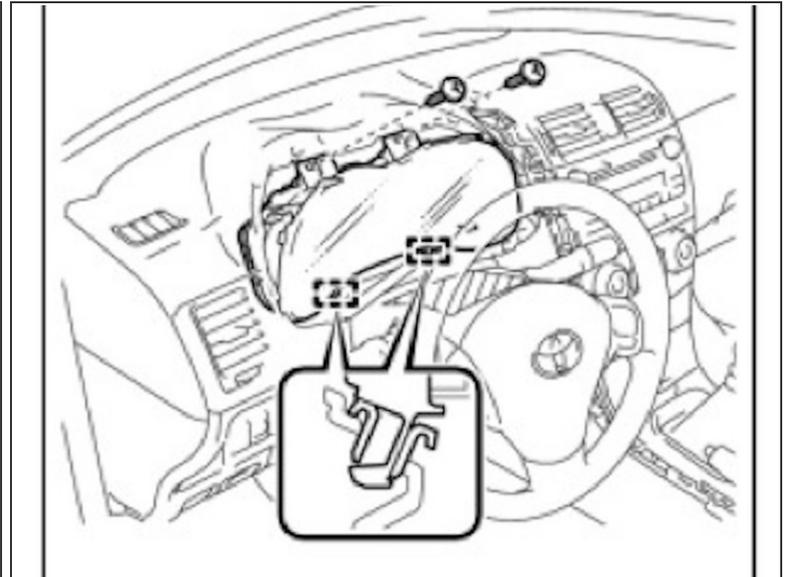

- After removing the hood, undo the four screws securing the instrument cluster and pull forward.

Step 3



- The buzzer is accessed through a grill in the bottom of the instrument cluster/combination meter. Simply poke a sharp object into the grill and mash up the speaker dome to neutralize the buzzer!

To reassemble your device, follow these instructions in reverse order.