



# Asus Vivobook K570UD-DS74 Wi-Fi Card Replacement

This guide will show owners of the Asus Vivobook K570UD-DS74 how to replace their laptops Wi-Fi card.

Written By: Andrew Hamilton



---

## INTRODUCTION


For the vast majority of laptop users, a Wi-Fi connection is critical for accessing the internet and if the Wi-Fi card were ever to go bad in a laptop, many would simply see their laptop as unusable. This guide will walk owners of the Asus Vivobook K570UD-DS74 through the process of replacing their broken Wi-Fi card in order to give their device new life.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Wi-Fi Card

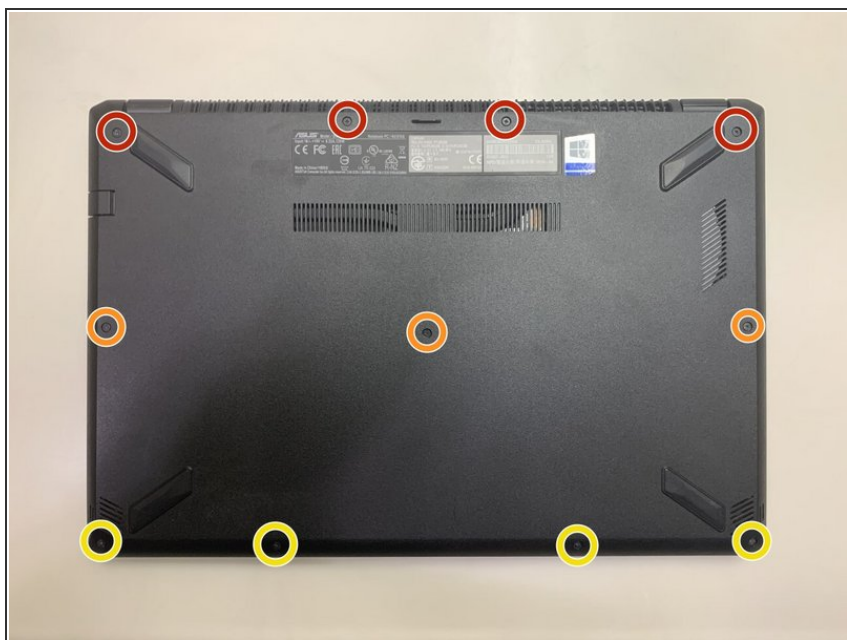



- Remove the 11 Philips #00 screws from the underside of the device.
  - Four 12mm screws.
  - Three 10mm screws.
  - Four 7mm screws.

## Step 2



- With the laptop open, use an opening tool to detach the keyboard from the laptop's body. Lift the keyboard up slowly as to not damage the ribbon cables that connect from the keyboard.


## Step 3

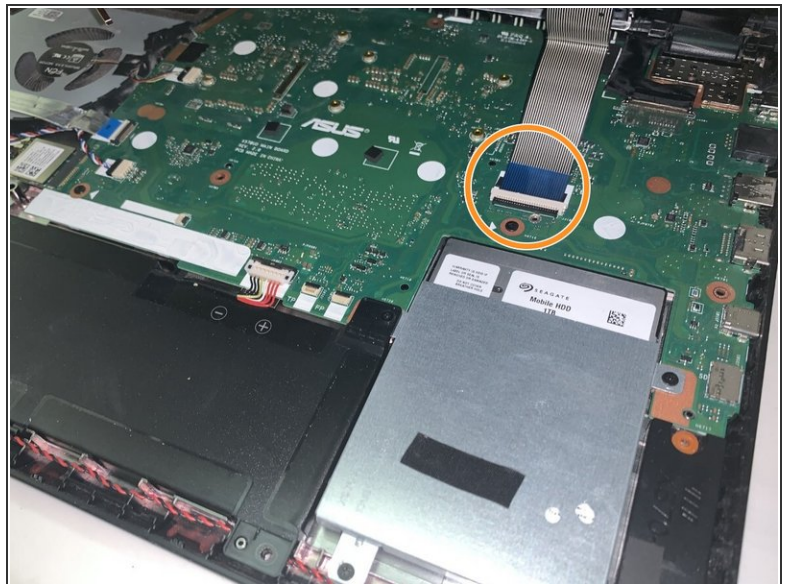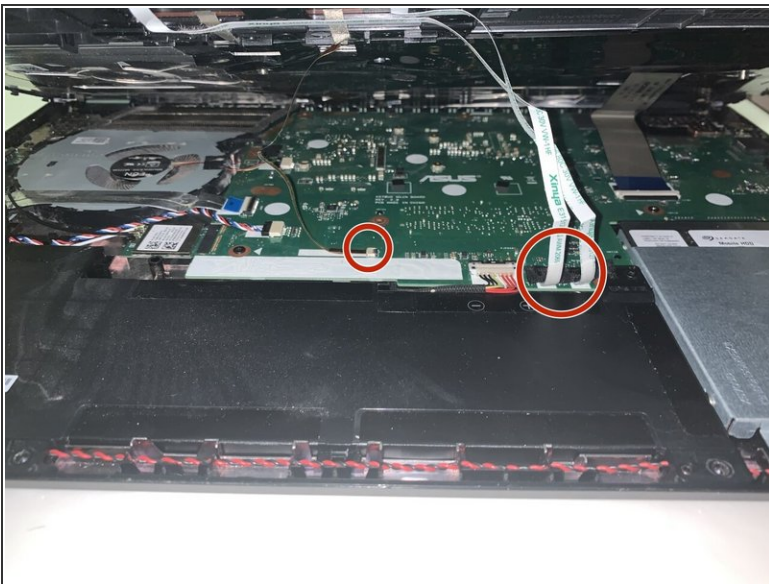

- Carefully pull out the three ribbon connectors at the front of the device.
- After the three small cables are disconnected, the keyboard can be lifted up more to allow for easier access to the larger fourth ribbon cable.




## Step 4

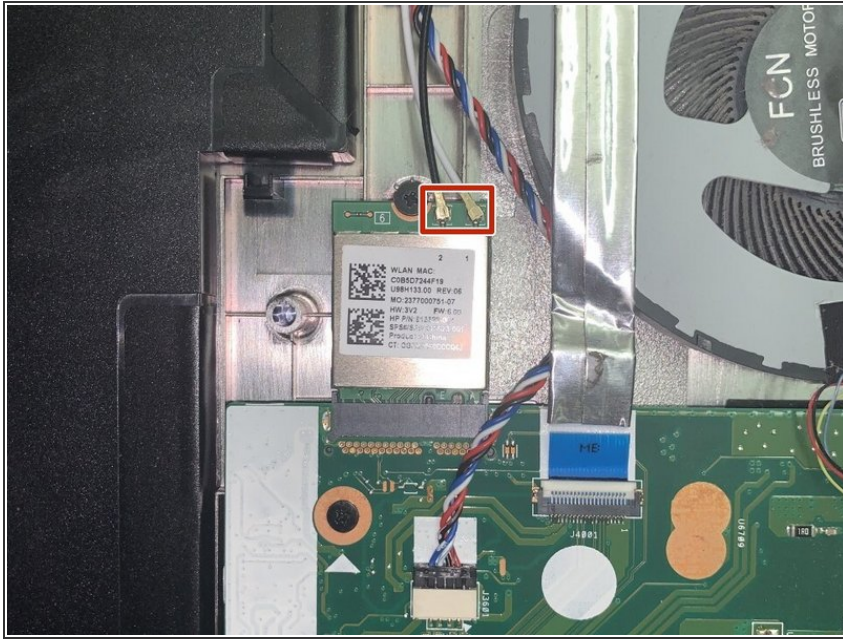


- Just below the fan is the wi-fi card. Disconnect the black and white antenna wires by applying a gentle upward force.

## Step 5

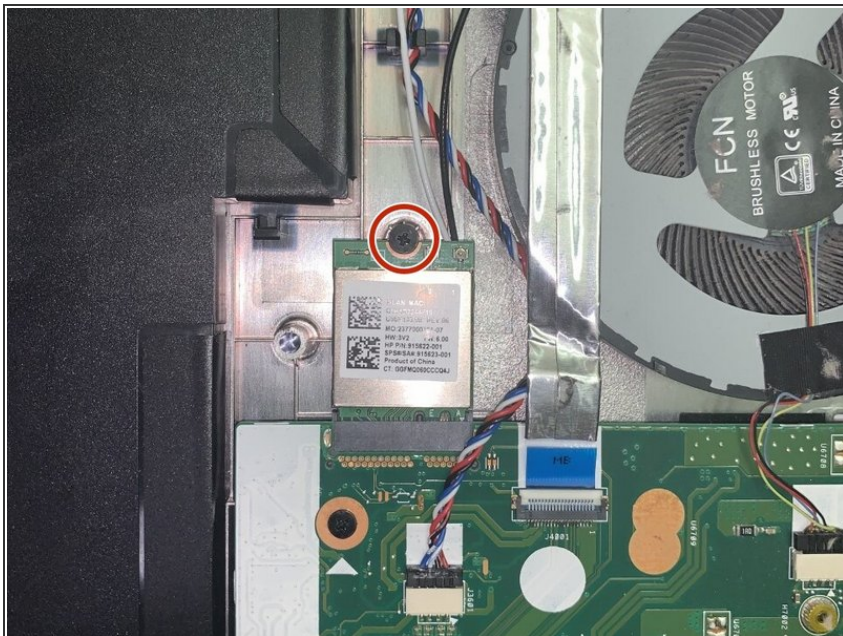

- Remove the 3mm Phillips #00 screw securing the card in place.

## Step 6

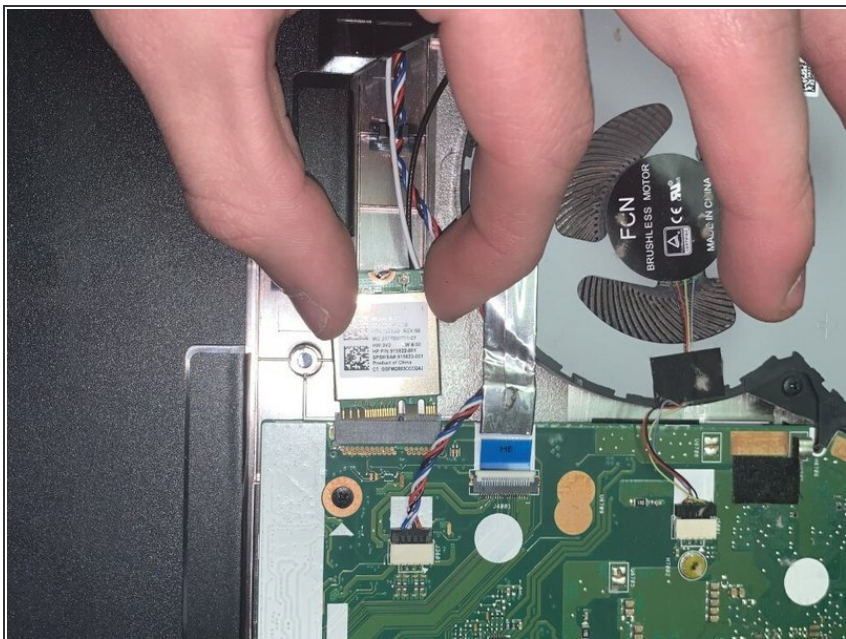

- Gently pull the card to the side and it will come out of its socket. The wi-fi card can now be replaced.

To reassemble your device, follow these instructions in reverse order.