


DualShock 4 CHU-ZCT2U Charging Assembly Replacement

Follow this guide to replace the charging...

Written By: Sam Omiotek

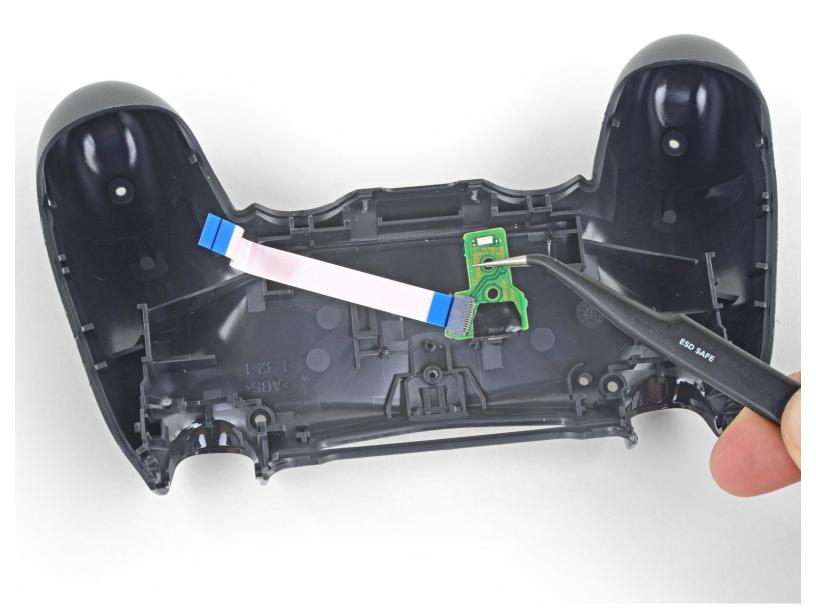

INTRODUCTION

Follow this guide to replace the charging assembly on a Sony Dualshock 4 CHU-ZCT2U PlayStation controller.

TOOLS:

- iFixit Opening Tool (1)
- Phillips #00 Screwdriver (1)
- Tweezers (1)

PARTS:

 DualShock 4 Controller Charging Assembly (JDS-030) (1)

Step 1 — Remove the rear panel screws



• Use a Phillips screwdriver to remove the four 6.4 mm-long screws from the rear panel.

Step 2 — Separate the rear panel



i Four fragile plastic clips hold the panels together. You can see their locations more clearly in this guide.

(i) The clips help hold the seams together. If you break these clips, the controller will still work.

- Insert an opening tool into the crease where the front and rear panel meet, starting from the outside edge of either handle.
- Gently pry the rear panel off of the front panel until they become partially separated.

Step 3 — Release the plastic clips



 Use the opening tool to separate the panels by releasing the plastic clips around the perimeter of the controller.

Step 4 — Remove the rear panel



• Lift the rear panel directly away from the controller.

A Do not completely remove the rear panel. It is still attached to the controller by a ribbon cable.



- Use your fingers to gently pull the ribbon cable straight out of its connector on the motherboard.
 (i) Since this cable's pull tab is too small to grab with fingers or tweezers, grab the cable itself.
 - Otherwise utilize pull tabs whenever possible.

During reassembly, grab the ribbon cable by the blue tab and gently press the cable straight into the connector. Push the blue tab rather than the ribbon cable itself.

Step 6 — Remove the light guide



• Use an opening tool or spudger to separate the white plastic bar from the rear panel.



• Remove the white plastic bar.

Step 8




- Lift the light guide away from the rear panel to remove it.
 - During reassembly, align the light guide with the rear panel using the notch near the bottom left.




- Use your fingers to press the translucent plastic piece down through the top of the controller.
- Remove the translucent plastic piece.

Step 10 — Remove the charging assembly

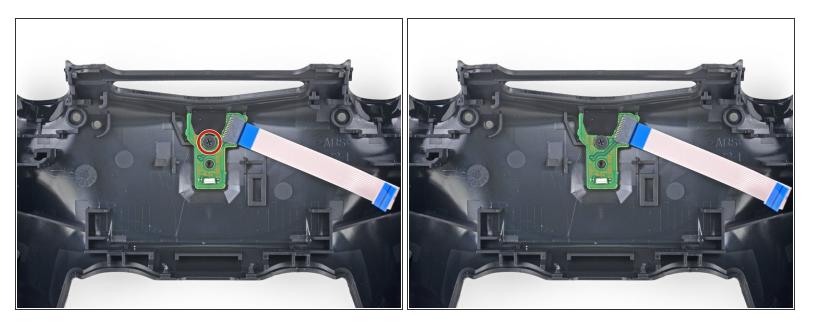


• Use a Phillips screwdriver to remove the 4.4 mm-long screw from the charging assembly.

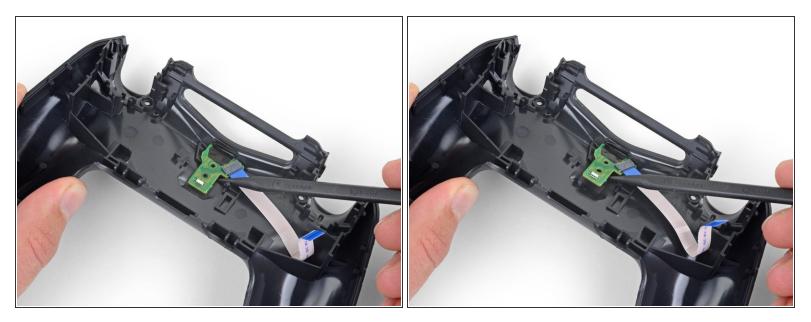

• Use the pointed end of a spudger to lift the charging assembly away from the rear panel.

Step 12

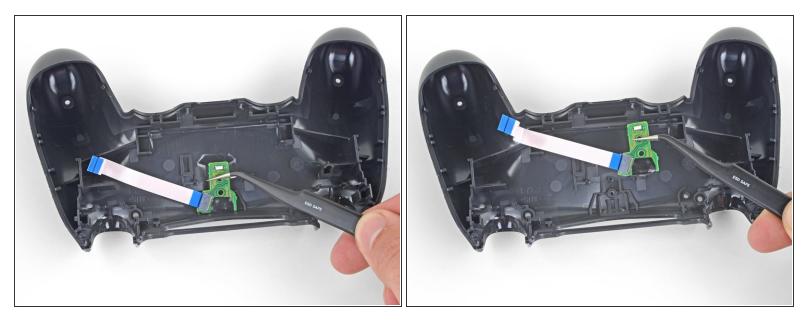

• Use your fingers or a pair of tweezers to remove the charging assembly from the rear panel.

To reassemble your device, follow the above steps in reverse order.

Take your e-waste to an <u>R2 or e-Stewards certified recycler</u>.

Repair didn't go as planned? Check out our <u>Answers community</u> for troubleshooting help.