



Anker SoundCore 2 Speaker Replacement

This guide will walk through the replacement of the speakers within the Anker SoundCore 2.

Written By: Tripp Lersch



INTRODUCTION

This is a simple guide on the replacement of the speaker within the Anker SoundCore 2. You may need to replace the speaker if it will not play at all, if there is sound delay, or if the speaker has blown out. Take a look at our [troubleshooting page](#) to see if you need to replace your speaker or not.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front Panel




- Insert a spudger between the front panel and the body of the speaker.
- Pry around the edges of the front panel with the spudger to pry it away from the speaker body.

Step 2 — Speaker



- Remove eight 10 mm screws from the speaker mount using a Phillips #0 screwdriver.
- Insert a spudger in the gap between the speaker mount and speaker body to remove the speaker mount.
- Use your hand to remove the speakers.

Step 3

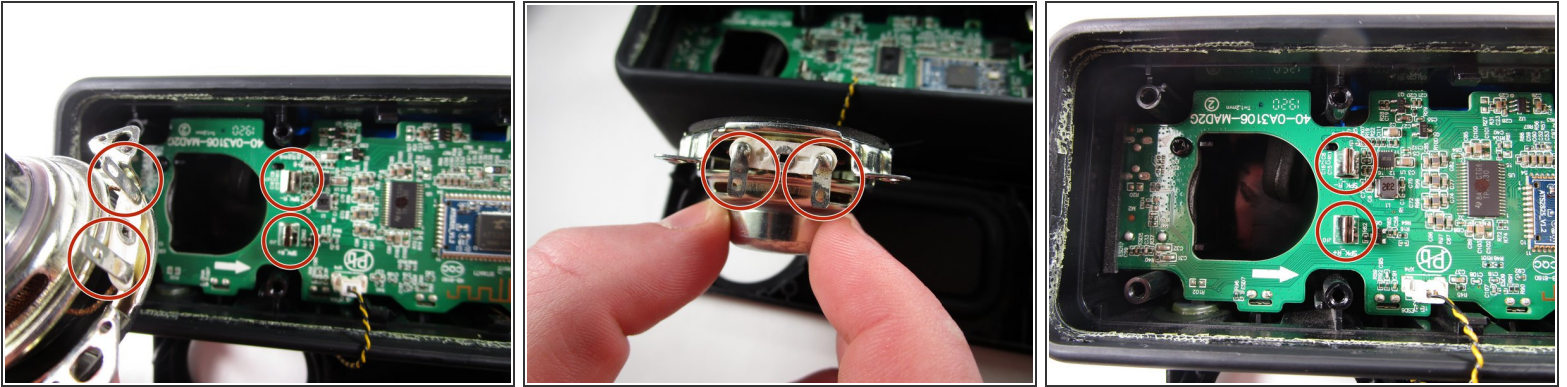

- The speakers do not use wires so when replacing the speaker, make sure you align the metal prongs with the metal clips on the motherboard.

To reassemble your device, follow these instructions in reverse order.