



# Anker SoundCore 2 Battery Replacement

This guide will walk you through how to replace the battery in the Anker SoundCore 2.

Written By: Tripp Lersch



---

## INTRODUCTION

This is a step by step guide to replace the battery in the Anker SoundCore 2.

Before replacing anything, be sure to take a look at the [troubleshooting page](#) for this device.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Front Panel



- Insert a spudger between the front panel and the body of the speaker.
- Pry around the edges of the front panel with the spudger to pry it away from the speaker body.

## Step 2 — Battery




- Remove eight 10 mm screws from the speaker mount using a Phillips #0 screwdriver.
- Insert a spudger in the gap between the speaker mount and speaker body to remove the speaker mount.
- Use your hand to remove the speakers.

## Step 3



- Remove the 10 mm screw that is holding the motherboard in place using a Phillips #0 screwdriver.
- Flip up the motherboard to expose the battery.

## Step 4


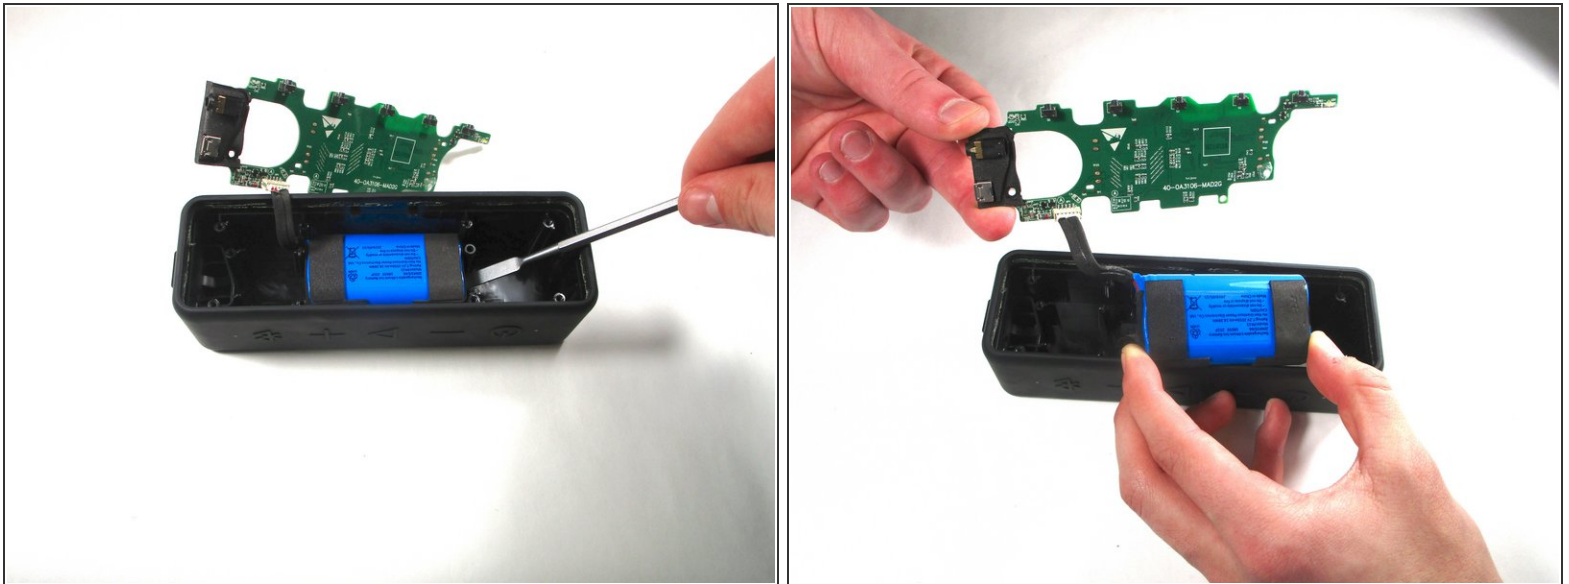


- Use a nylon spudger to remove the battery from the speaker casing.

**⚠ Caution:** Do not use metal prying tools on a battery—these can puncture an unprotected battery, potentially causing a fire.

**i** The battery is glued down so it may be difficult to remove.

## Step 5

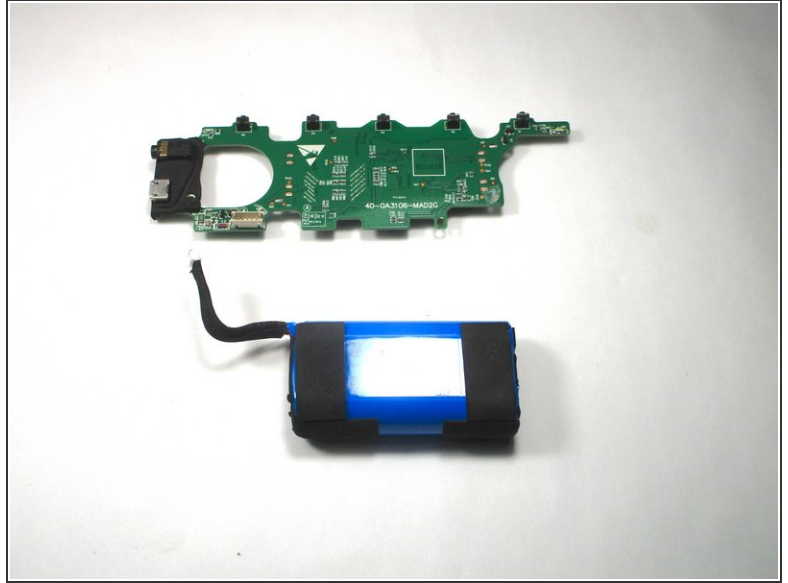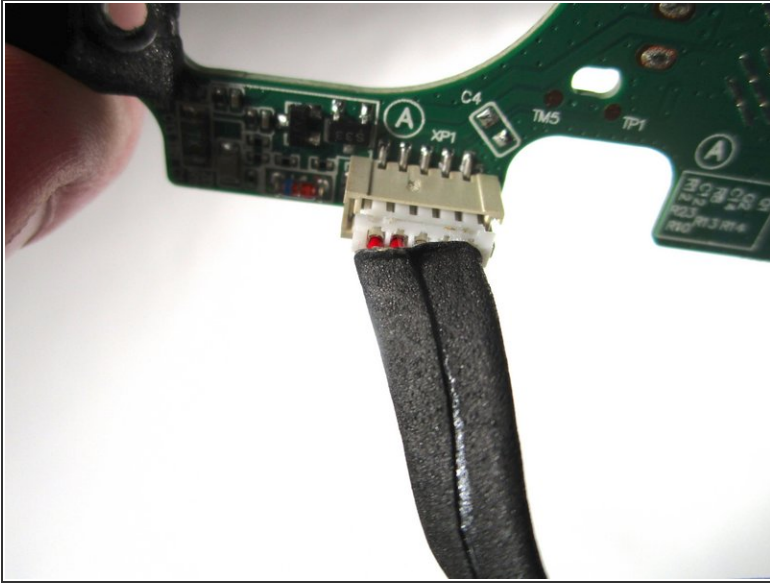

- Unplug the wire that connects the battery with the motherboard.
- ☑ When replacing the battery, plug in the new battery where the old one was plugged in.

To reassemble your device, follow these instructions in reverse order.