

指南 ID: 140457 - 草案: 2021-06-02

Alienware Area-51m battery Replacement

Alienware Area-51m

撰写者: yupeng ge



介绍

this guide will teach you how to replace the battery on your Alienware Area-51m. However, this guide is only for the person who have strong hands-on ability. If you think you cannot handle this work please find professional repair company. We are not responsible for any mistake or damage when you try to repair your computer.

指南 ID: 140457 - 草案: 2021-06-02




工具:

Phillips #0 Screwdriver (1)

步骤 1 — battery



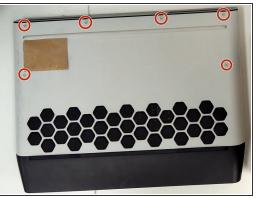




指南 ID: 140457 - 草案: 2021-06-02

- turn off the laptop and remove all the cable connect to your laptop.
- Place the back of the laptop up.
- Remove 6 M2.5X8 computer base screws on the baseplate.

步骤 2





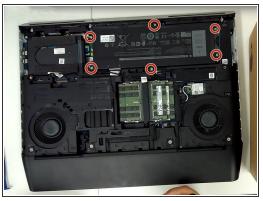

- this is how it looks like when you take off the baseplate.
- remove the cable connect with battery and main board.
- Remove all 6 M2.5X5 battery screws around the battery.

步骤 3





指南 ID: 140457 - 草案: 2021-06-02

- take off the battery and use your new battery to instead.
- this is how it looks like when you take off the battery(for some reason i take off the hard disk as well, you don't need to care about that.)

步骤 4







now you just need to put everything back. And do not forget to put the screws back also.

When reassembling your device, follow the instructions in reverse order.