



HTC Vive Head Strap Mounts Replacement

Remove and replace the head strap mounts on an HTC Vive.

Written By: Adam O'Camb



INTRODUCTION

Use this guide to remove and replace the head strap mounts on an HTC Vive.



TOOLS:

- [T5 Torx Screwdriver](#) (1)




PARTS:

- [HTC Vive Head Strap Mounts](#) (1)

Step 1 — Unscrew the head strap mounts



 Be sure to power down and disconnect your Vive before beginning.

- Use a T5 Torx driver to remove the two 12 mm-long screws securing the head strap mounts on either side of the headset.
-  The mounts may fall off when the screws are removed, so be careful not to lose any parts.

Step 2 — Remove the head strap mounts



- Remove the left head strap mount from the Vive.

Step 3 — Separate the head strap mount components



- Pull the rubberized grip off of the head strap mount.

Step 4



- Push the internal locking mechanism out of the grip.

Step 5



- Repeat the previous three steps with the right head strap mount to remove it and separate its components.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before installing.

To reassemble your device, follow the above steps in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers community](#) for troubleshooting help.