



Segway Ninebot Max Front Tire Replacement

How to replace the front tire of the Segway Ninebot Max Scooter.

Written By: Shafran Jamal



INTRODUCTION

Unfortunately, changing a flat tire on a Segway Ninebot Max is a tough task.

Electric scooters are machines, and they, like other vehicles need servicing and maintenance to ensure they run smoothly for a long time.

If you need to replace the front tire of your Segway Ninebot Max scooter follow this guide.



TOOLS:

- [15mm Socket](#) (1)
 - [Allen Key Hex Wrench Set](#) (1)
 - [5 16" x 6" slotted screwdriver](#) (1)
-

Step 1 — Front Tire



i Before beginning the guide make sure the scooter is off and placed on a stand or table for easier access to work on.

- Remove the cap and reflection tag using a slotted screwdriver.

Step 2



- Use 3 mm Allen key to loosen three hexagon screws from each side of the wheel.

Step 3



- Snap the covers away from the scooter from both sides.
- ⚠ Remove the covers slowly and steadily to avoid breaking it.

Step 4



- To detach the brake, use a 10 mm Allen wrench to remove the bolt from the tire that is attached with the brake.

Step 5



- Use a 15 mm socket wrench to remove 15mm bolt from the tire of the scooter on both sides of the front wheel.

Step 6



- Pull down the tire and remove it from the frame.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-07-22 09:31:43 PM (MST).

