



Anker SoundCore 2 Front Panel Replacement

How to replace the front panel on an Anker SoundCore 2 speaker.

Written By: Kristen Gismondi





TOOLS:

- [Spudger](#) (1)
-

Step 1 — Front Panel



- Insert a spudger between the front panel and the body of the speaker.
- Pry around the edges of the front panel with the spudger to pry it away from the speaker body.

To reassemble your device, follow these instructions in reverse order.