


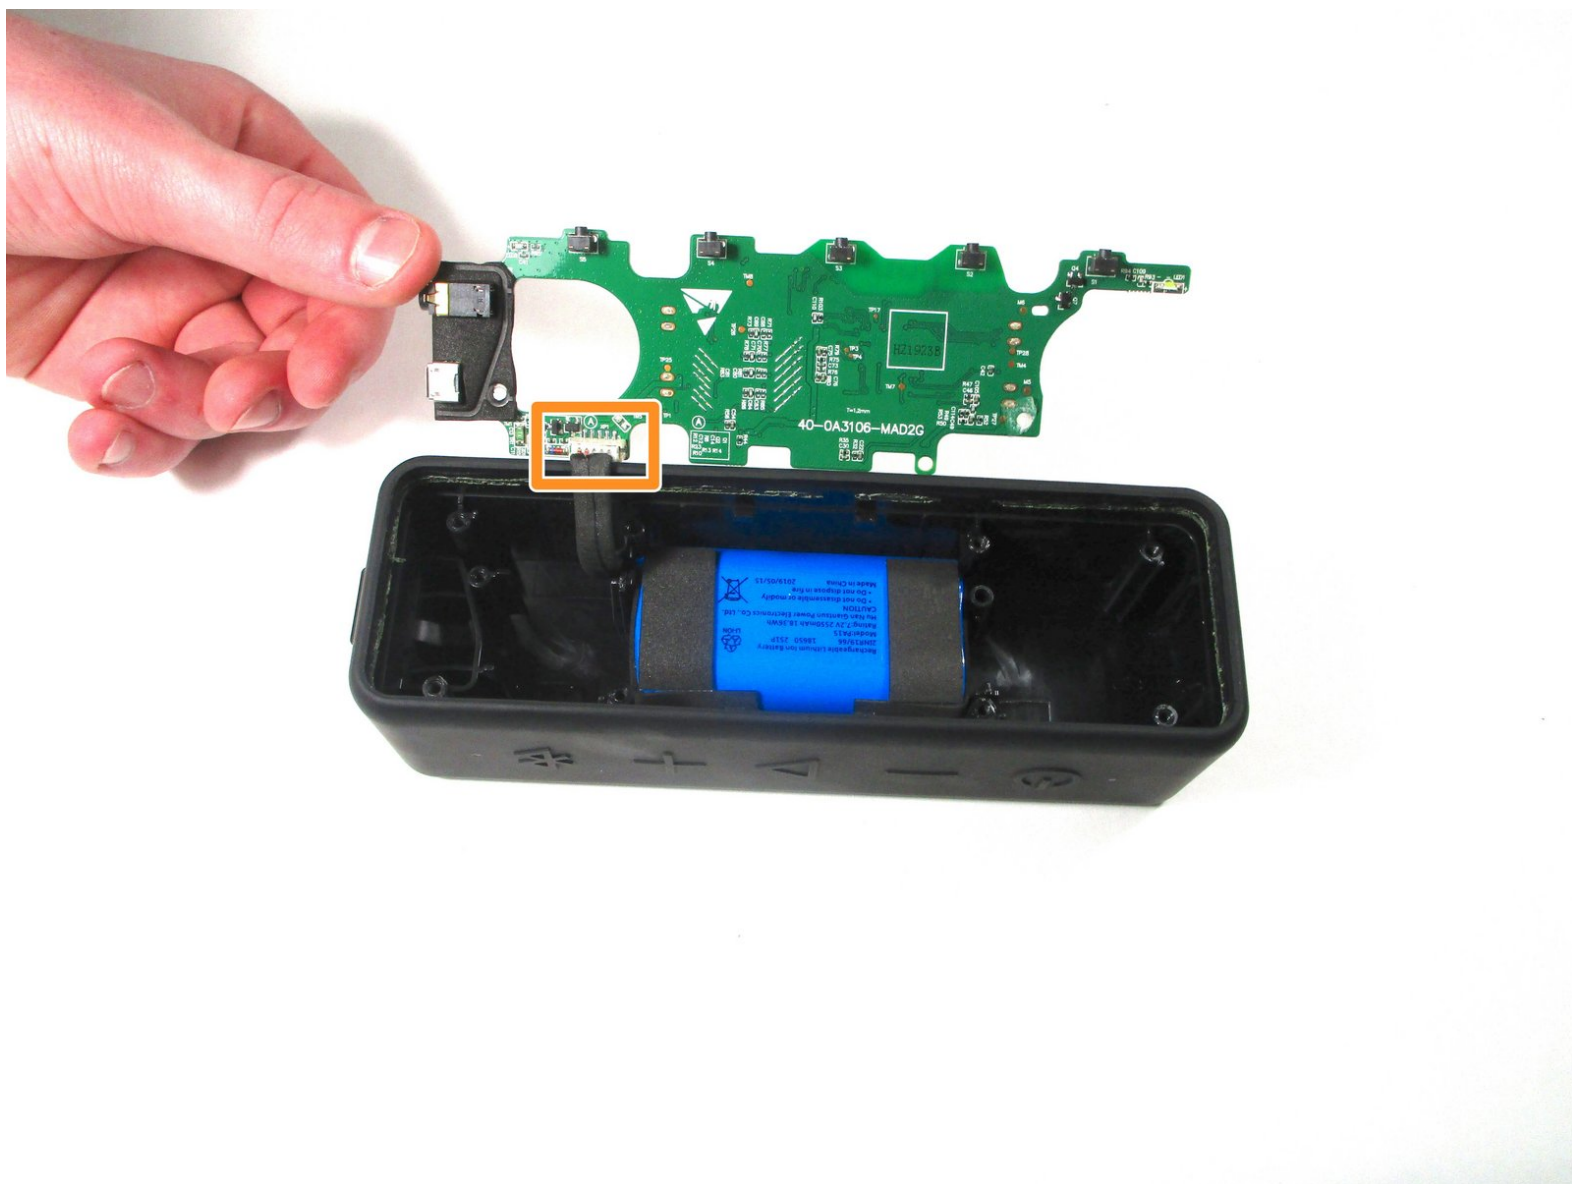

Anker SoundCore 2 Motherboard Replacement

How to replace the motherboard in an Anker SoundCore 2 speaker.

Written By: Kristen Gismondi





TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Insert a spudger between the front panel and the body of the speaker.
- Pry around the edges of the front panel with the spudger to pry it away from the speaker body.

Step 2 — Motherboard



- Remove eight 10 mm screws from the speaker mount using a Phillips #0 screwdriver.
- Insert a spudger in the gap between the speaker mount and speaker body to remove the speaker mount.
- Use your hand to remove the speakers.

Step 3



- Remove the 10 mm screw that is holding the motherboard in place using a Phillips #0 screwdriver.
- Flip up the motherboard and disconnect the cord that connects the motherboard and the battery.

To reassemble your device, follow these instructions in reverse order.