



TV Stand Removal

In this guide, you will learn how to remove the...

Written By: Richdave



INTRODUCTION

In this guide, you will learn how to remove the stand for a Samsung C530 Series 5 LCD. The guide is very simple as there are only four screws to remove from the back of the TV itself

TOOLS:

Phillips #2 Screwdriver (1)

Tweezers (1)

Step 1 — The stand



- Place the TV face down on a clean flat surface with the stand hanging over one edge.
- Remove the 4 screws securing the stand to the TV.
- ① Use a pair of [tweezers](#) to remove screws from their recessed holes to free up the stand (A small pickup magnet works well also, if available).
- Holding the TV so it does not slide off the work surface, pull the stand straight out of the TV.

To reassemble your device, follow these instructions in reverse order.