



# How to Fix a Loose Turret on a Sony Cyber-shot DSC-F828

How to fix a loose turret on a Sony Cyber-shot DSC-F828 camera.

Written By: Michael Ventura



---

## INTRODUCTION

Have a loose turret on your Sony Cyber-shot DSC-F828 camera? This guide will show you how to successfully repair that turret so your photo-taking skills can return to optimum performance. A shock-free mat or a grounding bracelet is also recommended when fixing this particular device.

Be sure to leave the lens cap on to avoid scratching the lens.



### TOOLS:

- [J00 JIS Screwdriver](#) (1)
-

## Step 1 — How to Fix a Loose Turret on a Sony Cyber-shot DSC-F828



- Slide the button back to open the battery cover.

## Step 2



- Pull back on the tab to release the battery.
- Pull the battery out, then close the lid.



### Step 3



- Remove the screw on the back of the turret with a JIS #00 screwdriver.

### Step 4




- Remove two screws from each side of the camera (four in total) using a JIS #00 screwdriver.

## Step 5



- Remove the screw on the bottom of the turret using a JIS #00 screwdriver.


## Step 6

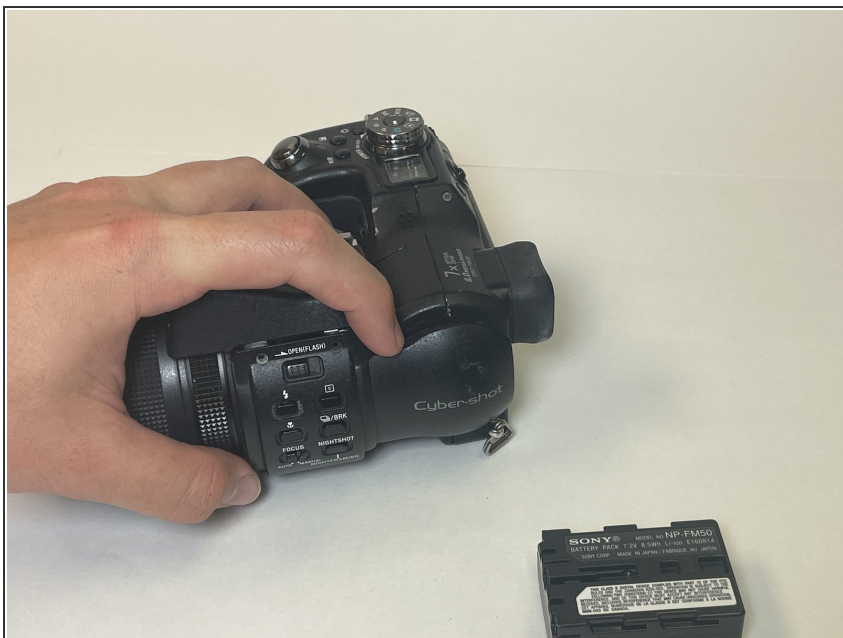

- Carefully pull the face plate off and lay it down.

⚠ There is a cable attached to the plate that should not be removed.

## Step 7

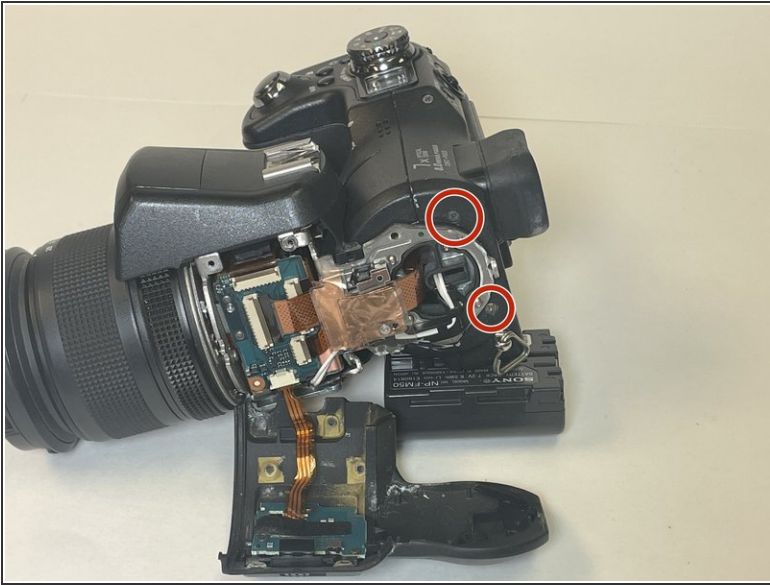

- Tighten the two screws using a JIS #00 screwdriver.

To reassemble your device, follow these instructions in reverse order.