



Anker Soundcore Flare Mini Bottom Cover Replacement

This guide will show you how to remove the bottom rubber and plastic covering for the Anker Soundcore Flare Mini A3167

Written By: Ethan Holland



INTRODUCTION

In order to replace any component of the Anker Soundcore Flare Mini speaker, the rubber and plastic cover on the bottom of the speaker needs to be removed.

These parts protect the internal and electrical components of the speaker from the elements such as water and dirt. It also prevents internal damage or the loss of loose parts.

Before starting the replacement, make sure the speaker is turned off and is unplugged from the power cord!




TOOLS:

- [Precision Tweezers Set](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Bottom Cover



 The rubber cover of the speaker is glued down.

- Use precision tweezers to peel the rubber cover off of the bottom of the speaker.

Step 2



- Remove six 10 mm screws holding the plastic cover in place using a Phillips #000 screwdriver.
- Use your hand to pull the plastic cover off the bottom of the speaker.

To reassemble your device, follow these instructions in reverse order.