



# Bush Pump Riser Main Slider Replacement

Replace the riser main slider in a Bush pump.

Written By: Jake Devincenzi



---

## INTRODUCTION


Follow this guide to remove the riser main slider in order to repair or replace it.

---

### TOOLS:

- [Pipe Wrench](#) (1)
-

## Step 1 — Head and Handle

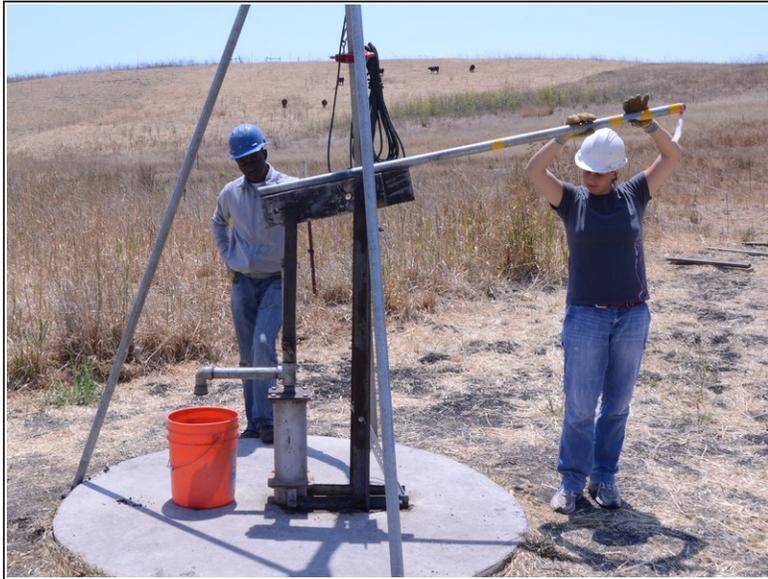

- Test pump performance by pumping 40 strokes.
- ☑ An effective pump should return at least 10 liters.

## Step 2





- Remove the two pins connecting the handle to the slider.

### Step 3



- Pull the two lever arms away from the slider.

### Step 4

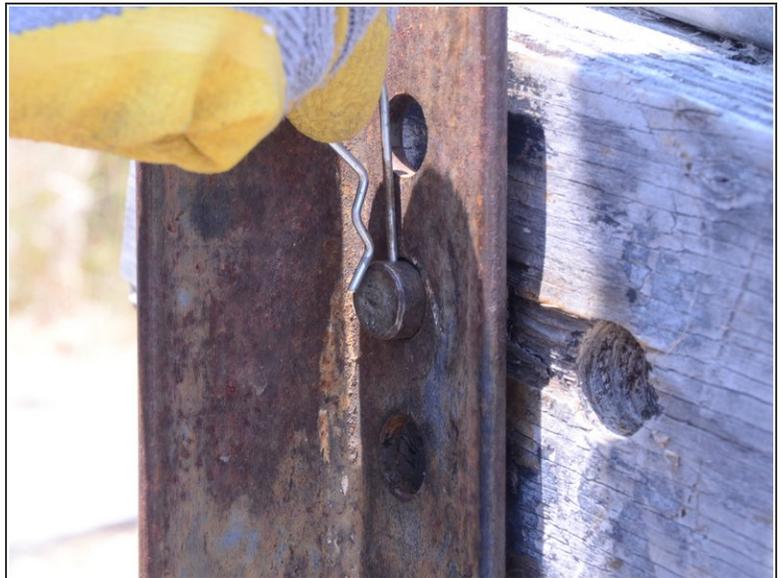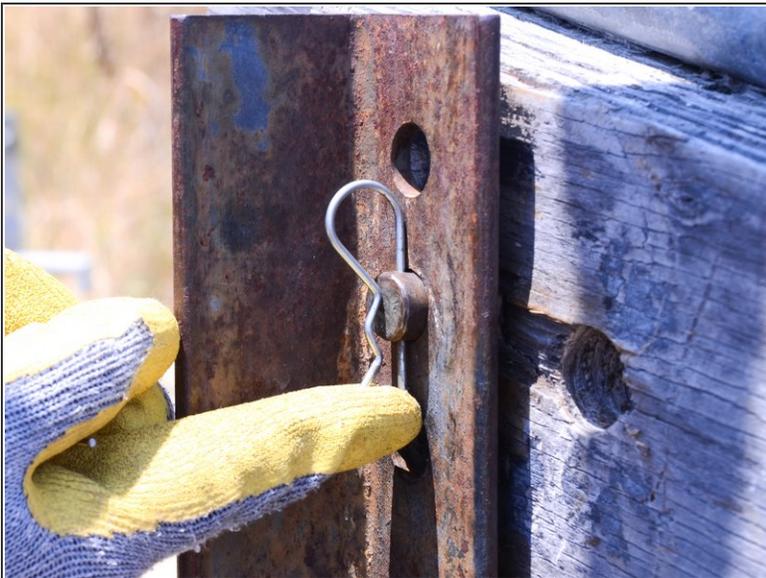

- Lift the two pins attaching the pump frame to the head and handle up, off of the pump frame.

## Step 5



- ⓘ Throughout this step, make sure you support the handle and head with at least three hands.
  - Slide the bearing rod out of the head.
- ⓘ Inspect the bearing rod and head for any wear or tear.

## Step 6



- Remove the head and handle, and place them on a clean surface to prevent contamination.

## Step 7 — Riser Main Slider



- Firmly lift the riser main slider with two hands.

⚠ Use caution not to drop the riser main, as this can damage the pump cylinder.

## Step 8



- Use a pipe wrench to fully loosen the above grade riser pipe.

## Step 9



- Lift the slider and riser main pipe.
- Place a pump rod clamp around the rod, and tighten it securely against the pump rod.
- Carefully lower the riser main and slider to allow it to rest on the rod clamp.

## Step 10



- Loosen and remove both the pump rod jam nut and pump rod nut on the top of the slider.

## Step 11



- Remove the riser main slider, and inspect it for wear and tear.
- Set the slider in a sanitary place to prevent contamination.

To reassemble your device, follow these instructions in reverse order.