




Toshiba Satellite A65-S126 Speaker Replacement

Replace broken speakers on a Toshiba A65-S126.

Written By: Cole Uhland

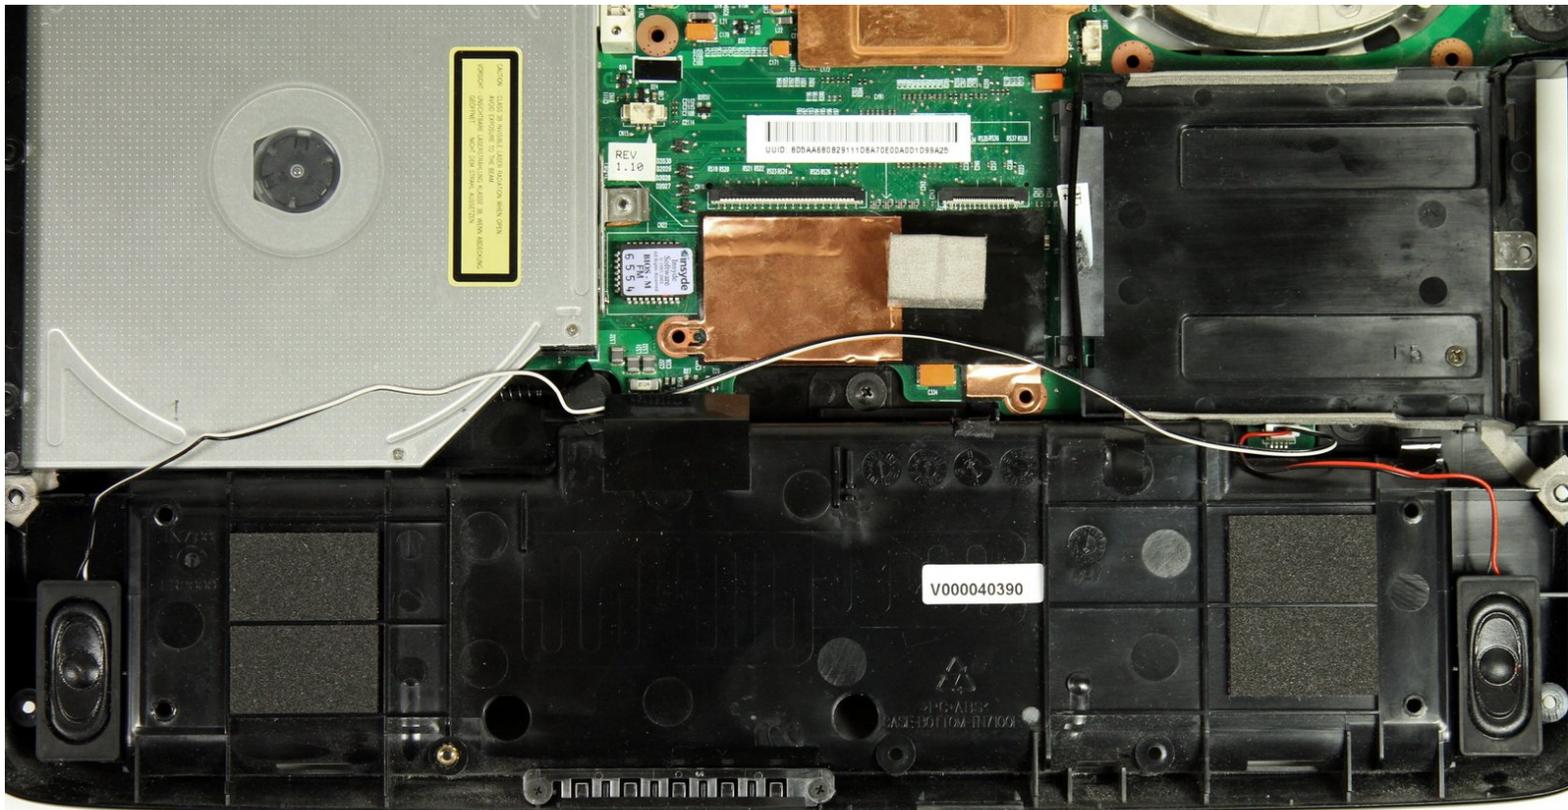

INTRODUCTION

This is a step by step guide of how to replace the speakers in case of malfunction or upgrade.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Flip the laptop over so the bottom is facing up.
- Slide each of the three tabs on the bottom half of the assembly into the unlocked position.

Step 2



- Gently lift the battery out of the computer.

Step 3 — Upper Assembly



- Remove the single 3mm Phillips #00 screw that secures the wireless card cover.

Step 4



- Remove the WIFI module cover. It will pull right off.

Step 5



- Unplug the white and black wires from the WiFi module.

Step 6



- Remove the twelve 8mm button head Phillips #00 B8 screws.
- Remove the two 14 mm button head Phillips #00 B14 screws.
- Remove the two 10 mm Phillips #00 battery compartment screws.
- Remove the two 8 mm Phillips #00 screws.

Step 7





- Remove the seven 4mm flat Phillips #00 screws.
- Remove the seven 20mm button head Phillips #00 screws.

Step 8




- Use the plastic opening tool to pry the two halves apart.

Step 9 — Speaker

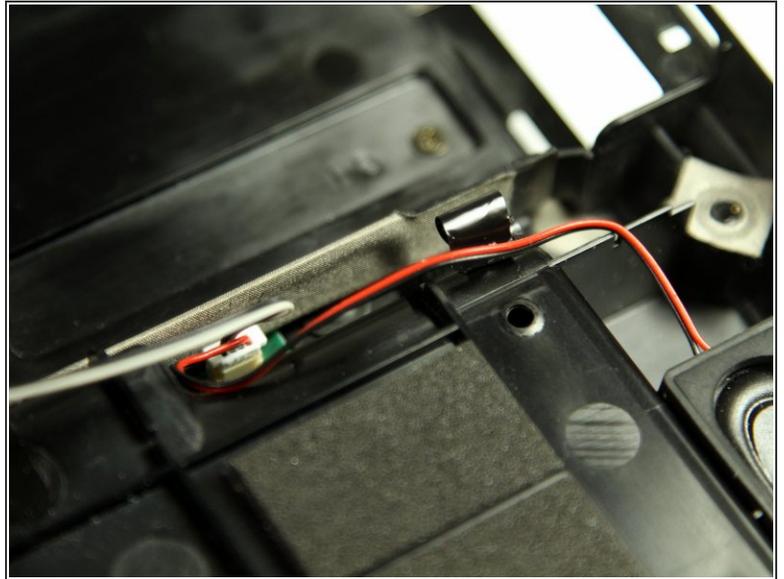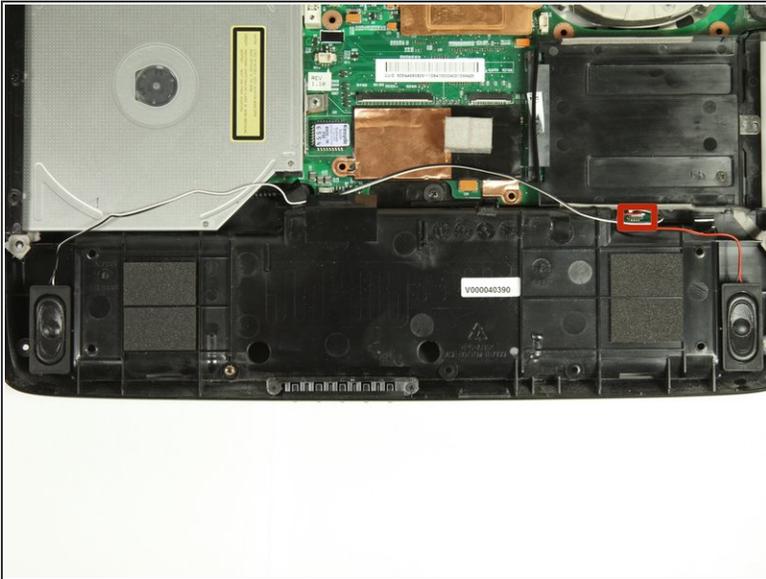


- Locate the plug for the speaker wires on the bottom of the laptop.

Step 10

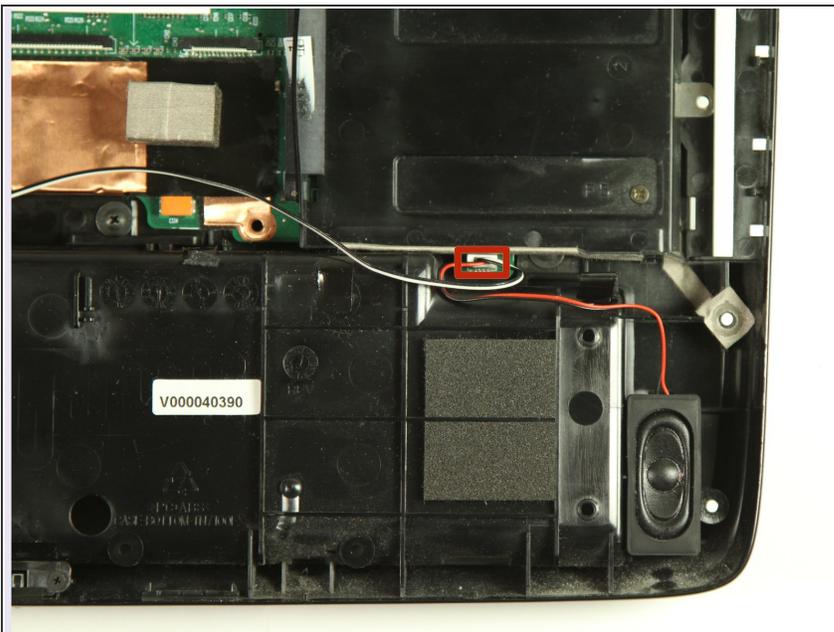

- Unplug the speaker wire connector.

Step 11

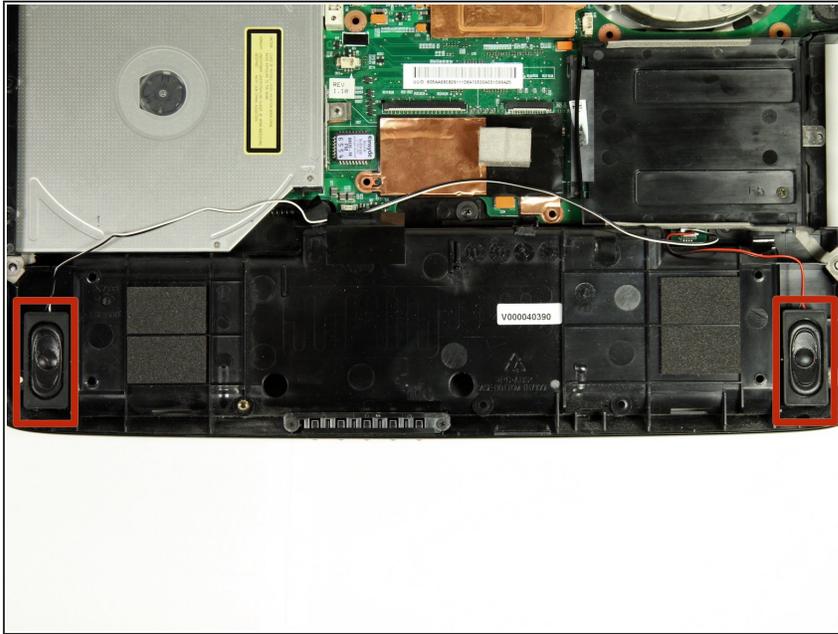

- Remove the speakers by sliding them straight up. They should slide out with ease.

To reassemble your device, follow these instructions in reverse order.