



# Velocity NoteMagix M10 A82 DDR RAM

## Replacement

There are two screws holding in a plate that covers the RAM. Removing the screws and the plate will yield access to the RAM.

Written By: Sam Middleton



---

## INTRODUCTION

This guide will show how to safely remove the RAM from the NoteMagix M10 A82 netbook.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery




- Place the notebook on the table, with the battery facing away from you.
- Slide the switch from "lock" to "unlock" with your right hand on the right side of the computer.
- Maintain holding the right switch in the "unlock" position.
- Use your left hand to slide the left switch from "lock" to "unlock".

## Step 2



- Maintain both left and right switches in the "unlock" position.
- Use your forefingers to push the battery out of the computer.

## Step 3 — RAM

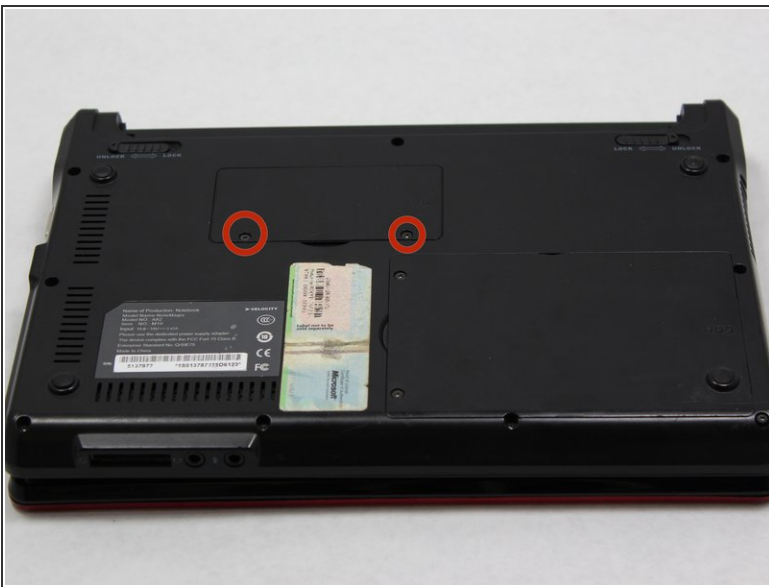

- Locate the DDR panel and unscrew the two 3.65mm Phillips #1 screws holding it in place.
- Use the spudger to lift the DDR panel off.



## Step 4



- Push in the tabs on the sides that contain the RAM.
- Gently raise the RAM up to a 45 degree angle and gently pull the RAM towards you.

To reassemble your device, follow these instructions in reverse order.