




Sidekick II Battery Replacement

Written By: michael albaum

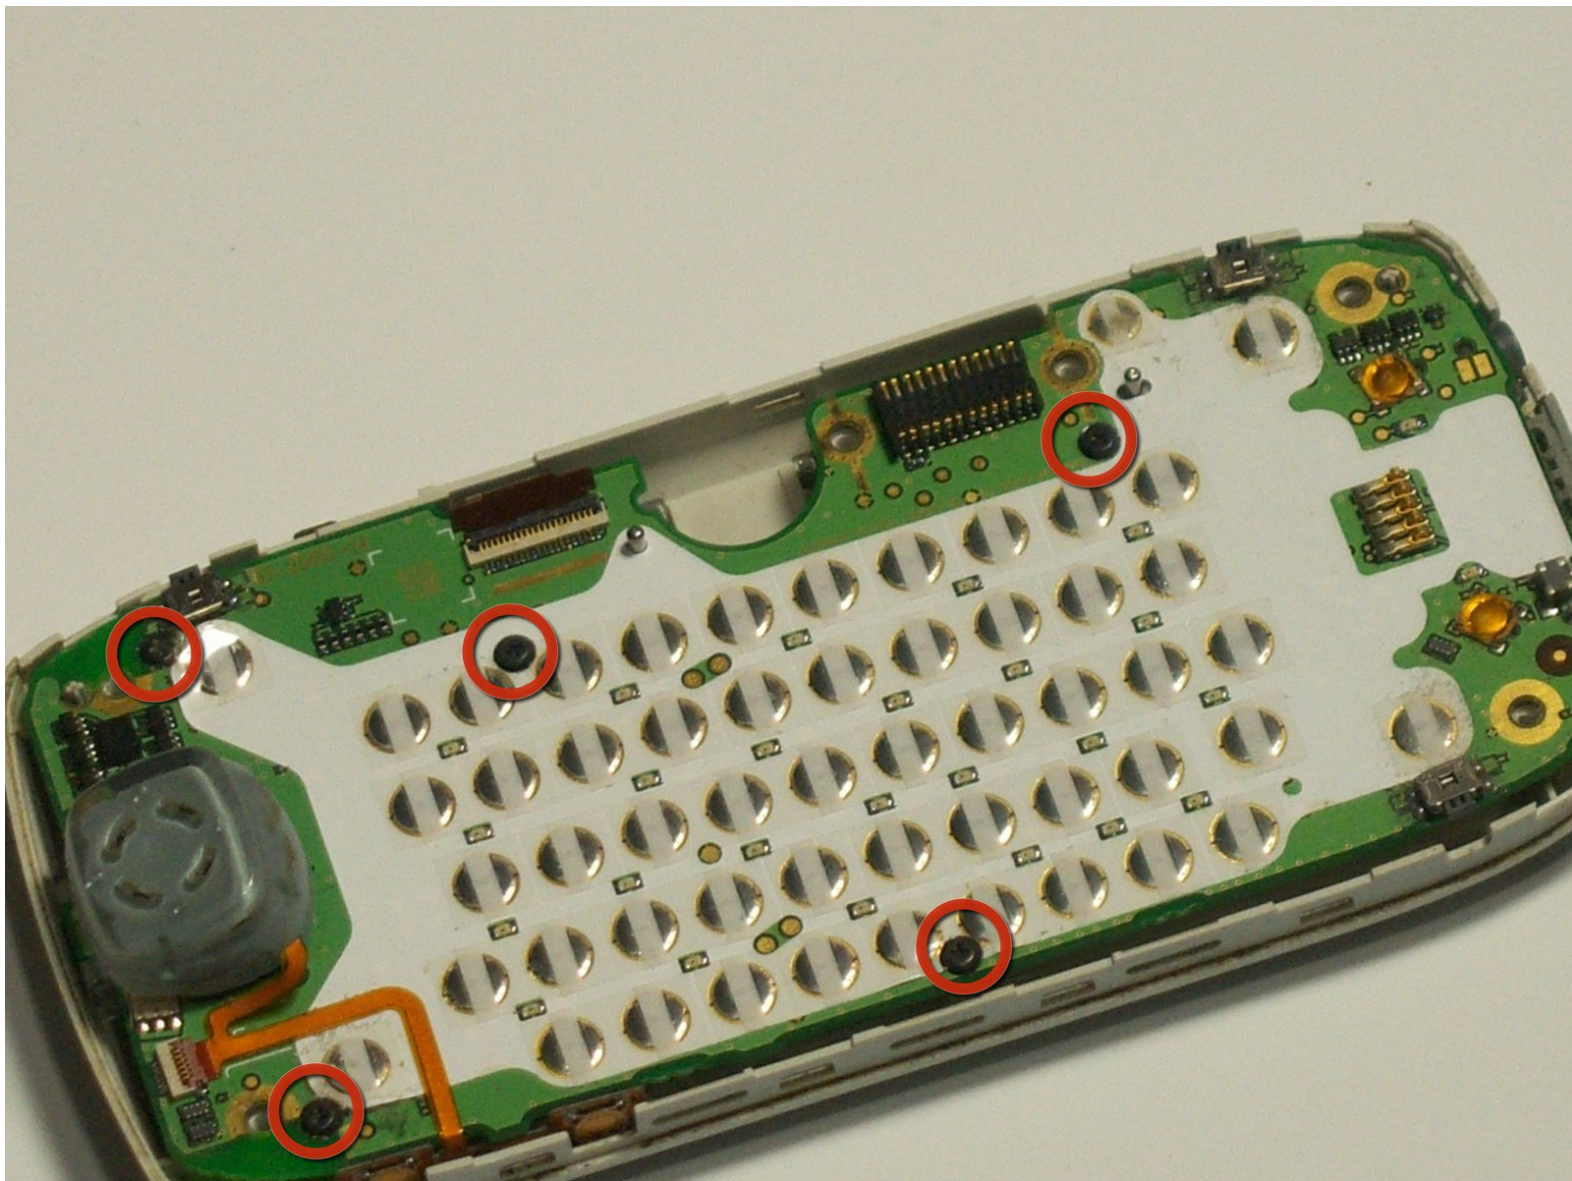

INTRODUCTION

Removing the battery.



TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Outer Casing



- Use the plastic opening tool to remove the 4 buttons on each corner of the Sidekick.
- Gently pry open button and remove button.
- Do this for each of the 3 buttons remaining.

Step 2



- The bumpers on the top and bottom of the phone can be removed by simply "peeling" them off.

Step 3



- Use the T6 Torx Screwdriver to remove the 4 screws that are underneath the 4 buttons you removed in step one.


Step 4



- Flip the screen up halfway (90 degrees), to reveal the 2 screws above the right side of the keyboard.
- Use the Torx 6 screwdriver to remove these 2 screws.


⚠ Be careful in handling the phone after removing the screws, because the two main bodies of the phone are no longer attached.

Step 5

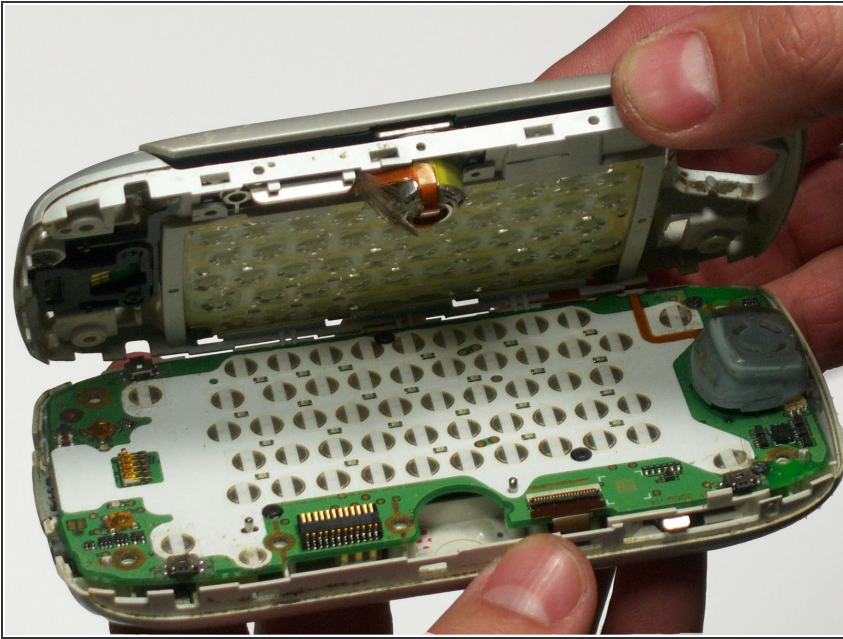


- After removing the 6 screws and both bumpers, the phone will be easy to separate into the two main bodies.
- You can use your hands to simply pull apart the top casing from the bottom casing.

Step 6 — Battery

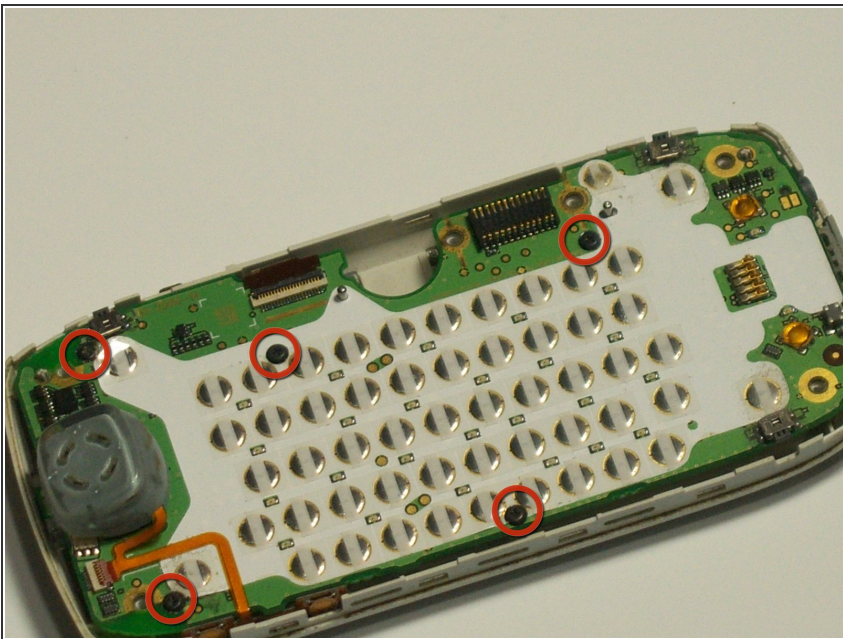


- Remove the 5 screws using the Phillips #00 Screwdriver.

Step 7

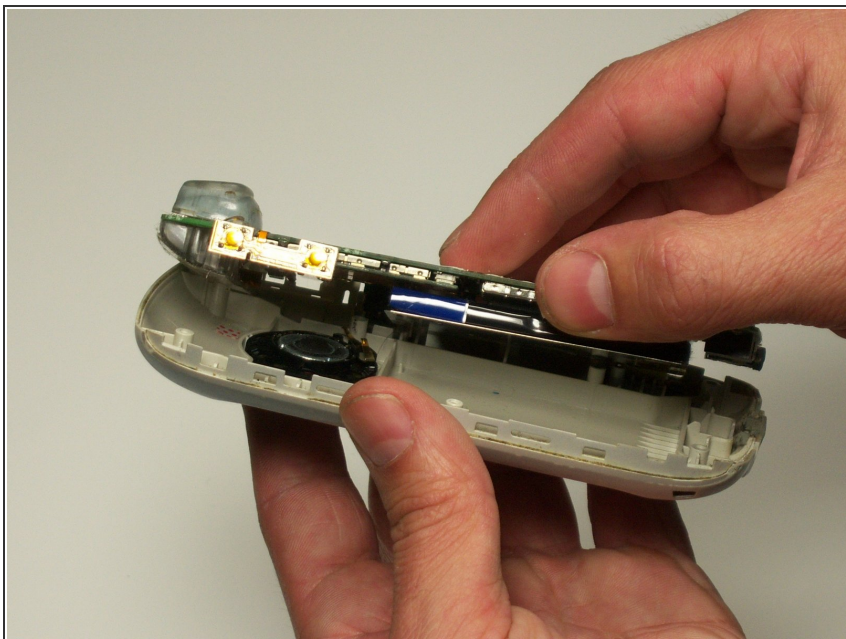


- Separate control board from housing using your fingers.

Step 8

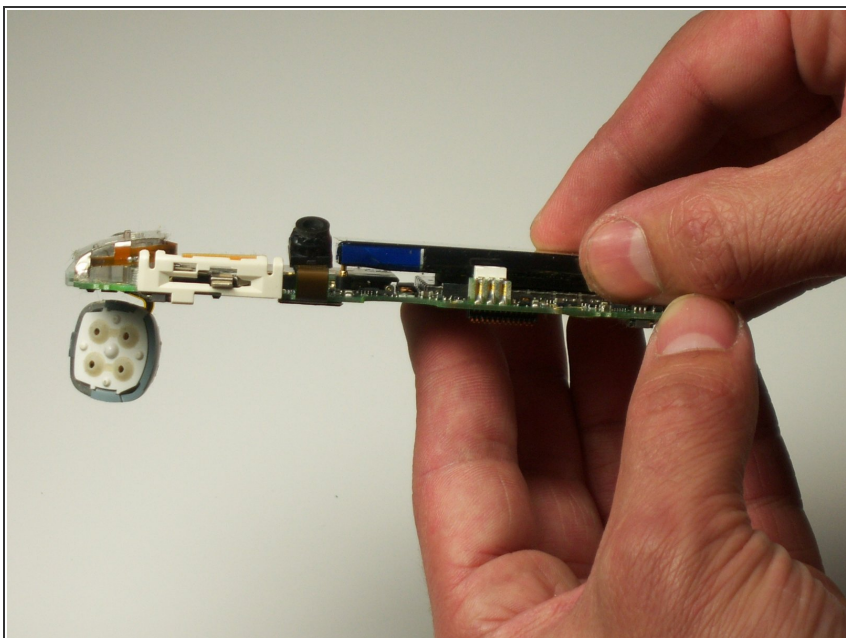

- Lightly pry upward on battery and back plate, and remove.

 Do not use metal tool to pry. Use your fingers.