



Sidekick II LCD Screen Replacement

Written By: michael albaum



INTRODUCTION

Taking out the LCD screen.



TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Outer Casing



- Use the plastic opening tool to remove the 4 buttons on each corner of the Sidekick.
- Gently pry open button and remove button.
- Do this for each of the 3 buttons remaining.

Step 2



- The bumpers on the top and bottom of the phone can be removed by simply "peeling" them off.

Step 3



- Use the T6 Torx Screwdriver to remove the 4 screws that are underneath the 4 buttons you removed in step one.


Step 4



- Flip the screen up halfway (90 degrees), to reveal the 2 screws above the right side of the keyboard.
- Use the Torx 6 screwdriver to remove these 2 screws.

⚠ Be careful in handling the phone after removing the screws, because the two main bodies of the phone are no longer attached.

Step 5

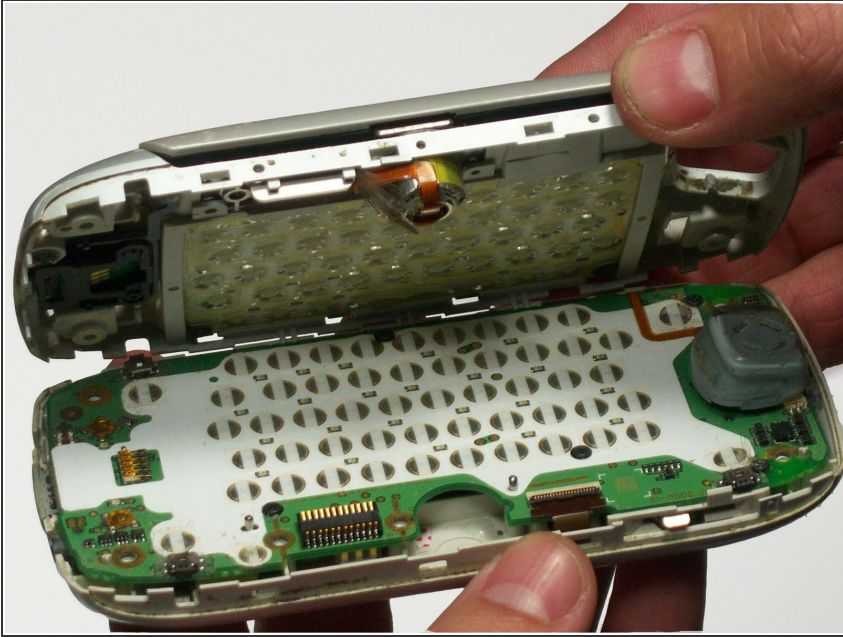

- After removing the 6 screws and both bumpers, the phone will be easy to separate into the two main bodies.
- You can use your hands to simply pull apart the top casing from the bottom casing.

Step 6 — LCD Screen




- Flip the screen to its up position.
- Remove screen from keyboard.

Step 7





- Remove 4 screws from back of screen.

Step 8

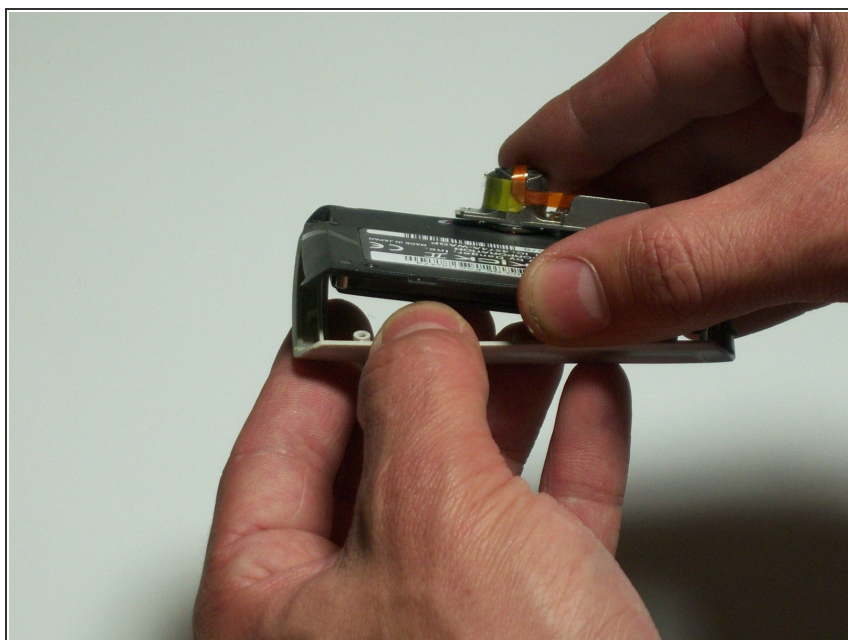

- Separate screen from housing with your fingers.

Step 9

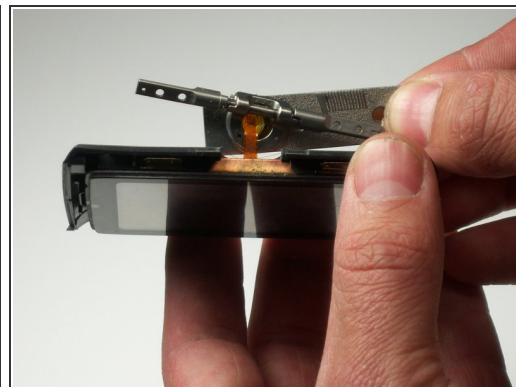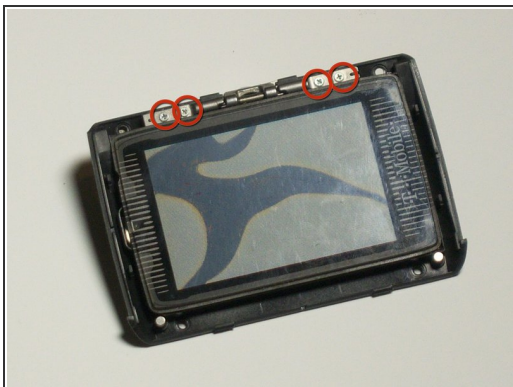

- Remove 4 screws

i Pay attention to the orientation of the screen on the backing because it is difficult to reassemble.

Step 10



- Remove LCD protective cover with your fingers.