


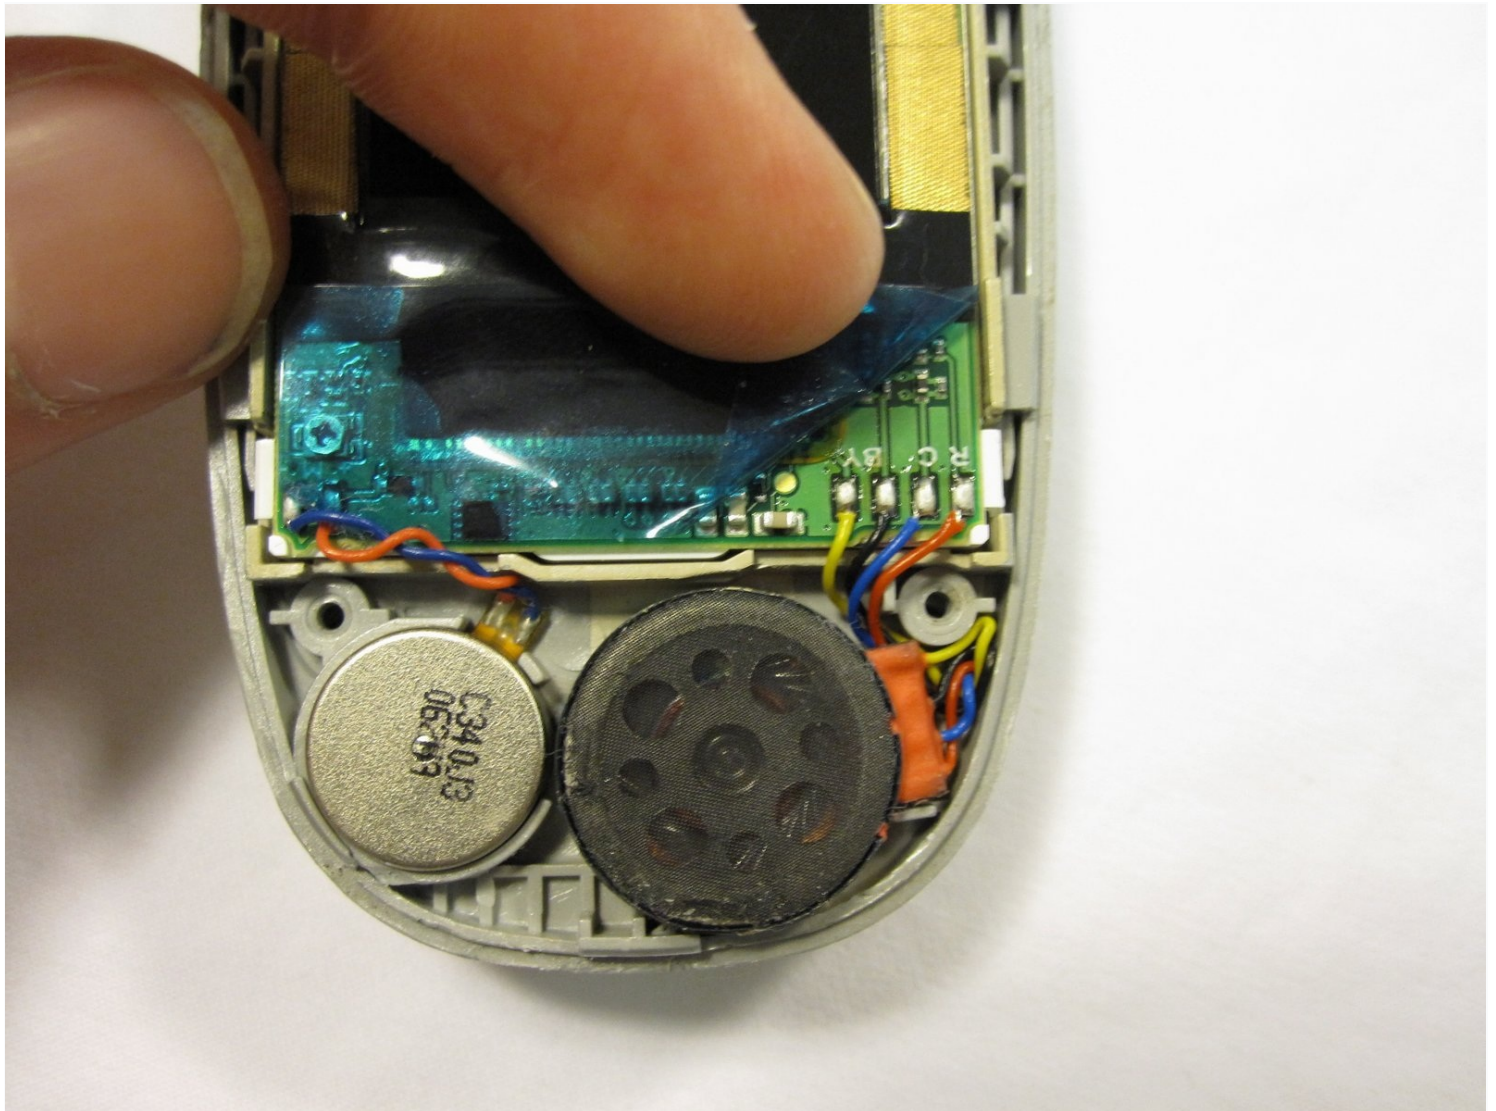

LG VX5200 LCD Screen Replacement

If the LCD screen on your LG VX5200 is damaged...

Written By: Douglas Blaalid



INTRODUCTION

If the LCD screen on your LG VX5200 is damaged or is non-functional, use this guide to replace the LCD screen.

The LCD screen is the visual display of the device. If the screen has [physical damage, is not displaying anything, or is illegible](#), the screen may need to be replaced.

Before committing to replacing the LCD screen, [reset your phone](#) and see if the LCD screen is displaying properly.

Before disassembly, make sure you completely turn off the phone.

TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Tweezers](#) (1)

[Push Pin](#) (1)

Step 1 — Battery



- Turn the phone on its back.

Step 2



- Orient the phone as shown.
- Remove the battery cover by pushing upward with your thumb.

Step 3




- Place your fingernail at the top of the battery and pry the battery out towards you.

Step 4 — Face Plate



- Flip the phone open.
- Remove the four rubber plugs, located at the corners of the LCD screen, with a push-pin.
- Use a Phillips #00 screwdriver to remove the four screws located underneath the rubber plugs.

Step 5

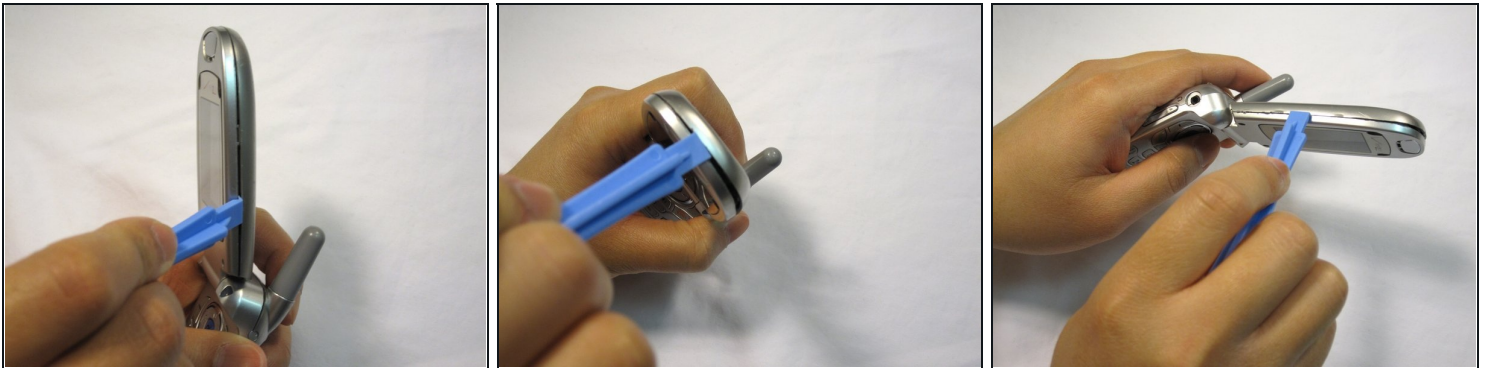



- Insert the opening tool in the seam of the top portion of the flip phone.
- Gently pry the seam open.
- Move the opening tool around the perimeter of the seam and gently take the front LCD face plate out.

Step 6






- Close the flip phone.
- Hold the base of the phone and gently remove the faceplate.
- Place the phone and the faceplate on a clean, flat surface.

Step 7 — LCD Screen

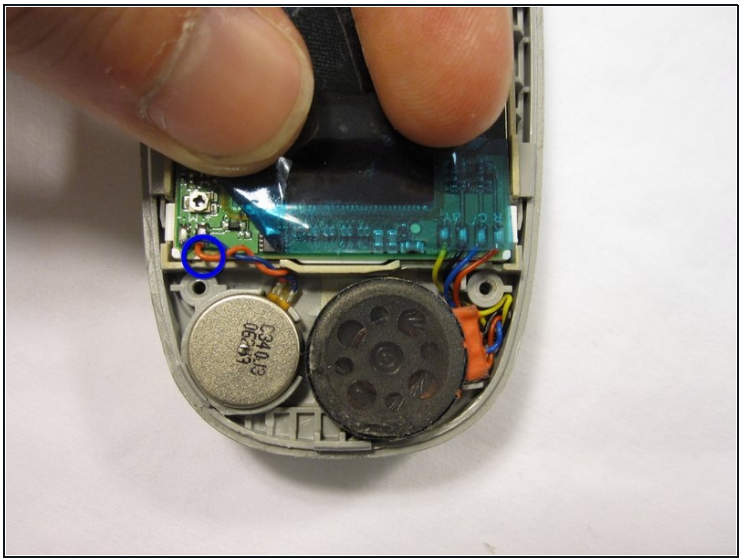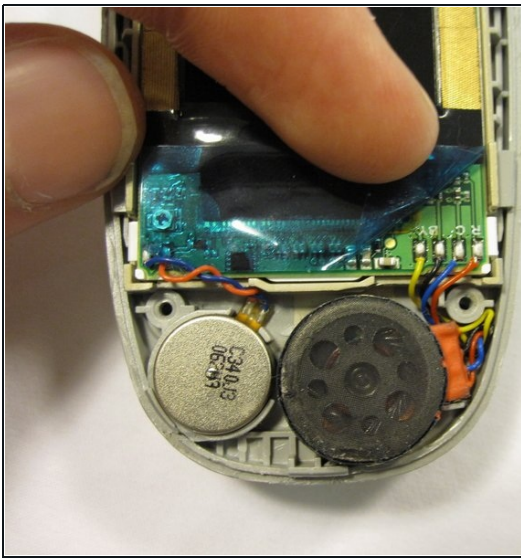


⚠ Try not to move the thin component wires as they will bend and break very easily.

Step 8

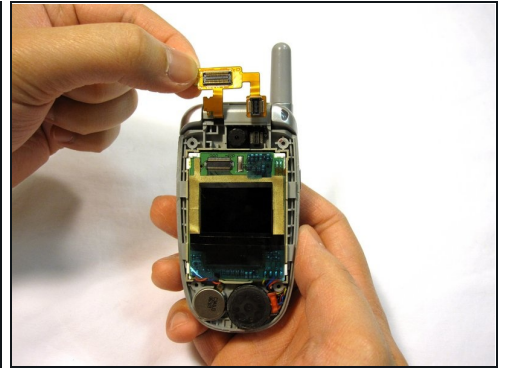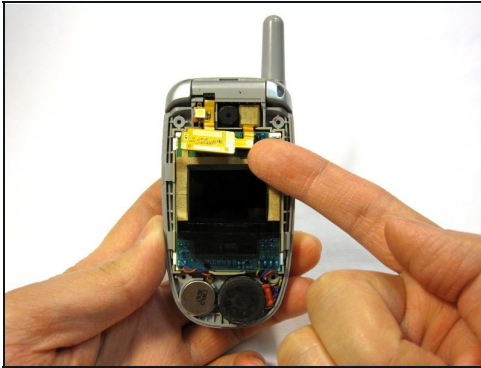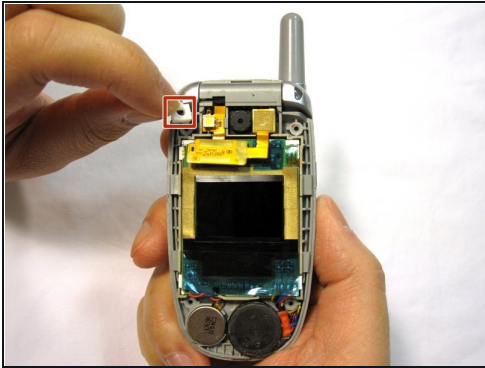


- Remove the white stopper from the camera light located above the gold connector.
- Lift the gold connector up with your finger to detach it.

Step 9

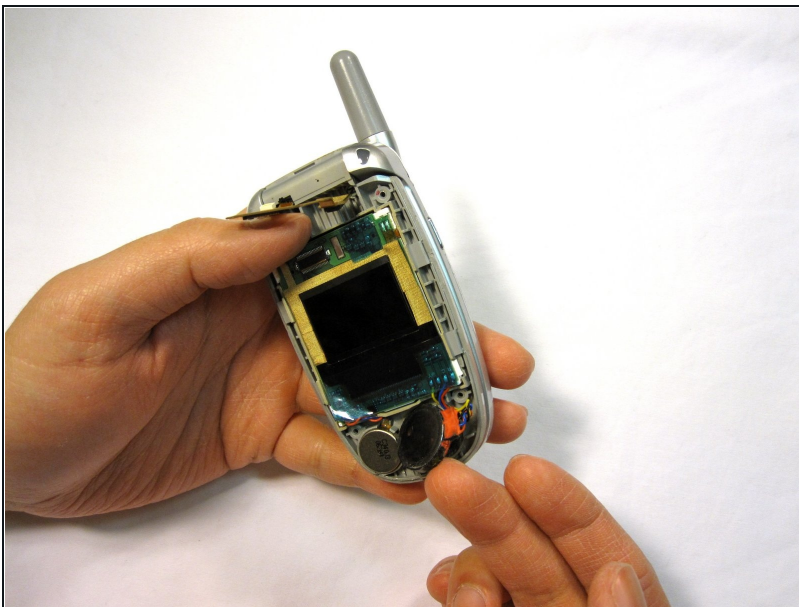


- Gently lift out the speaker with your fingertip.

Step 10

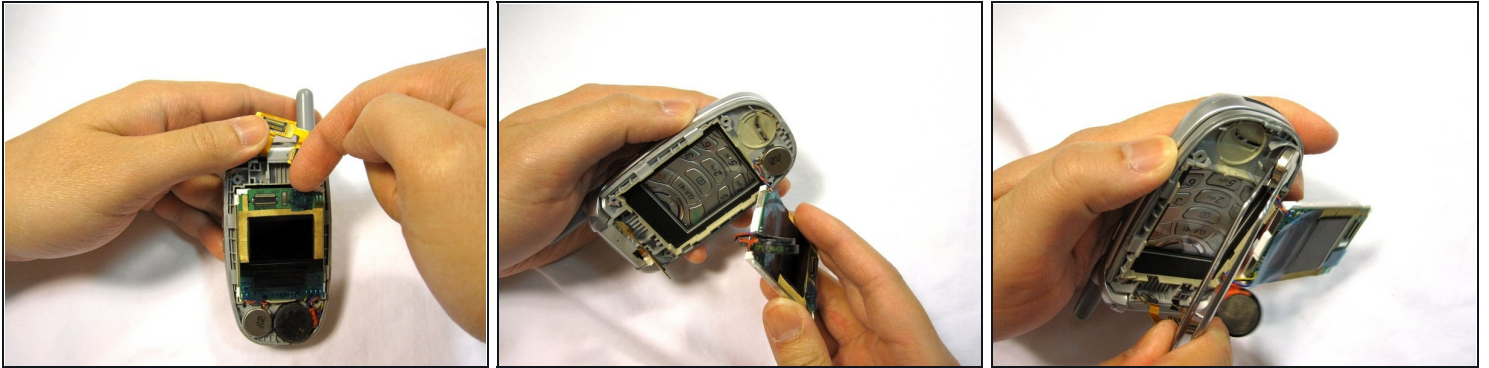

- Gently lift out the square LCD assembly being careful with the attached vibrator wires.
 - Gently remove the vibrator with [tweezers](#).
- ⓘ The LCD screen, speaker and vibrator will separate from the phone as a single unit.

Step 11

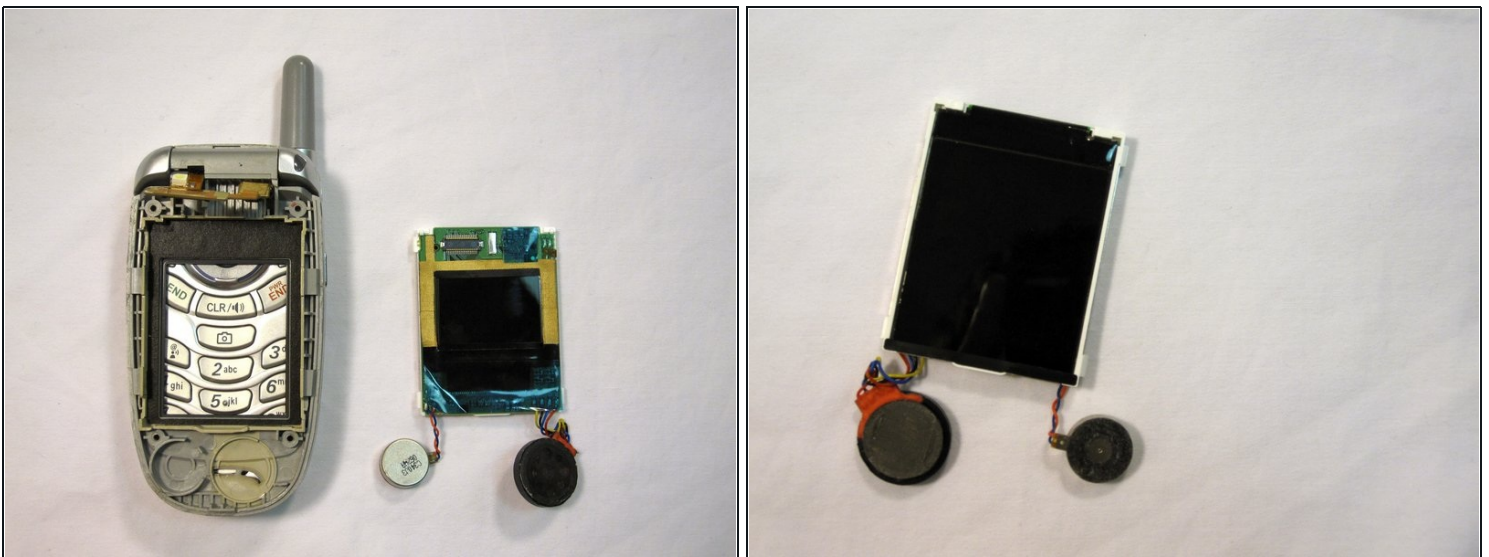

- Place phone body and LCD screen on a clean, lint-free surface.

To reassemble your device, follow these instructions in reverse order.