



Nerf N-Strike Elite Hail-Fire Left Shell Replacement

Detach the left shell from your Nerf N-Strike Elite Hail-Fire.

Written By: Aaron Poon



INTRODUCTION

Use this guide to detach the damaged left shell so you'll be able to replace it with an undamaged shell. This guide can also be used with the 5 other Nerf N-Strike Elite Hail-Fire guides to replace other parts.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Left Shell



 Before disassembling your Nerf Hail-Fire, be sure to remove the batteries.



- Remove the two 9.0 mm Phillips screws securing the battery compartment.
- Slide the battery compartment out.

Step 2



- Remove the five 9.0 mm Phillips screws securing the trigger.

Step 3

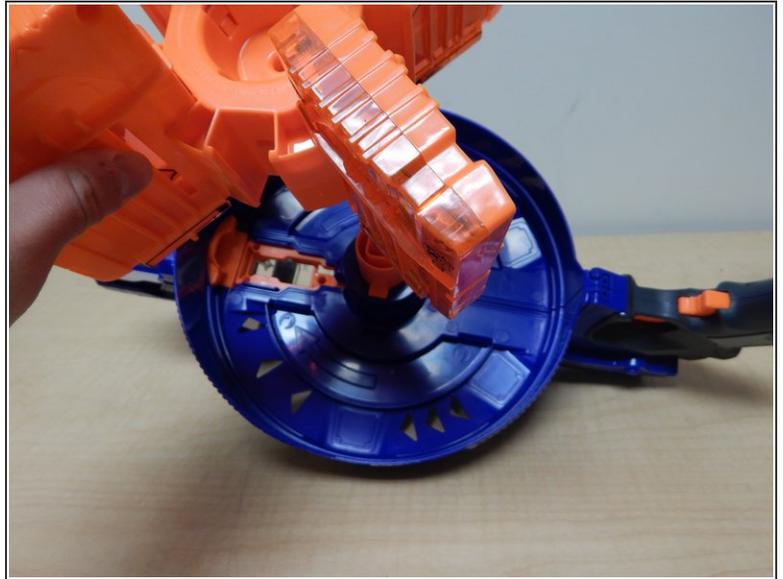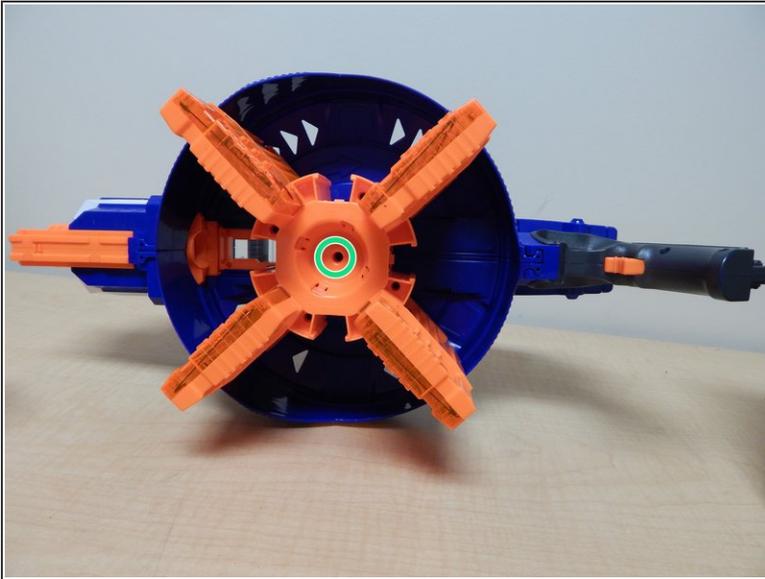

- Remove the single 11.0 mm Phillips screw securing the magazine cartridge chambers.
- Pull the entire chamber upwards to separate it from the rest of the Nerf Gun.

Step 4



- Remove both halves of the ring by tugging on it upwards until the lock gets freed.
- ⚠ This requires quite a bit of force and if you are not careful, you may break the plastic lock.

Step 5



- Remove the four 9.0 mm Phillips screws from the newly revealed cylinder.

Step 6



- Remove the three 9.0 mm Phillips screws holding the top latch of the Nerf Gun together.

Step 7



- Remove the three 9.0 mm Phillips screws holding together the firing chamber.
- Remove the single 7.0 mm Phillips screw below the barrel.
- Remove the two 14.0 mm Phillips screws using a screwdriver with a length of approximately 4.0 inches and a diameter of approximately 0.2 cm.

Step 8



- Remove the single 14.0 mm Phillips screw holding together the handle and the Nerf Gun.

Step 9



- Remove the two 9.0 mm Phillips screws holding together the handle.
- Remove the plastic cover of the handle.

Step 10



- Insert one plastic opening tool inside one side of the orange part depicted in the picture.
- Insert a second plastic opening tool to the other side of the orange part and gradually pull the piece out, freeing it from the handle.

Step 11



- Pull one end of the handle away from the orange latch.
- Repeat the procedure on the other side to completely remove the handle from the rest of the Nerf Gun.

Step 12



 Lift the entire left shell slowly. The process should be easy and if there is any resistance, there is something wrong. You may have forgotten a screw.

- Completely remove the left shell from the rest of the Nerf Gun.

To reassemble your device, follow these instructions in reverse order.