




Mr. Coffee TF6 Internal Water Tubes Replacement

This guide provides step-by-step directions on how to replace the water tubes inside the Mr. Coffee TF6.

Written By: Jordan

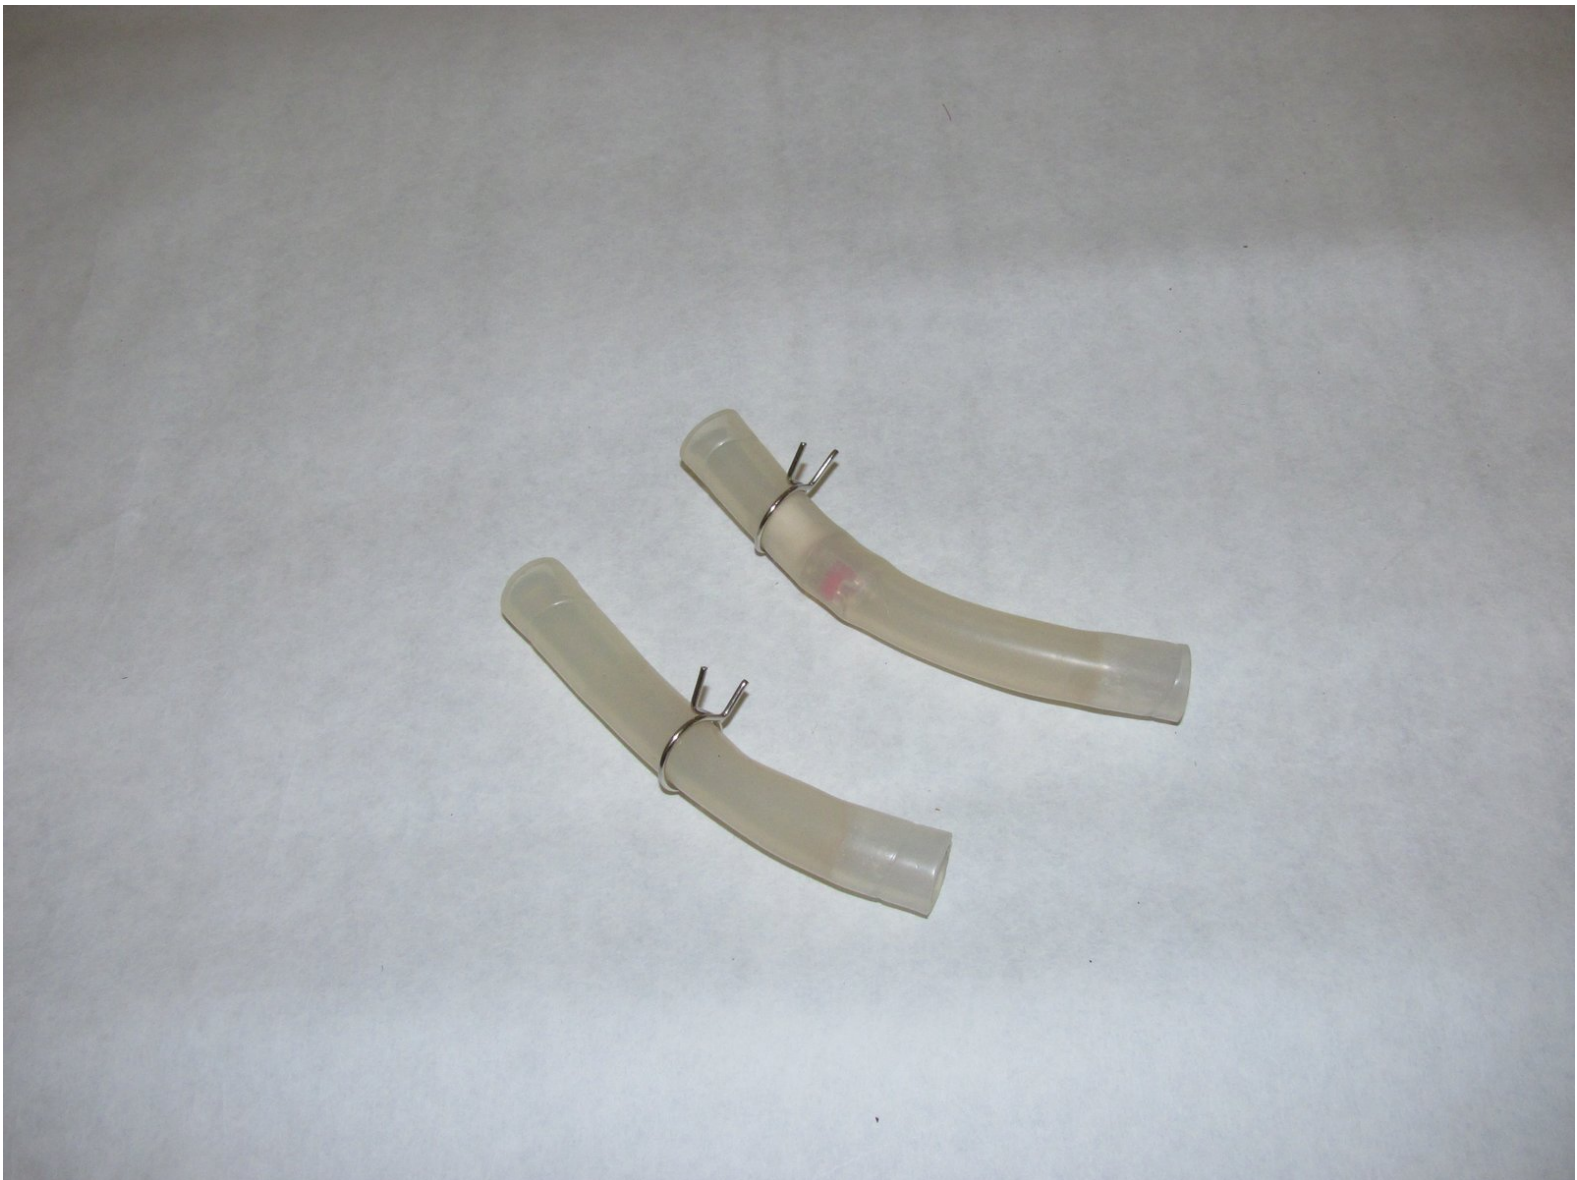

INTRODUCTION

Leaks can occur within the Mr. Coffee TF6. In most cases, replacing the internal water tubes will correct this issue. You will require 2 inches of silicone tubing (.5 in. OD) to replace the original water tubes inside the TF6.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:


- [Silicone Tubing \(.5 in. OD\)](#) (1)

Step 1 — Bottom Cover



- Facing the bottom of the TF6, carefully pull the two rubber feet out with your hands.

Step 2

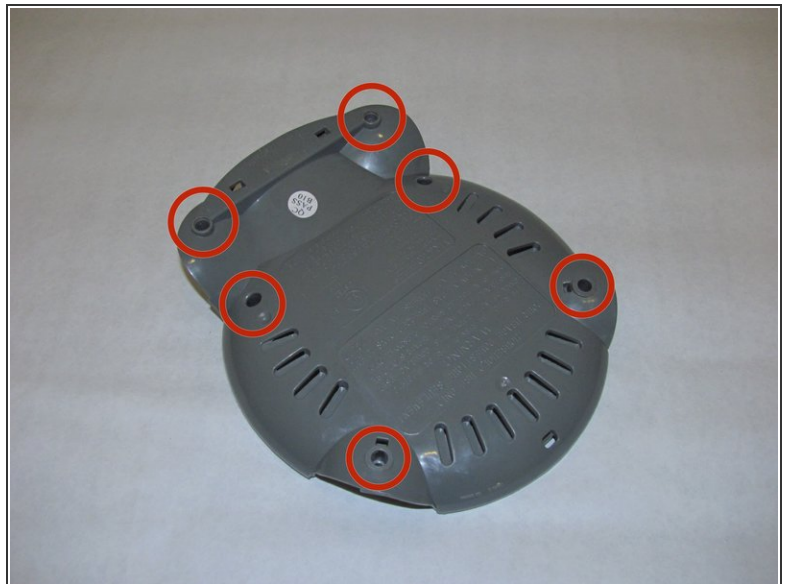


- Using a Phillips #1 screwdriver, remove the six 11mm Phillips screws that are holding the bottom cover in place.

Step 3




- Gently lift the bottom cover, detaching it from the main body of the TF6.

Step 4 — Internal Water Tubes

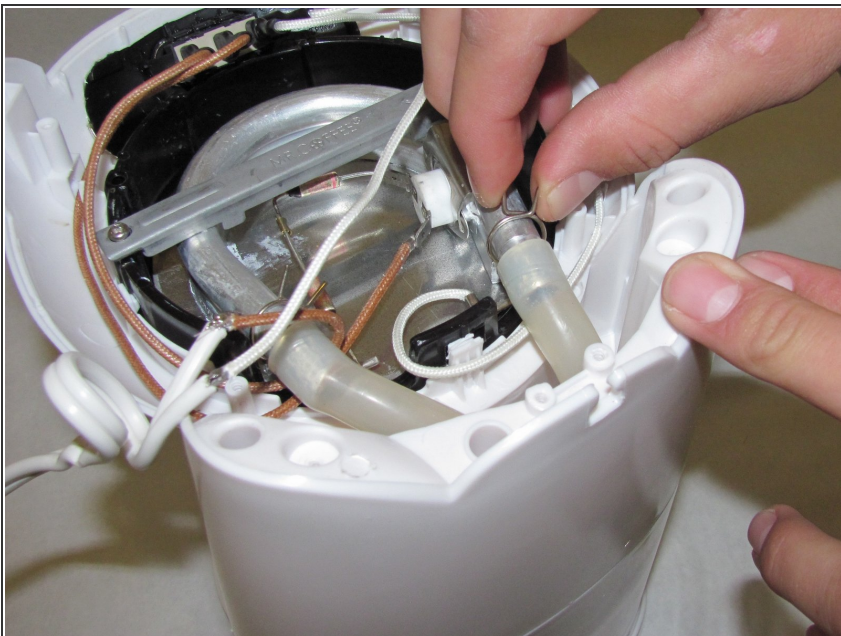

- Using your fingers, gently pinch and detach the two metal clips that secure the silicone tubing to the metal tubing on the TF6.

Step 5

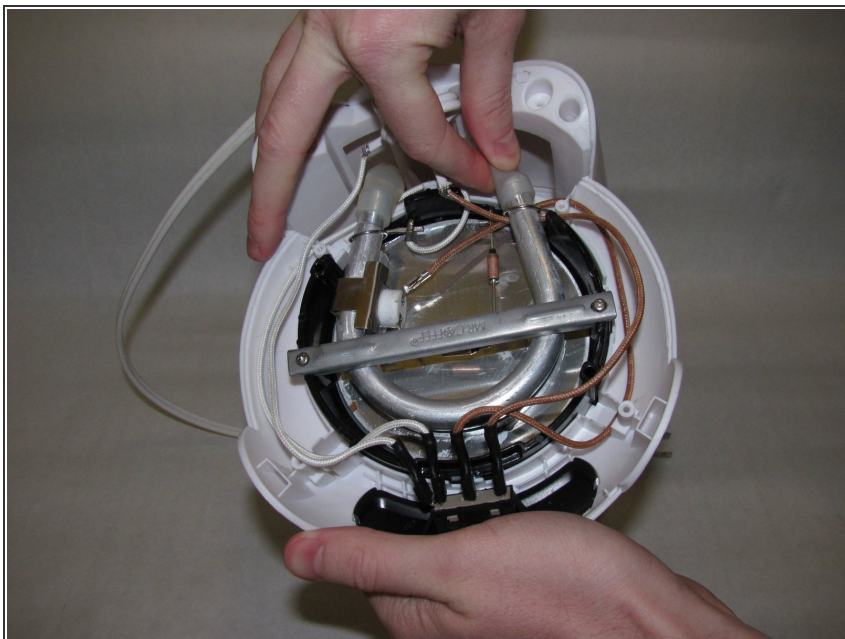


- Carefully pull the silicon tubing off of the metal tubing.

Step 6



- Using a Phillips #1 screwdriver, remove the three 13mm Phillips screws that hold the lower and upper assemblies together.

Step 7

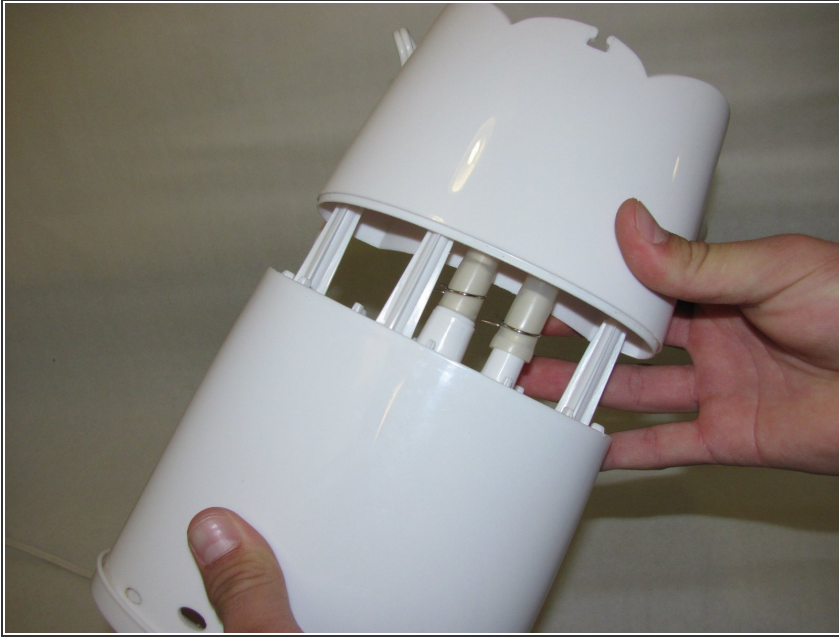


- Gripping the lower assembly with one hand and the upper assembly with the other, gently pull the assemblies apart.
- ⓘ If all screws have been removed and the tubes have been detached, the assemblies should separate easily.

Step 8



- Using your fingers, gently pinch and detach the two metal clips that secure the silicone tubing to the plastic tubes on the upper assembly.

Step 9

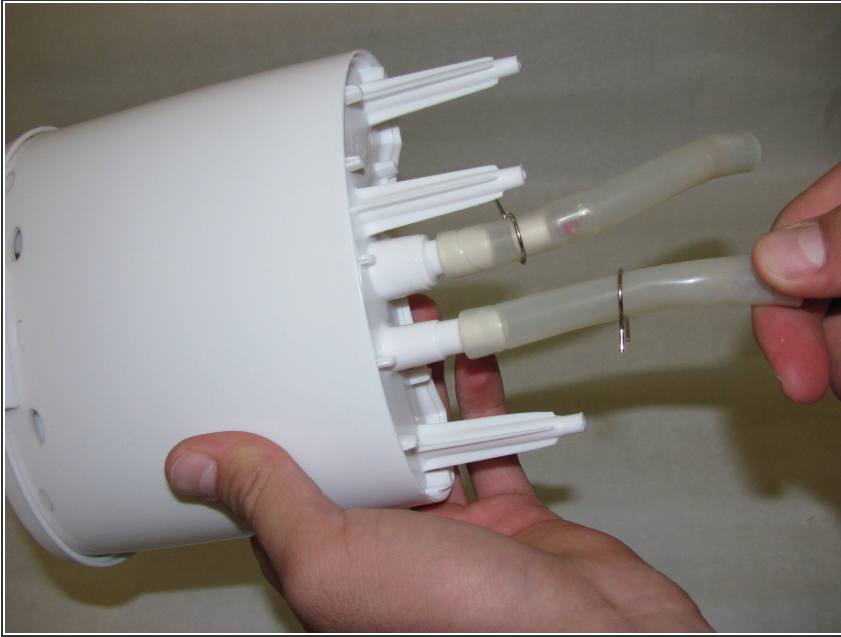

- Carefully pull the silicon tubing off of the plastic tubing on the upper assembly.

To reassemble your device, follow these instructions in reverse order.