




Anker 2.4G Wireless Mouse DPI button Replacement

In this guide we will be replacing the DPI button, which controls mouse sensitivity.


Written By: Colin

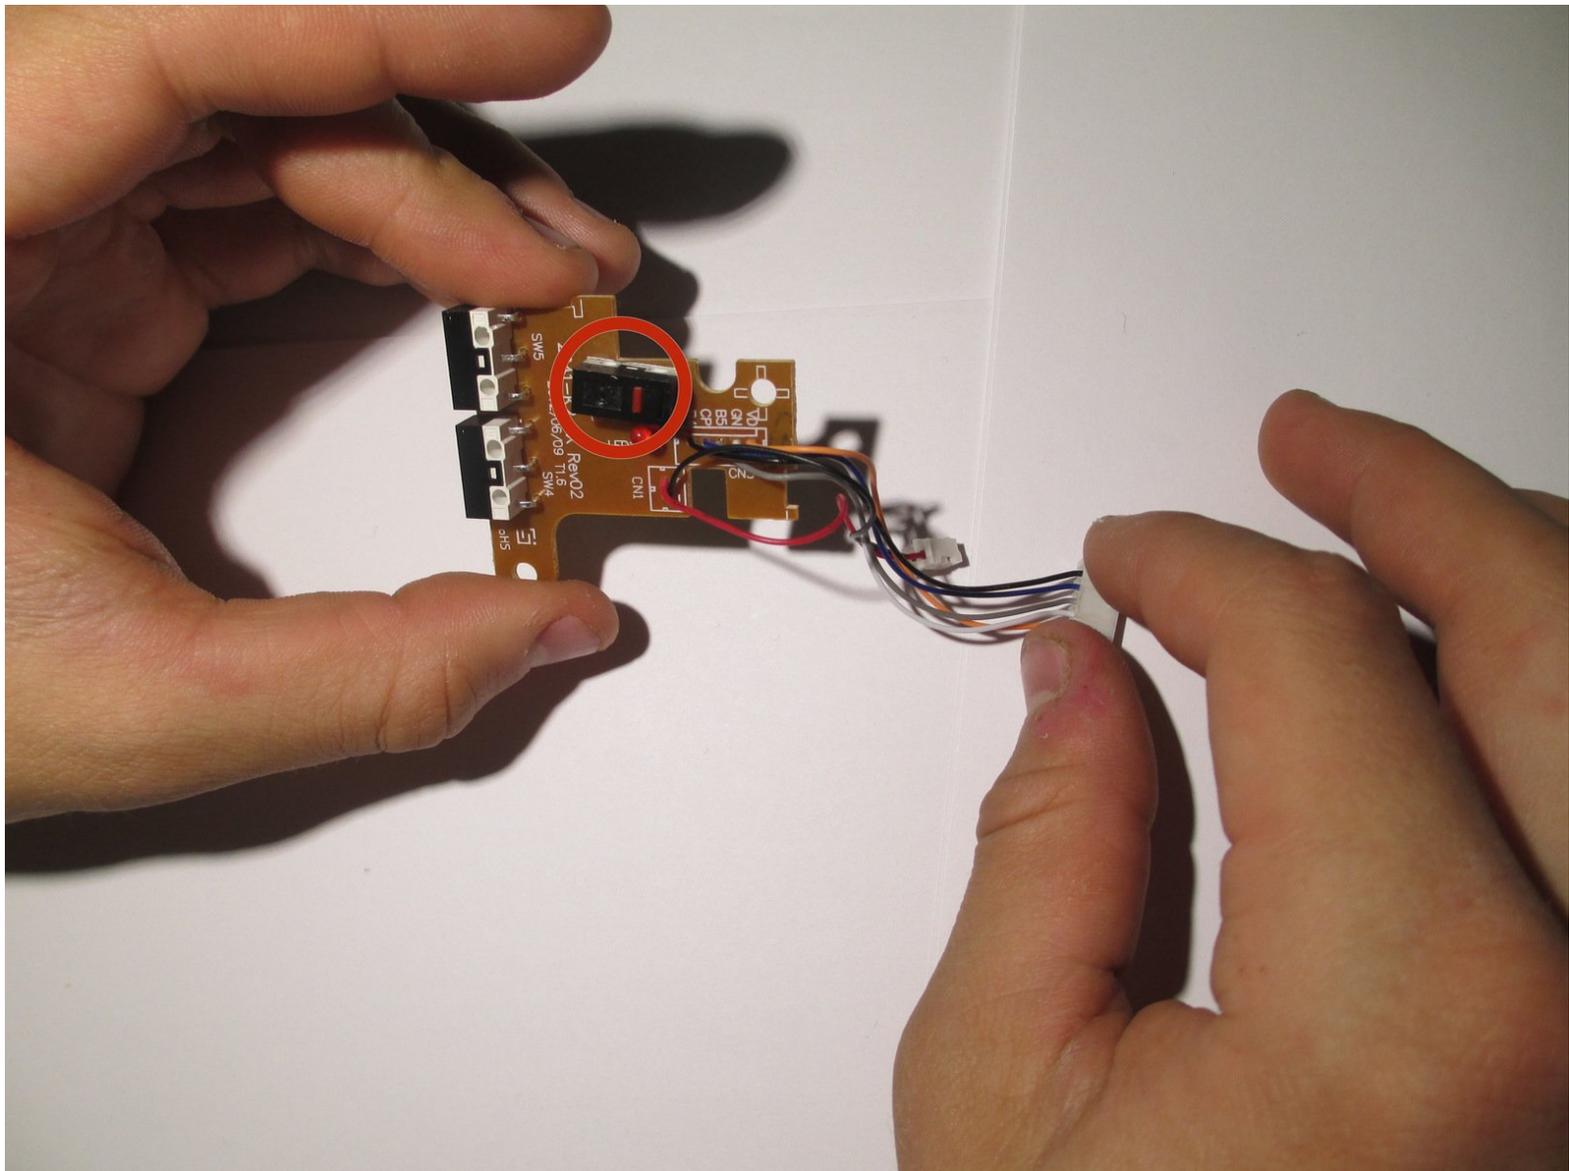

 **TOOLS:**

- Phillips #0 Screwdriver (1)
 - Soldering Iron (1)
 - Desoldering Braid (1)
-

Step 1 — DPI button

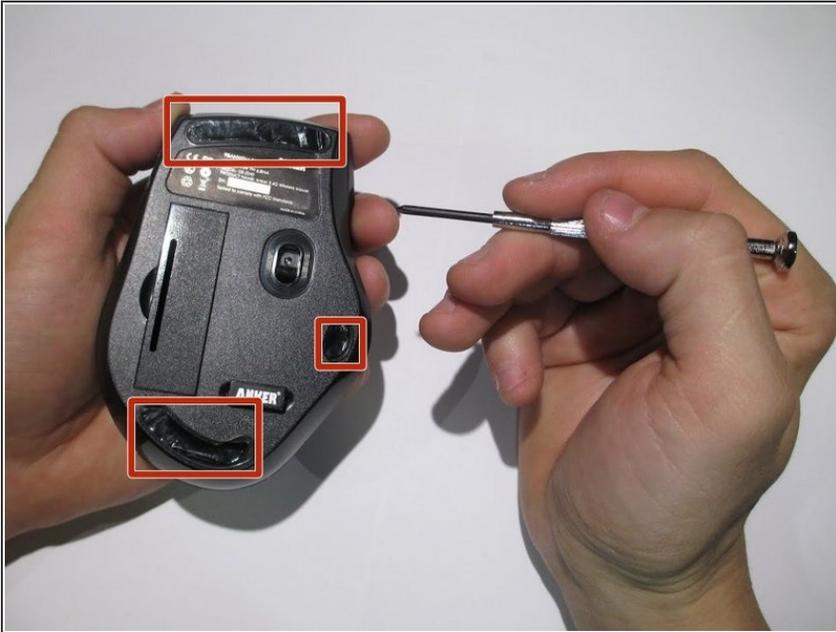

- Use screwdriver to pry off the stickers marked in red to reveal the location of the 4 screws.

Step 2



- Remove the 4 screws to continue.

Step 3




- Pry the center of the mouse apart to separate the upper and lower housing of the boards.

Step 4




- Remove the wires from the white crimp headers. this will separate the upper and lower housing units of the mouse.
- ⚠ Pull as far up on the wire as possible, being as careful as possible to avoid ripping the wires.

Step 5

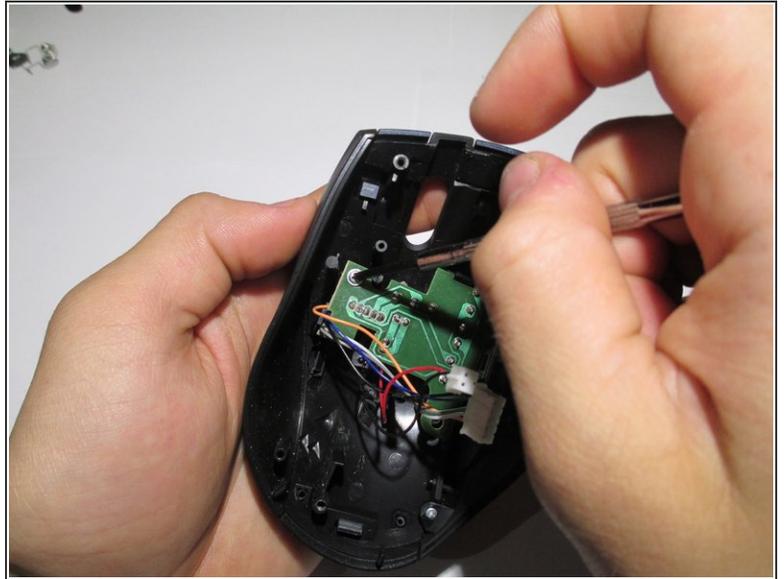



- Take the upper housing of the mouse and begin to remove the two screws (highlighted in red) that hold the board in place.

Step 6

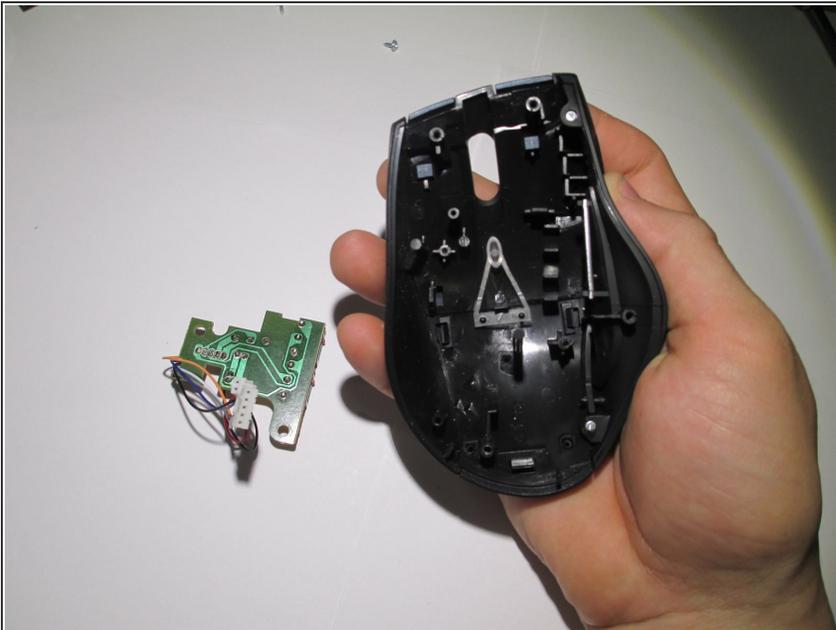

- Gently remove board.

Step 7

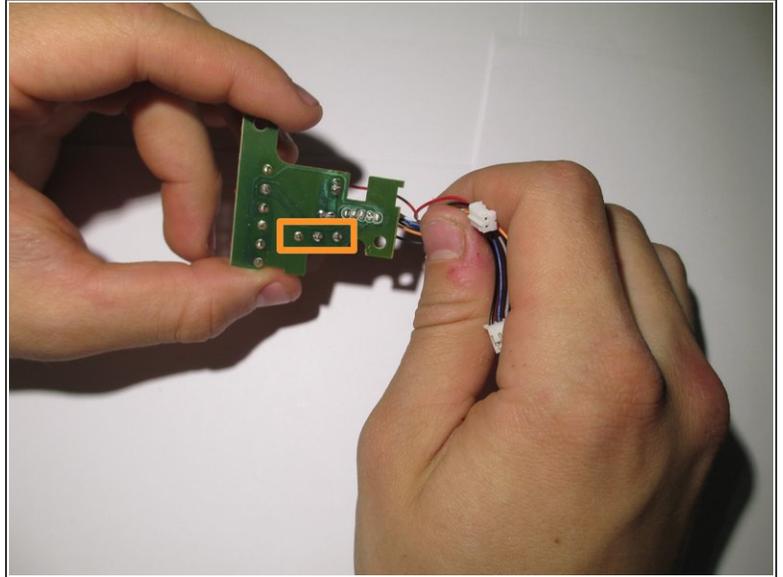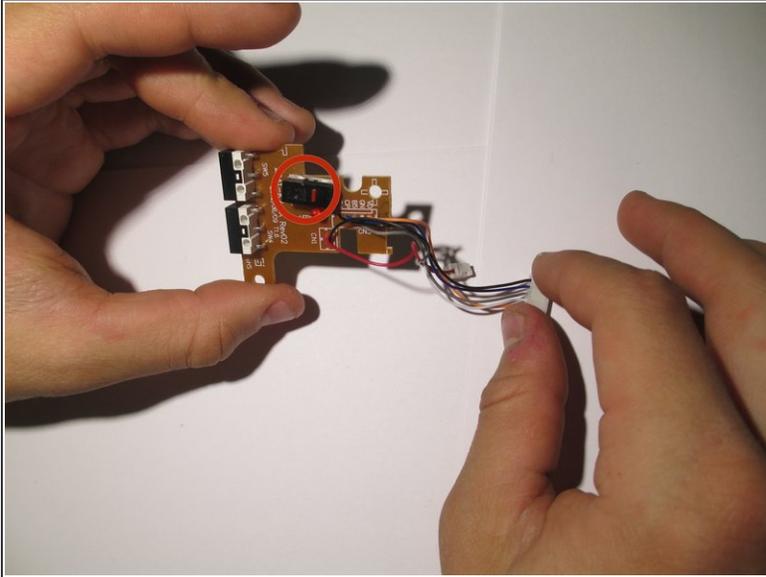

- The DPI button is the red push button highlighted in red.
- To remove it, flip the board over and desolder the wires highlighted in orange.
- Replace component with new component and resolder back in place.

To reassemble your device, follow these instructions in reverse order.