




# Sony Vaio PCG-F420 Keyboard Replacement

If your keys appear to be broken, replacing the...

Written By: Andrew Quayle

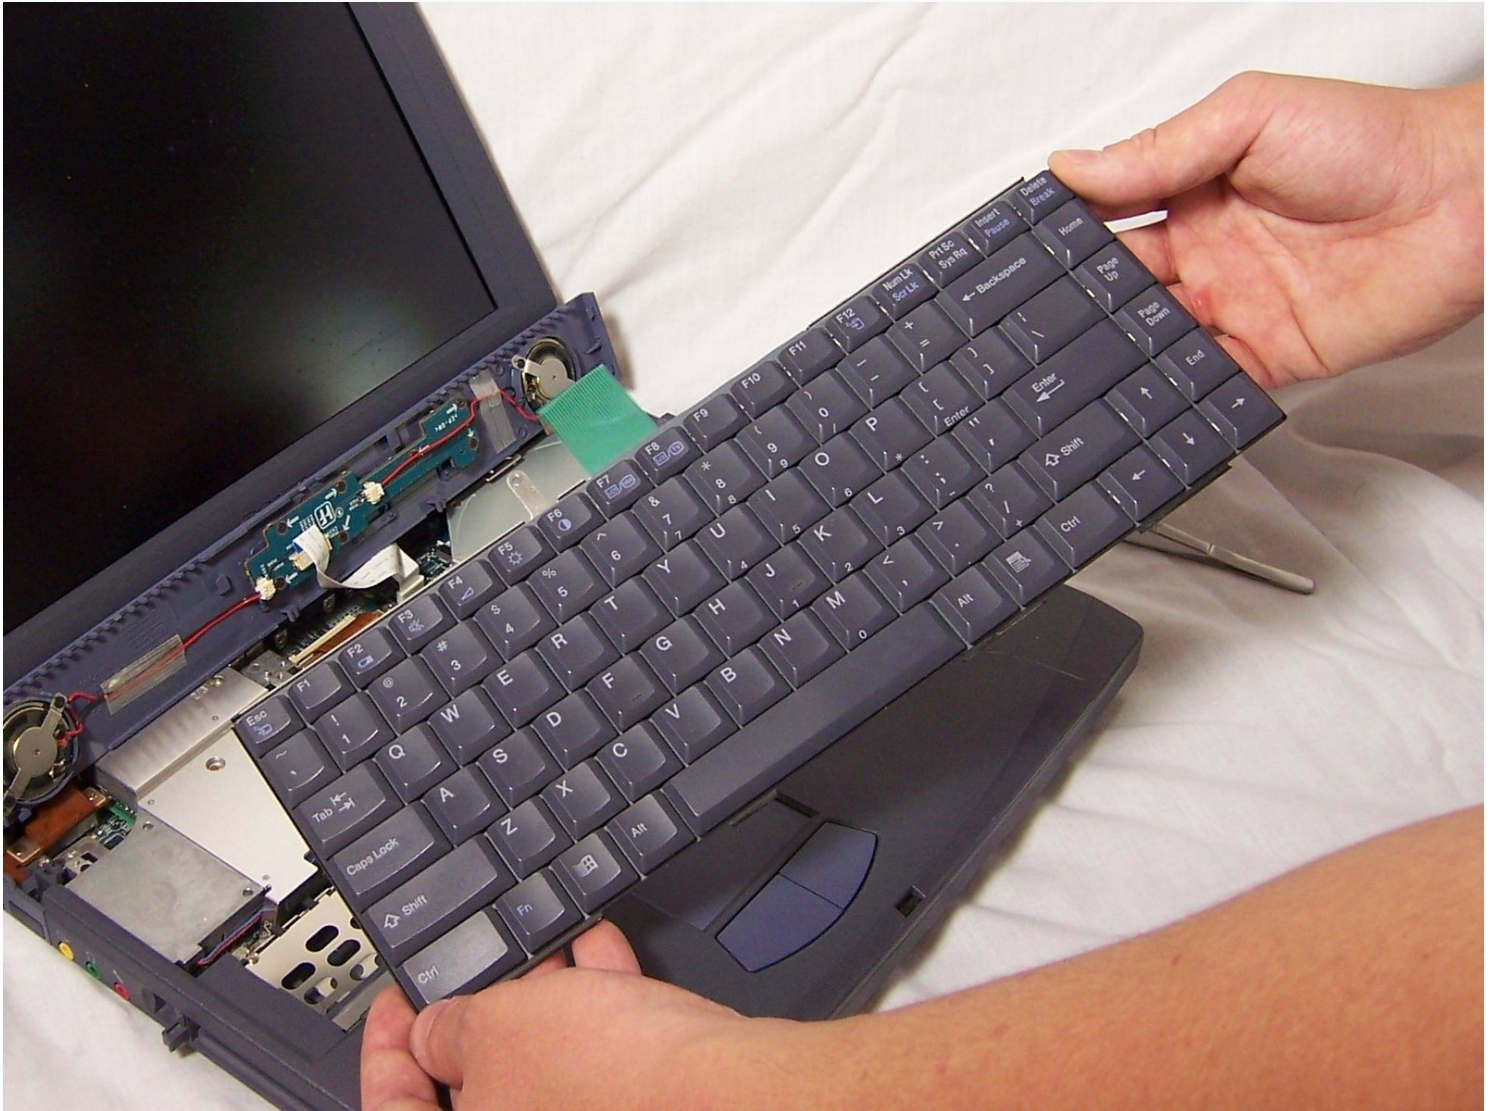

## INTRODUCTION

If your keys appear to be broken, replacing the keyboard may be necessary.

To make sure the problem is with the keyboard, follow the [troubleshooting guide](#).

When buying a new keyboard make sure it is compatible with PCG-F420.

**CAUTION: Static electricity in your body can ruin your computer. Use an anti-static wristband.**

Before you begin the repair, turn off your laptop and unplug the charger.

---

### TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Tweezers](#) (1)

[Anti-Static Wrist Strap](#) (1)

---

## Step 1 — Battery



- The battery is located on the left side of the laptop, as shown by the red circle.
- Make sure the laptop is disconnected and turned completely off.

## Step 2



- ❶ Remove the battery by following these steps.
- Pull the plastic cover down (indicated by the arrow on the cover) and then swing it upwards to reveal the battery compartment.
- The battery can now be removed by pulling it.

## Step 3 — Keyboard



- Use your Philips #00 screwdriver to unscrew the small screw counterclockwise. This screw is for the audio/visual jacks on the left side of the laptop.

## Step 4




- Unlock the cover between the keyboard and screen.
- Gently slide it to the right and lift it up.
- Exercise caution to avoid excessive force, as wires are connected.
- ① Be mindful not to pull the keyboard too forcefully as it remains connected to wires, which we will address in the next step.

## Step 5




- Lift up the cover and lean it against the display so it is out of the way for the rest of the process.
- Remove the small screw above the F6 key on the keyboard. Place screw in container to ensure it won't be lost.

## Step 6

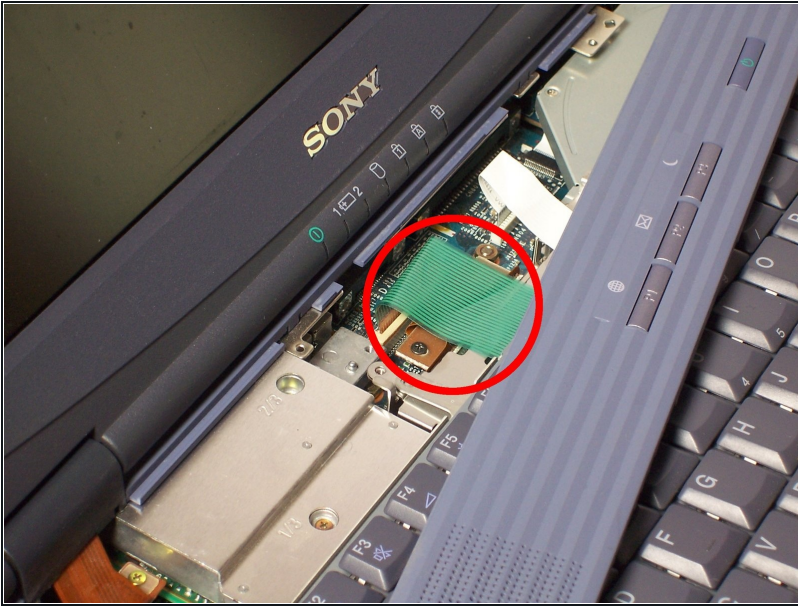

- Find the green ribbon as indicated in the picture by the red circle. This is what connects the keyboard to the motherboard.

## Step 7

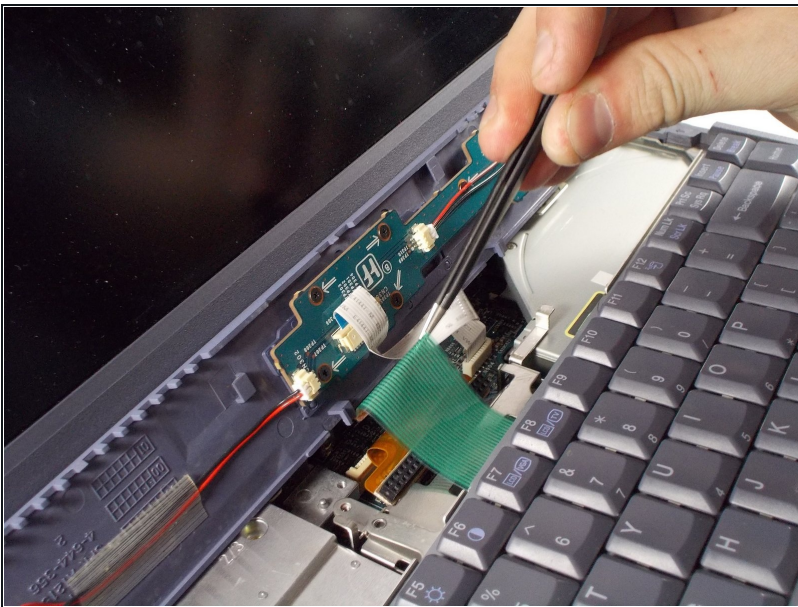

- Carefully unplug the ribbon cable using a pair of [tweezers](#).
- Lift up the white bar near the connection to the motherboard, and lightly lift the ribbon to release it from the motherboard.

## Step 8



- Now, pull on the ribbon cable, and it will detach from the motherboard.
- ① Your keyboard is now safely detached, allowing for necessary repairs or replacements.

## Step 9



- Your keyboard is now safely detached. Necessary repairs or replacements can be made from here.

To reassemble your device, follow these instructions in reverse order.