



# Nokia 8260 LCD Replacement

Written By: Aaron Jen



---

## INTRODUCTION

How to remove the LCD.

---

### TOOLS:

- [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn off the cell phone.

## Step 2



- Press down on the round button on the back cover of the phone.

### Step 3



- Slide the back cover down while still pressing the button.

### Step 4



- Remove the back cover.

## Step 5



- Press the end of the battery towards the top of the phone.

## Step 6



- Lift the battery outwards while still pressing it upwards till it pops out.
- ⓘ You may need to take several attempts to lift out the battery.

## Step 7 — Antenna



- Squeeze the flat end of the spudger into the crack right under the word "Nokia" on the back of the phone.
- ⓘ This step may be a bit difficult if you are removing the antenna for the first time.

## Step 8



- Pry open the antenna door by pulling down the top of the spudger

## Step 9



- Remove the antenna door.

## Step 10



- If the gold antenna remained stuck to the door, you have finished removing the antenna from the phone.
  - If the gold antenna is still in the phone, carefully remove it and stick it onto the back of the door.
- ⚠ Try to keep the antenna as flat as possible. Do not bend it.

## Step 11 — Circuit Board



- Remove the five screws with the Torx Screwdriver: two near the bottom, two in the middle, and one under the antenna door.
- ⓘ The two bottom screws are longer than the upper three.

## Step 12



- Remove the back covering.

## Step 13



- Remove the two screws at the top.

## Step 14



- Remove the metal plating and the circuit board.
- ⚠ There is nothing holding the rest of the phone together. Handle the rest of the phone carefully.
- ⓘ The LCD will be attached to the circuit board.

## Step 15 — LCD



- Detach the LCD from the logic board at the four metal hinges.
- ⓘ There are three pieces to the LCD: the front metal border, the LCD unit, and the plastic backing. Unless you are replacing the LCD, do not separate these three pieces.

To reassemble your device, follow these instructions in reverse order.