




Sony VAIO PCG-F420 Floppy Drive Replacement

This guide will show how to remove the floppy...

Written By: Tim Cowley

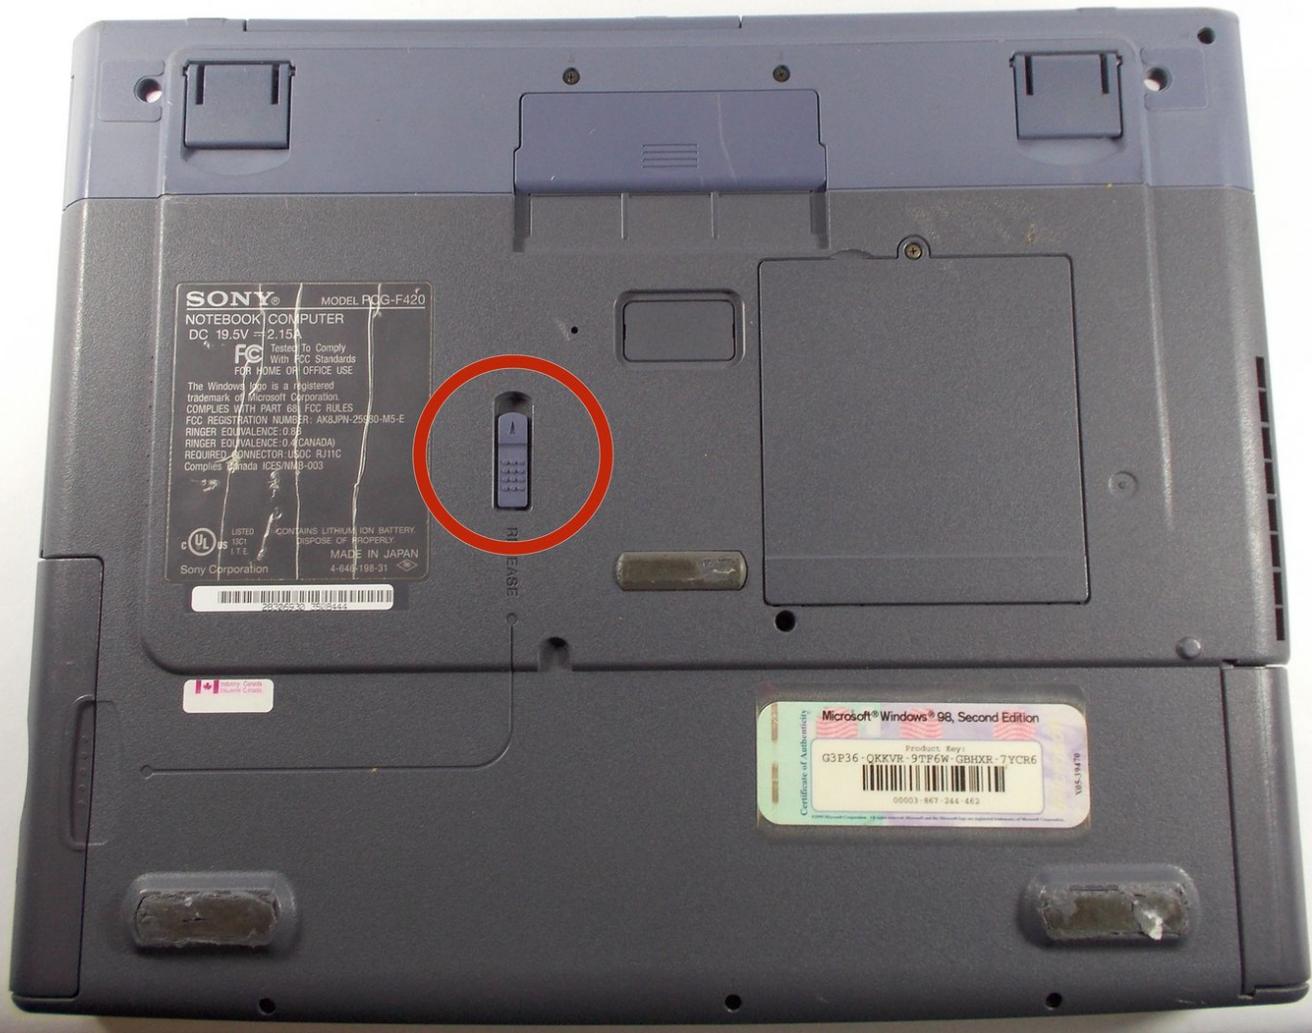

INTRODUCTION

This guide will show how to remove the floppy drive for replacement.

Step 1 — Floppy Drive



- Locate the release tab on the bottom of the device.

Step 2



- Slide tab in the direction of the arrow and pull out the floppy drive.

To reassemble your device, follow these instructions in reverse order.