



Nokia 6030 Speaker/Antenna Replacement

Guide to replace the phones speaker.

Written By: Spencer Woodworth



INTRODUCTION

Guide to replace the phones speaker.

TOOLS:

[T6 Torx Screwdriver](#) (1)

Step 1 — Battery




- Press down on the grip on the back of the phone and slide the rear housing down towards the bottom of the phone.

Step 2



- Use your finger to gently pull the bottom of the battery up by using the slip found at the bottom of the phone.
- Lift out battery and remove.

Step 3 — SIM Card

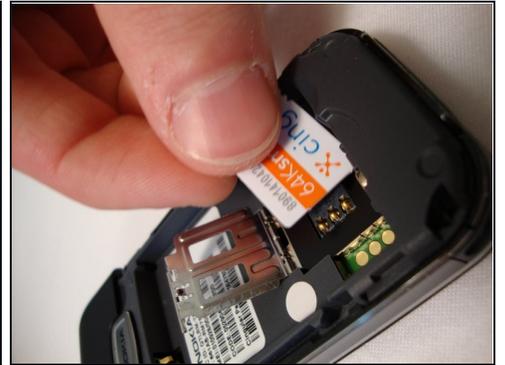

- Use your finger to lift the metal cage up.
- Remove SIM card.

Step 4



- Use your finger to close the metal cage.

Step 5 — Front Cover



- Insert your two fingers under the two tabs found at the top of the phone underneath the black casing, then pull the casing up and slide it out slowly.

Step 6



- After removing the top cover, turn the phone over so the screen is facing upwards.

Step 7




- Use your fingers to slowly lift the screen back towards the bottom of the phone using the arrows found at the top of the phone.

Step 8 — Speaker/Antenna



- Remove the six screws with a T-6 Torx screwdriver.

Step 9

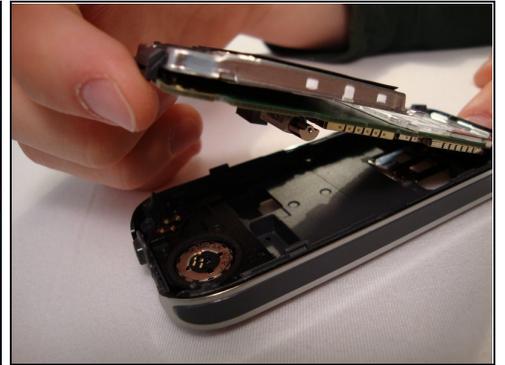

- Lift the logic board and screen from the top.

⚠ Be careful of loose parts.

Step 10



- Lift the speaker out of the back housing of the phone.
- The speaker should come out with little effort.

To reassemble your device, follow these instructions in reverse order.