



HTC EVO 4G Speaker Replacement

How to replace the speaker.

Written By: Sage Jurado






PARTS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery

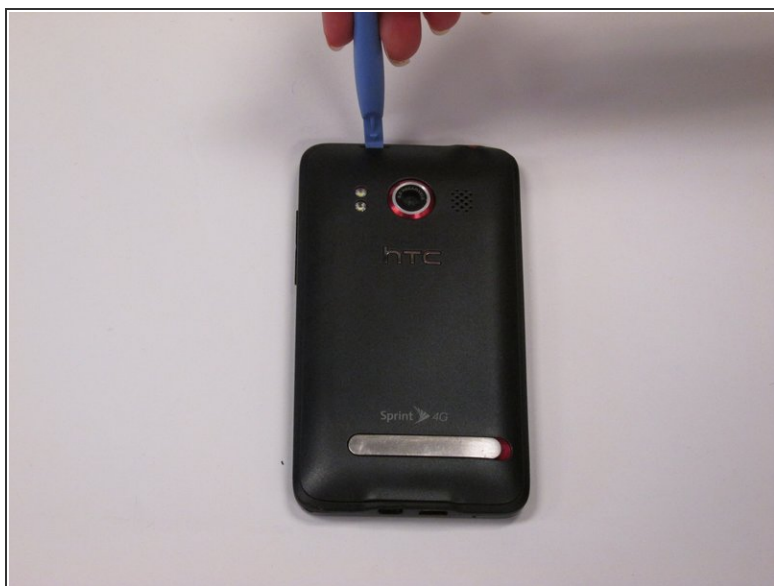

- Remove the back case of the phone with a plastic opening tool by placing the tool in the tab on the back of the phone.

Step 2



- Remove the battery from the phone by carefully lifting it out with your fingers.

Step 3



- Set the battery aside for disposal. You are now ready to insert a new battery.

Step 4 — Speaker




- you should remove the six T5 screws holding the Inner frame in place. Be careful not to loose the screws

Step 5



- Using the plastic opening tool again, gently pry the inner frame apart from the rest of the phone
- Remove the inner frame from the rest of the phone by lifting it off

Step 6

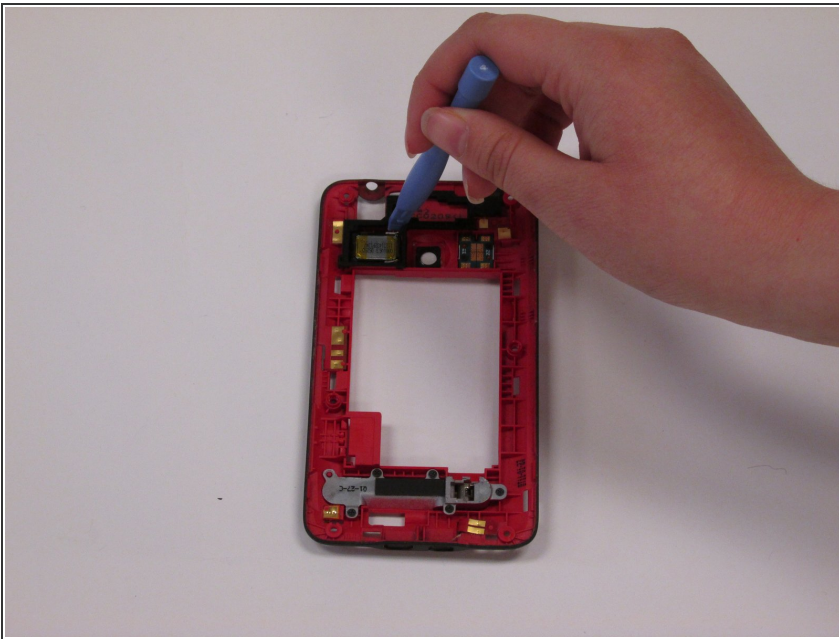

- use plastic pic to gently pry out the speaker
- be sure to have your replacement unit ready

To reassemble your device, follow these instructions in reverse order.