



# Accessing Nokia 3100b Vibrating Unit

Written By: Sterling Fuentes



---

## INTRODUCTION

The Nokia 3100b may not vibrate anymore when the phone is set in Vibrate mode. This guide will show you how to access the vibrating unit.

---

### TOOLS:

- [T6 Torx Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Make sure your phone is turned off.

## Step 2



- Press the button on the back of the phone and slide the back panel off.
- Remove the battery by pulling it from the phone.

## Step 3 — SIM Card



- Gently pull back the small metal frame holding the SIM card into place, and lift open the frame.

## Step 4



- Retrieve your SIM card.



## Step 5 — Vibrating Unit



- Separate the front cover from the base of the phone.
- Set the front cover, as indicated, aside.

## Step 6




- Remove the screws indicated using a T6 Torx screwdriver.
- Remove them in the order of the colors of the rainbow. (Red, Orange, Yellow, Green, Blue, Purple).

## Step 7




- Separate the screen assembly from the base of the phone.
- Set the screen assembly, as indicated, aside.

## Step 8

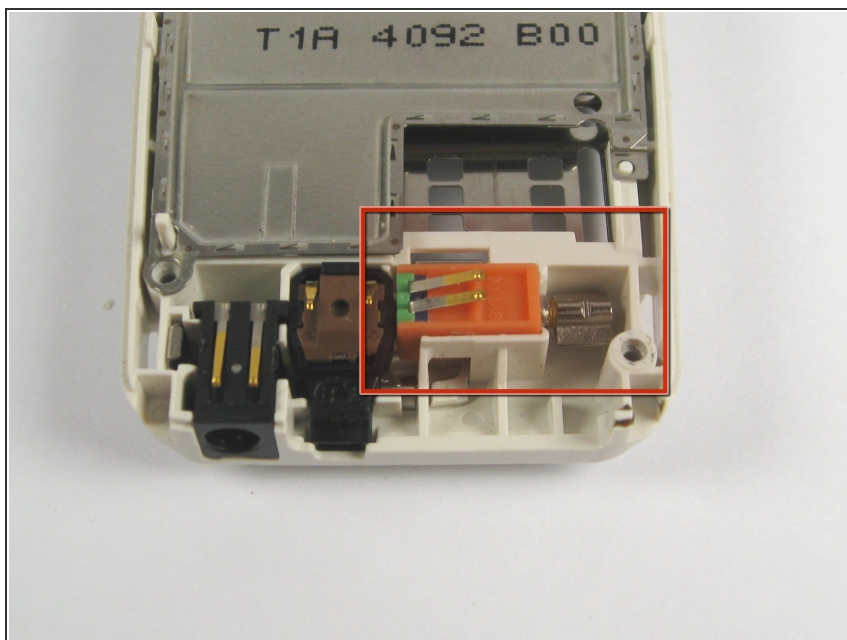


- The vibrating unit can now be accessed. Note its location in the phone.

## Step 9

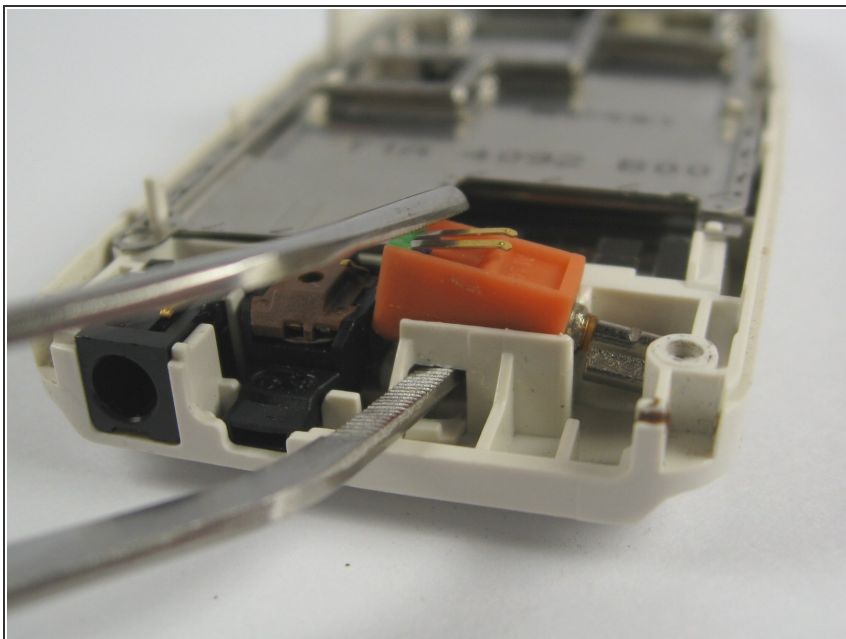

- The vibrating unit is held in place by friction. Access the bottom of the unit and push upward to release it from the base.

## Step 10

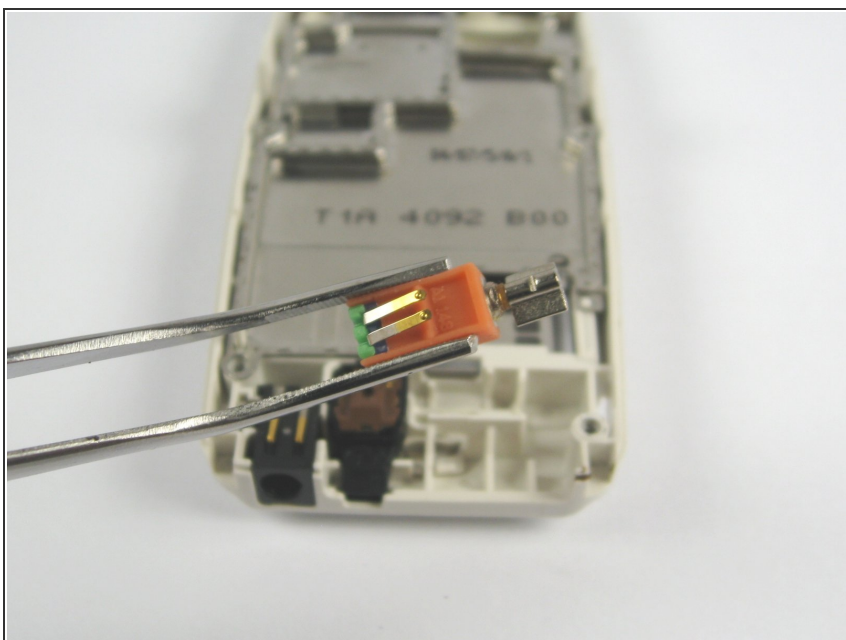

- The vibrating unit is now removed.

To reassemble your device, follow these instructions in reverse order.