




Kodak EasyShare C713 Capacitor Replacement

Written By: Scott DiGirolamo

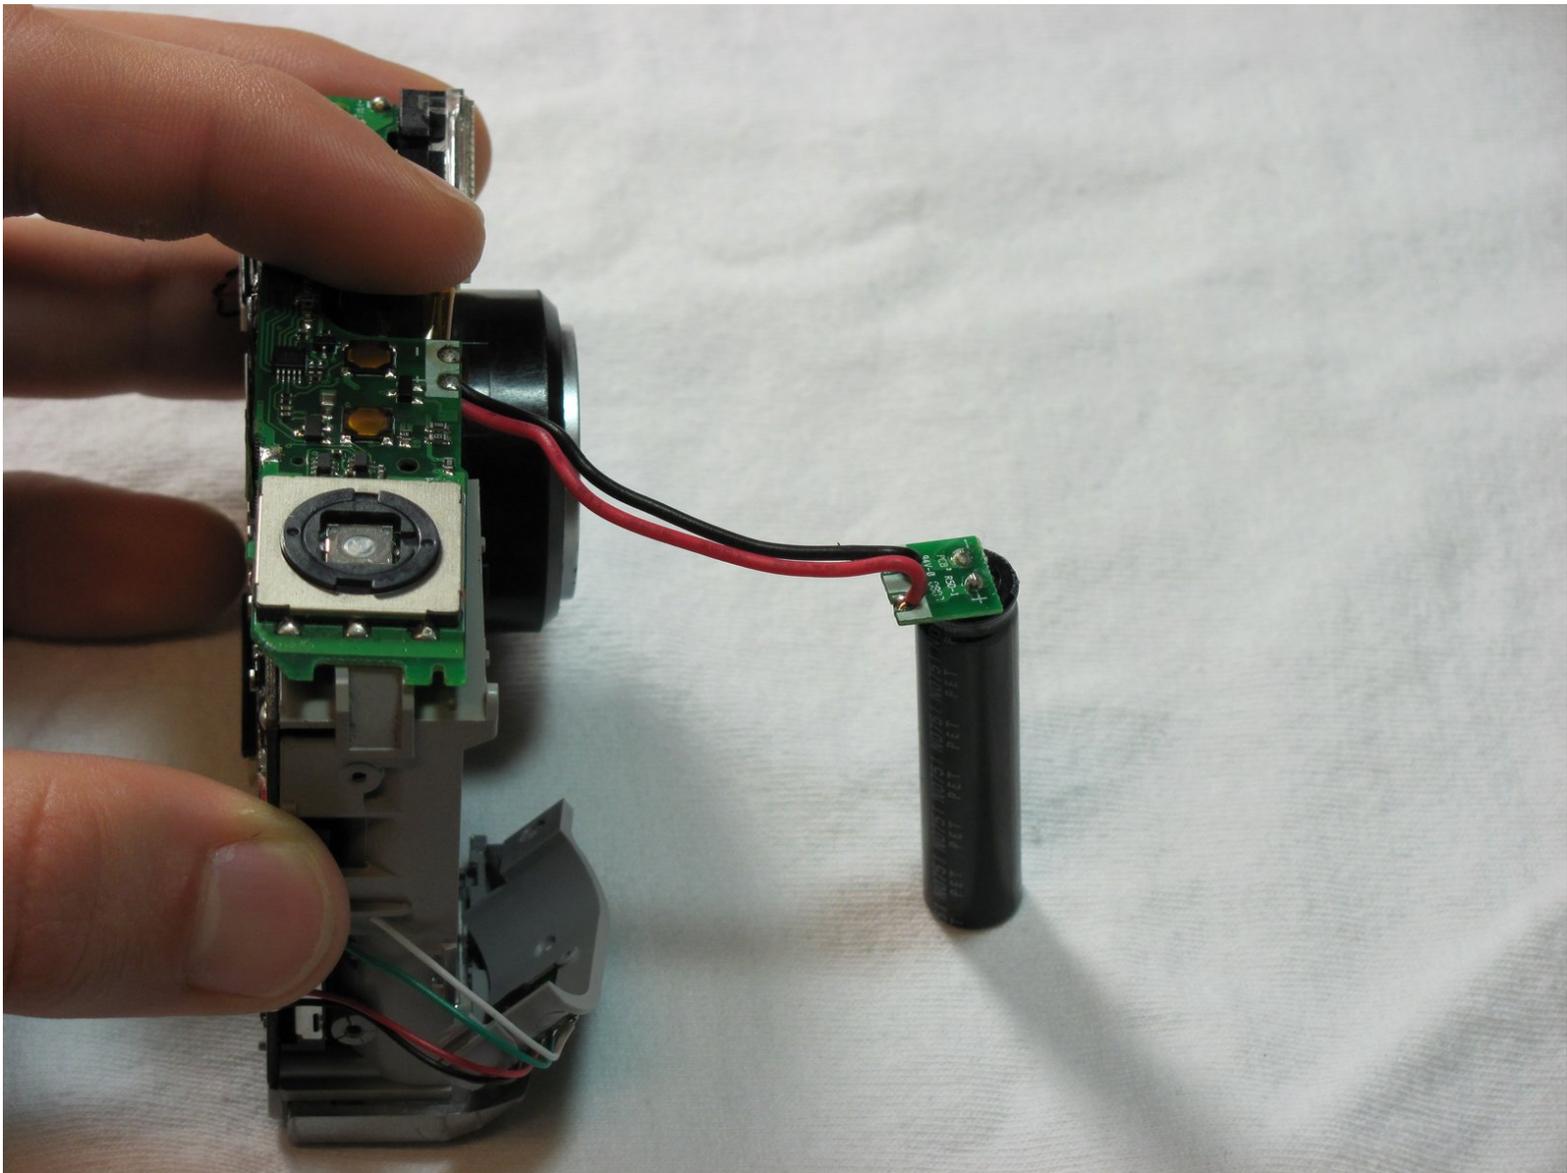

INTRODUCTION

Replacing the capacitor.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

Step 2




- Remove the old batteries.

Step 3 — Outer Case





- Remove the seven screws from the outer case with a Phillips #00.
 - All screws are 4.45mm.
 - There are 2 screws on the port side.
 - There are 2 screws on starboard side.
 - There are 3 screws on the bottom.

Step 4

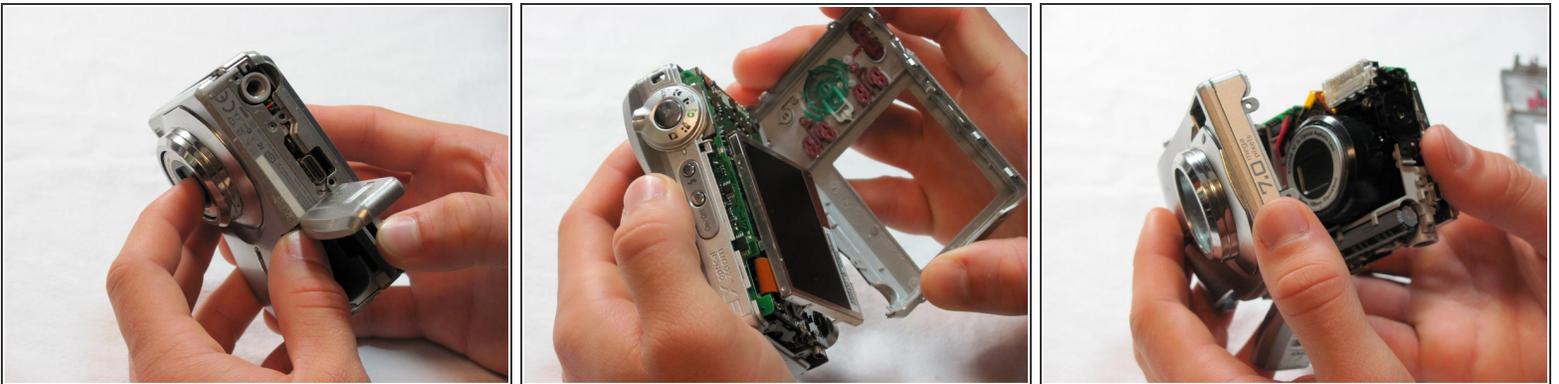

- ⚠ Make sure the battery cap is "up".
 - Pull the outer case off with your hands.


Step 5 — Capacitor

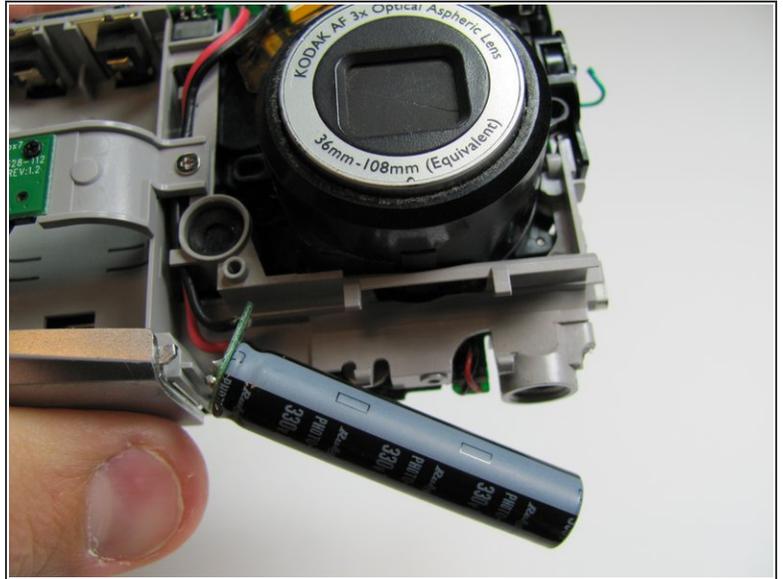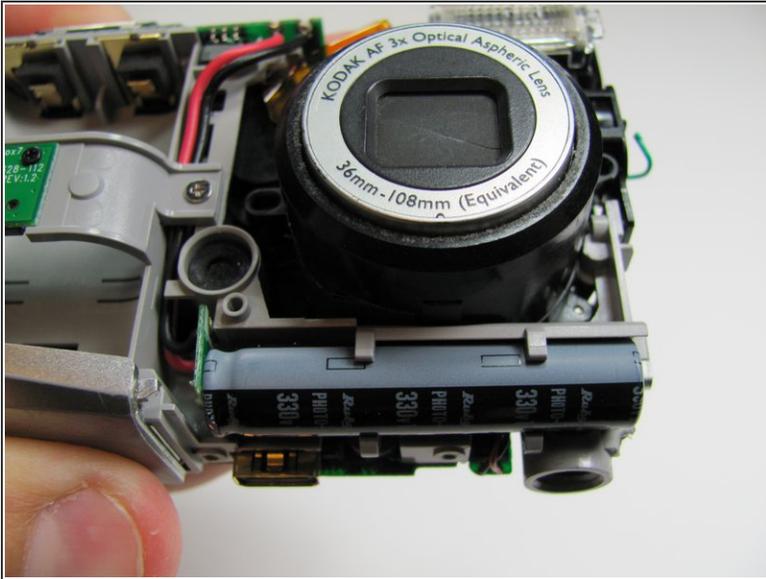

⚠ To avoid an electric shock, do not touch capacitor.

- The capacitor is located underneath the lens.
- It is held in place by 4 plastic snaps; it can be easily removed by pulling outward with your fingers.

Step 6

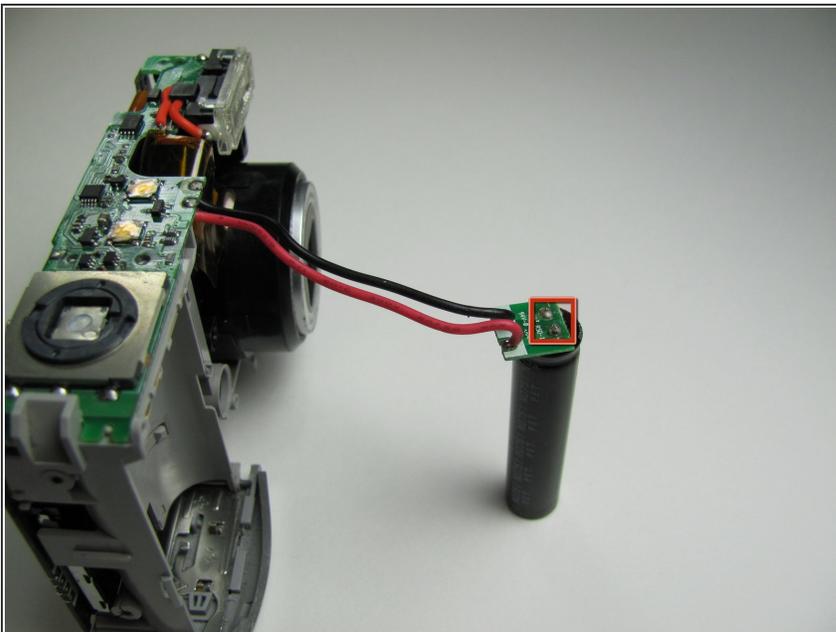

- Desolder points connecting capacitor to circuit board.

To reassemble your device, follow these instructions in reverse order.