



Sony Vaio PCG-F360 Floppy Drive Replacement

Written By: ahintz



INTRODUCTION


The PCG F360 comes with a floppy drive in an expansion bay. This can be replaced or swapped out for a battery or for a weight saver.

Step 1 — Battery




- Position the laptop screen-side down as shown.
- In this position the battery housing will be located on the right hand side.

Step 2

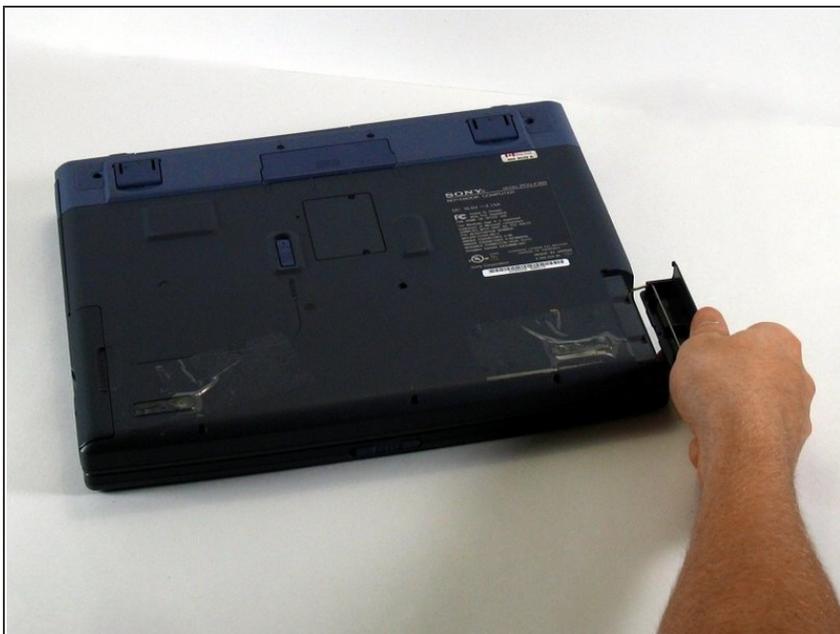

- Lift the panel up and then out to gain access to the battery.

Step 3

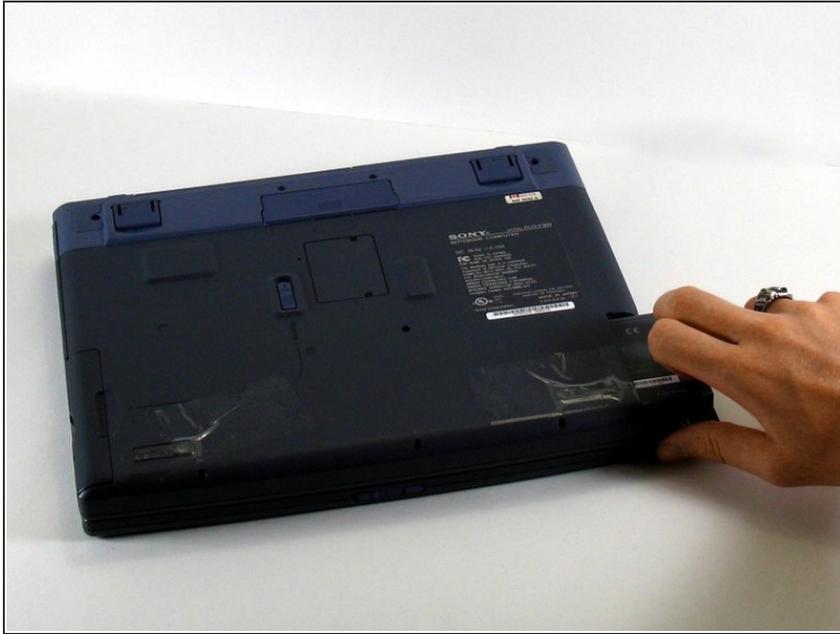


- Use the indentations to pull the old battery out.

Step 4



- The battery is now removed and it is safe to move on to uninstalling other components.

Step 5 — Floppy Drive

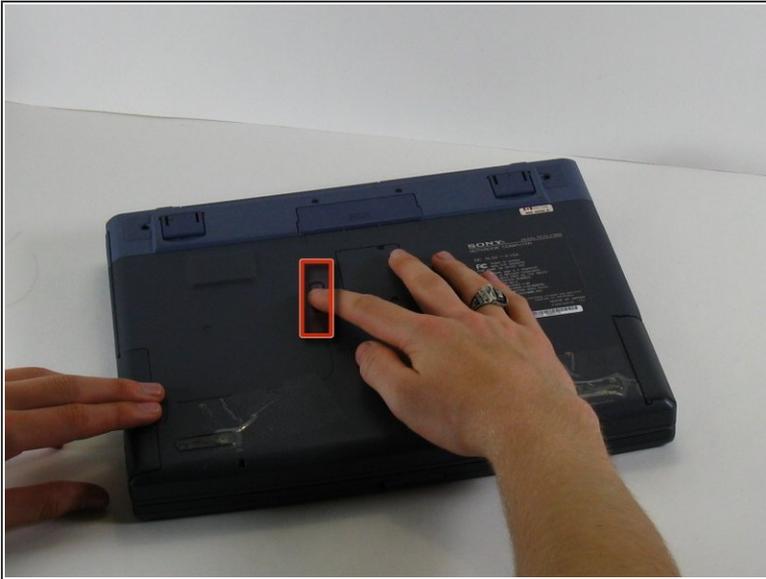

- With one hand slide and hold the tab shown.
 - With your other hand, pull the floppy drive out of the floppy drive bay.
- To replace the floppy drive, simply slide the drive into the slot until it clicks.

To reassemble your device, follow these instructions in reverse order.