


Disassembling Nokia 3560 Logic Board

Written By: Sam Ryan

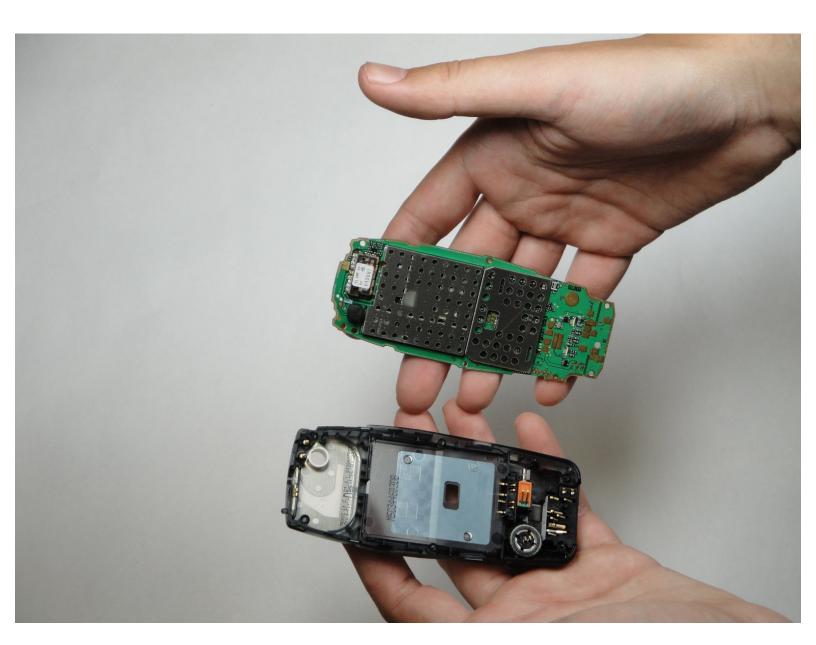

INTRODUCTION

This guide will show you how to remove the logic board from the Nokia 3560.



TOOLS:

• 64 Bit Driver Kit (1)

Step 1 — Back Cover





- Press down on the release latch on the bottom of the cover.
- Once the latch is released, lift the cover from the phone.

Step 2 — Disassembling Nokia 3560 Keypad



 Lift the front case off of the phone body.

Step 3





Lift the keypad off of the phone.

Step 4 — Disassembling Nokia 3560 LCD Display



 The screen is held to the body by six screws.

Step 5



 Unscrew the six screws with a Torx screwdriver (six-pointed star shaped bit).

Step 6






Insert a flat screwdriver between the black body and plastic layer.

Step 7



 Pry the layers apart. The LCD and plastic layer will lift out as one piece.

Step 8 — Disassembling Nokia 3560 Logic Board

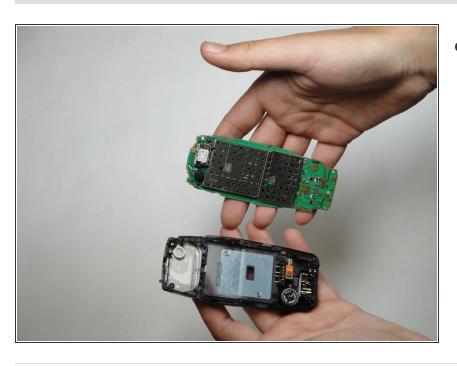

With the screws removed, the logic board can then be lifted out of the body by hand.

To reassemble your device, follow these instructions in reverse order.