


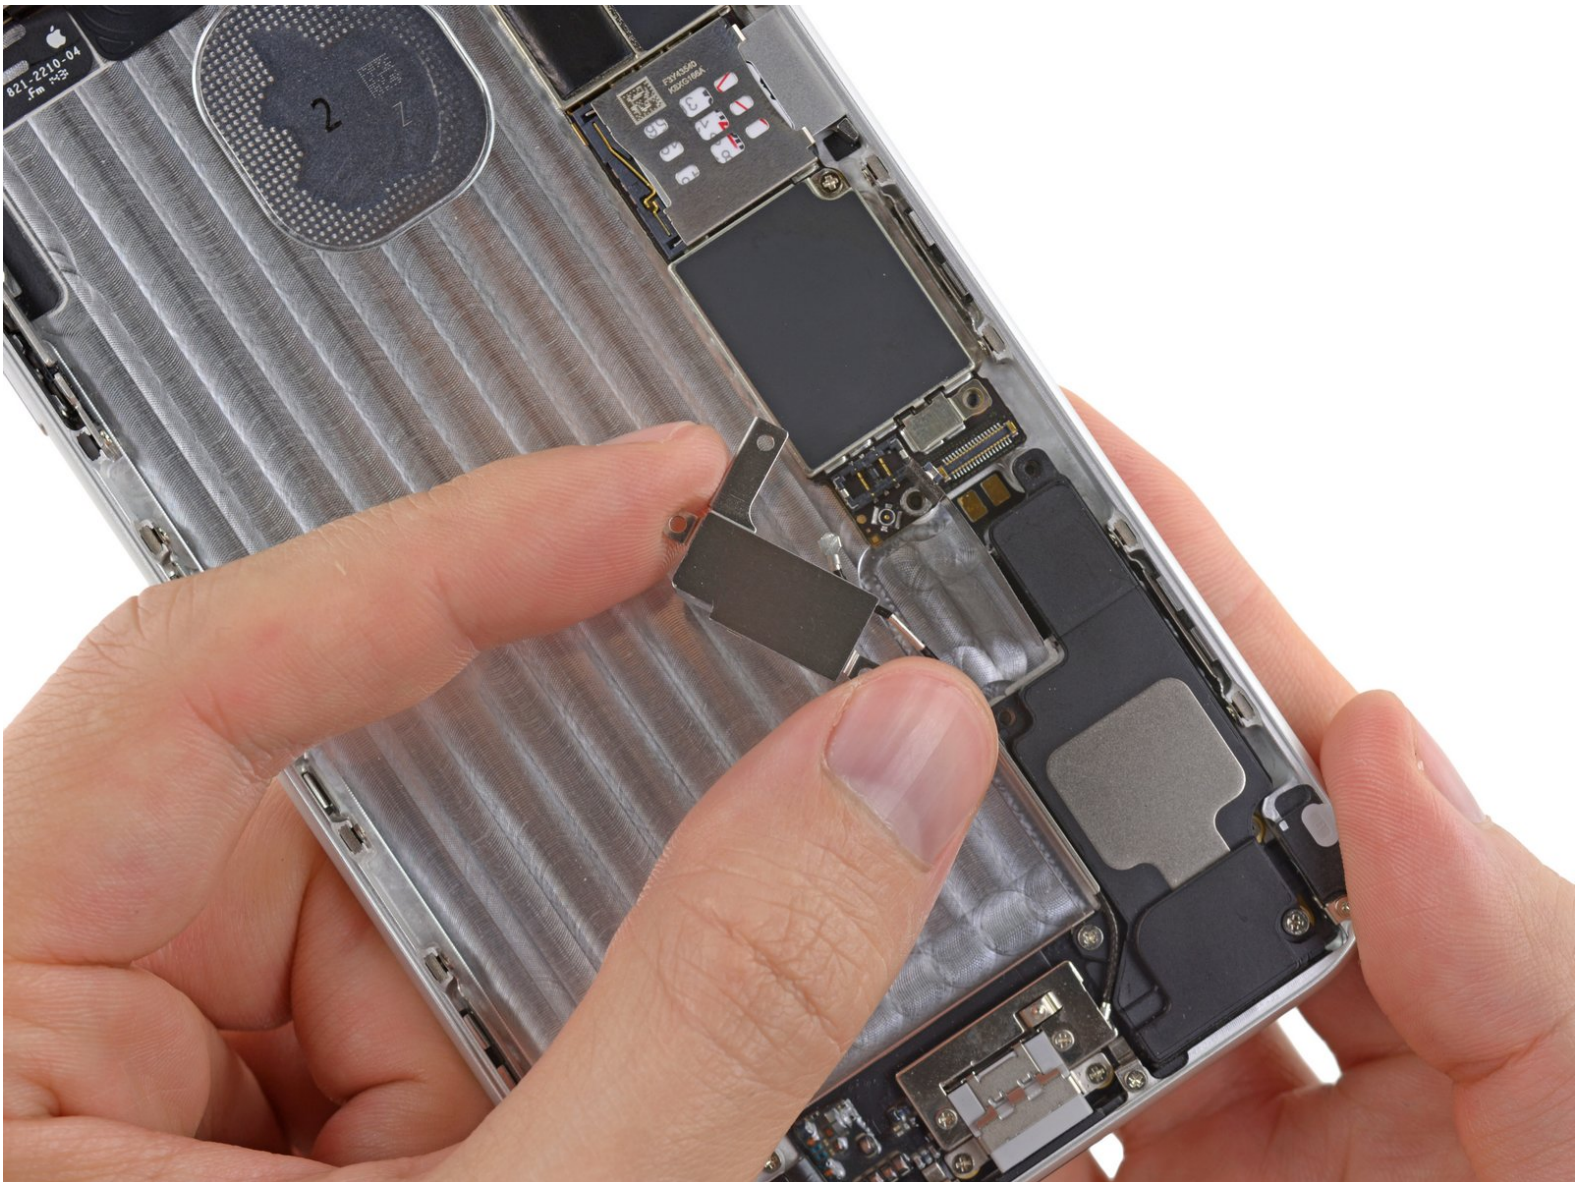

iPhone 6 Plus Vibrator Replacement

Prereq only, battery removed.

Written By: Walter Galan



INTRODUCTION


Prereq only, battery removed.



TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Vibrator

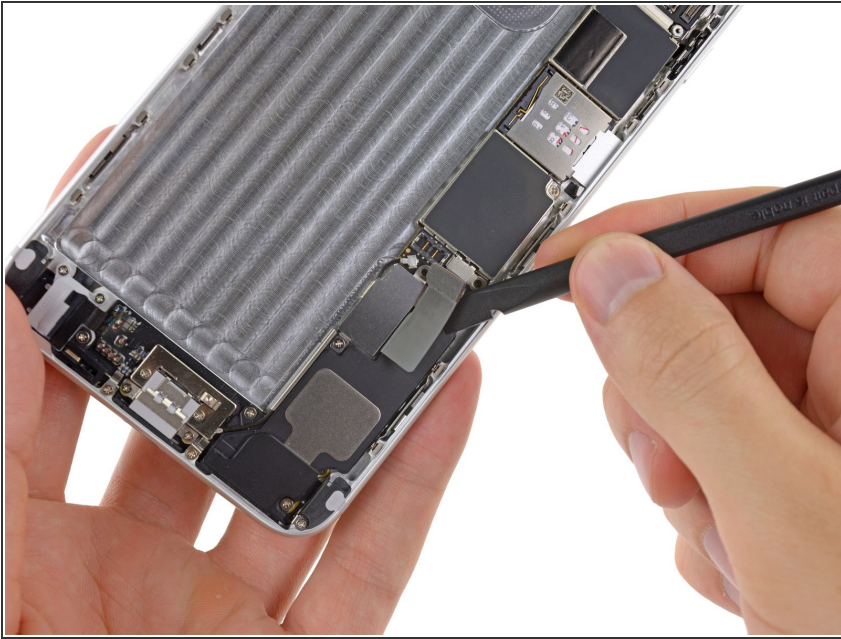

- Pry the vibrator connector cable up from its socket on the logic board with the flat end of a spudger.

Step 2




- Use the tip of a spudger to disconnect the interconnect antenna cable from its socket on the logic board.

Step 3




- Grasp the interconnect antenna cable with a pair of tweezers and carefully deroute it from its channel on the speaker assembly.

Step 4

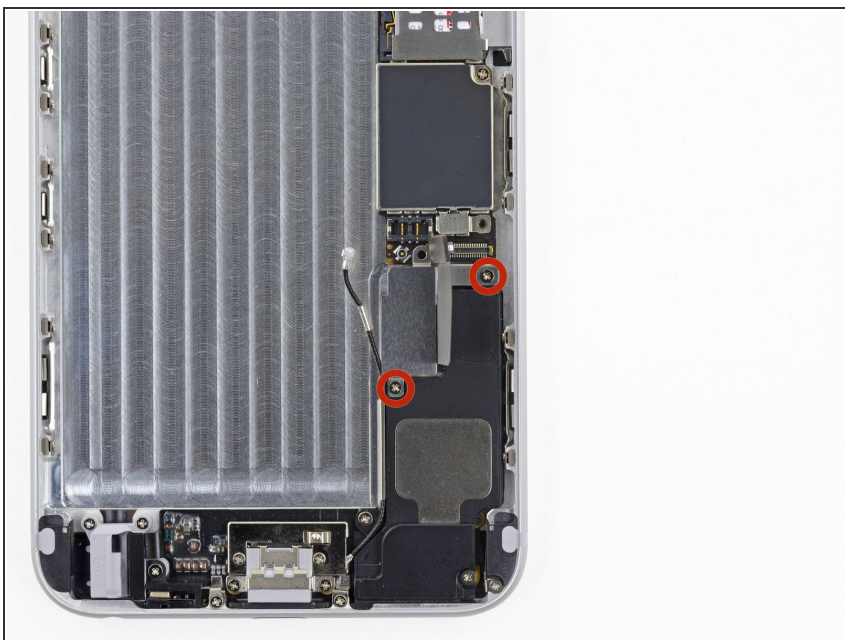

- Remove the two 2.5 mm Phillips #00 screws securing the vibrator to the rear case.

Step 5

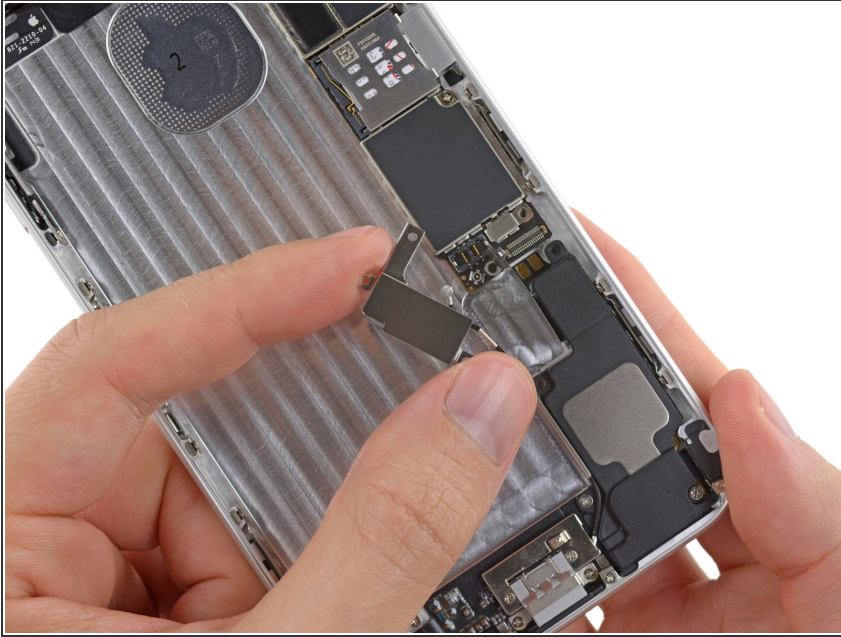

- Lift and remove the vibrator out of the iPhone.

To reassemble your device, follow these instructions in reverse order.