



Automatic Tommy 20 Battery Replacement

Replace your gun's battery so that it can continue functioning.

Written By: Reed Garmsen



INTRODUCTION

Replacing the battery in the Tommy 20 is a relatively simple replacement, just make sure you have 3 replacement AA batteries ready to go beforehand along with a Phillips #1 Screwdriver! A good first step in any repair goal concerning the Tommy 20!



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [AA Batteries](#) (1)

Step 1 — Removing the Battery Cover



- Remove the single 1mm screw connecting the battery cover to the gun using a Phillips #1 screwdriver.
- Lift the cover away from the gun and remove.

Step 2 — Remove the Batteries



- Remove all three batteries from compartment by pulling up on the positive end of each battery.

To reassemble your device, follow these instructions in reverse order.