



# Mac Pro First Generation RAM Replacement

Accessing the RAM is easy and requires no...

Written By: Andrew Kim



# INTRODUCTION

Accessing the RAM is easy and requires no tools. Use this guide to add or replace RAM for your Mac Pro.

## Step 1 — Case Panel



- Lift the lever to unlock the case.

## Step 2



- Remove the side panel of the Mac Pro.

**⚠** Discharge any static electricity by touching a grounded surface prior to working on any internal components. Touching the metal PCI slot covers works great, or any other grounded metal surface. You can also wear a [anti-static wrist strap](#).

### Step 3 — RAM



- Locate the two RAM trays at the bottom of the Mac Pro.

### Step 4



- Pull the RAM tray out of the case by using both hands holding the edge of the ram board as shown.

**⚠ Make sure you give enough time for the computer to cool down before you remove any internal hardware parts.**

## Step 5



- Push down on the ejectors on each side of a ram stick firmly and lift the RAM stick straight out carefully by holding each side.
- ① To insert a new RAM stick, place the RAM into the slot with the correct orientation and push on the stick using both hands until the ejectors are clicked into place.

---

To reassemble your device, follow these instructions in reverse order.