


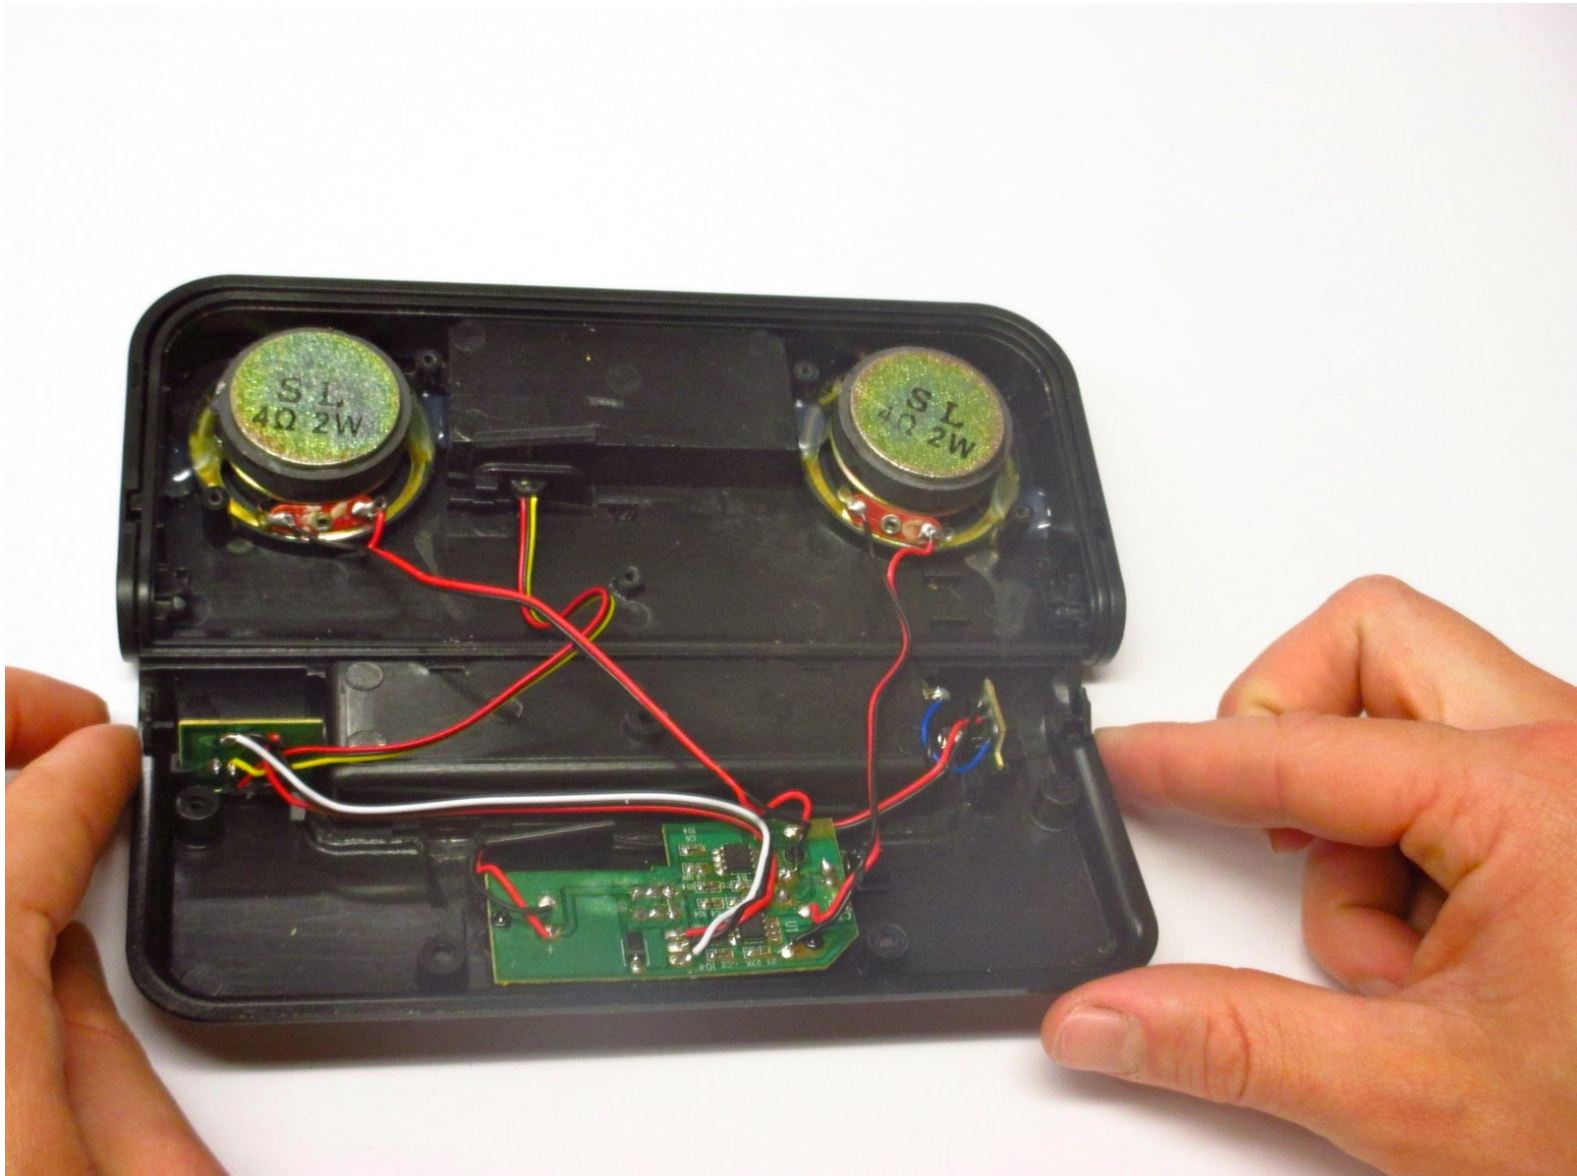

# iHip Fold-up Portable Speaker Back Cover Removal

This guide will outline how to successfully remove the back cover of the portable speaker device.

Written By: Cristina Garcia



---

## INTRODUCTION

This guide will aid in properly removing the back cover of the device. Through doing this, you will have access to the internal pieces of the device and allow in further adjustments.

---

### **TOOLS:**


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Removing the battery case cover




- Use your fingers to slide the battery case cover off in the direction of the arrows.

## Step 2 — Cleaning the battery case

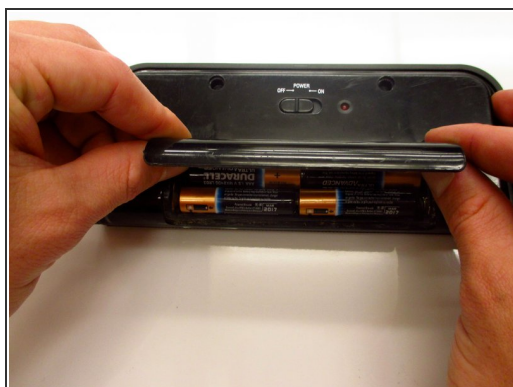

- Remove the four AAA batteries. Be sure to check your nearest battery recycling point!
- ⓘ Use the detailing brush and a paper towel to remove any corrosion left by previous batteries.



### Step 3 — Removing the screws

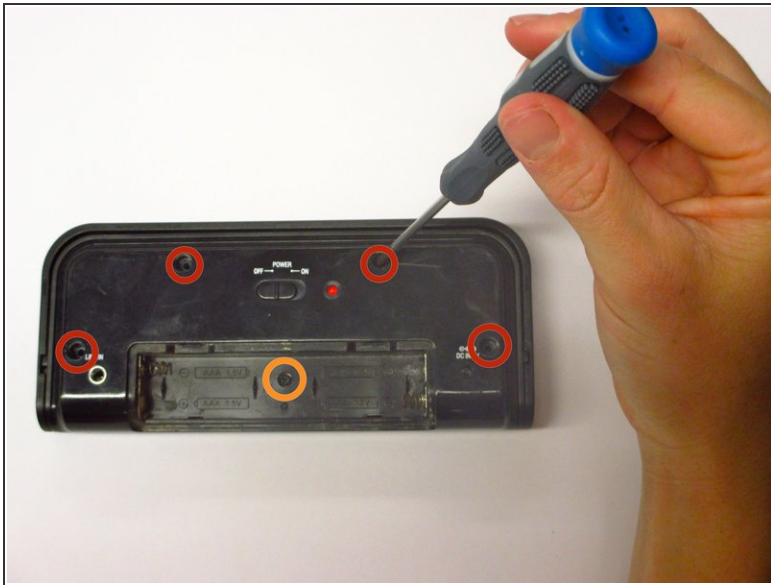

- Unscrew the four outer 1.0 mm screws with a Phillips-Head screwdriver.
  - ⓘ Screws will be magnetized in position and will require the use of tweezers to be removed.
- Push down gently on the battery case cover and slide it in the direction the arrows indicate. Remove the batteries.
- Unscrew the 0.6 mm screw located in the center of the battery case.
- Keep the 1.0 mm and 0.6 mm screws separate from each other for reassembly.



## Step 4 — Removing the back cover

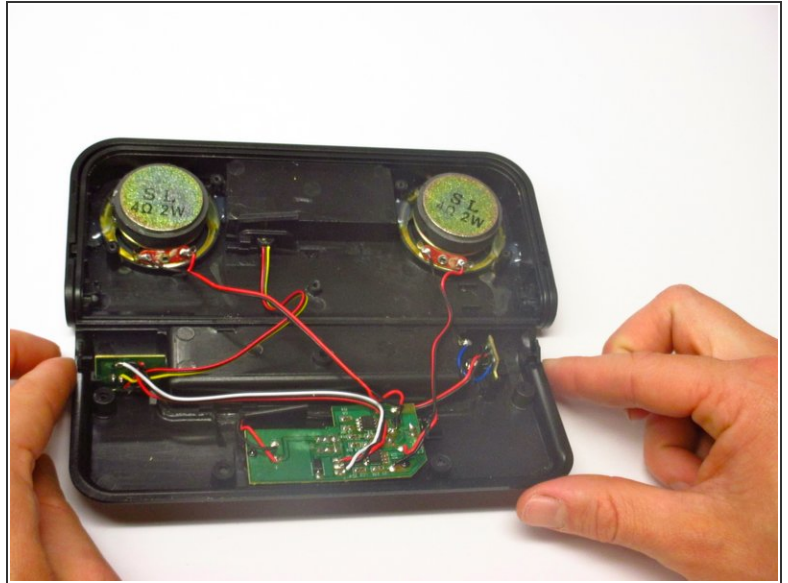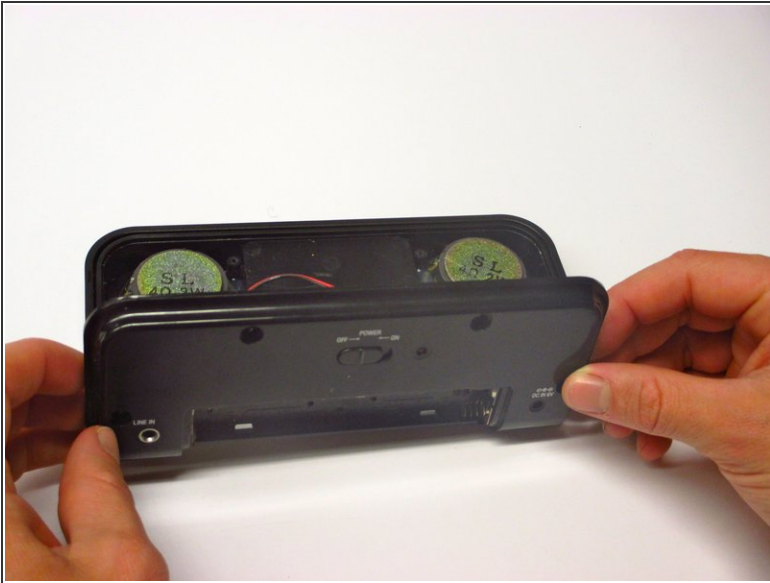

- Remove the back cover carefully; there are many wires that connect it to the device.

To reassemble your device, follow these instructions in reverse order.