



Xbox 360 S Wi-Fi Board Replacement

A prerequisite to removing the left panel.

Written By: David Hodson



INTRODUCTION

A prerequisite to removing the left panel.

TOOLS:

TR10 Torx Security Screwdriver (1)

PARTS:

Xbox 360 S Wi-Fi Board (1)

Step 1 — Wi-Fi Board



- Remove the single T10 Torx screw holding in the wireless card.
 - Pull the Wi-Fi Board out of the console.
-

To reassemble your device, follow these instructions in reverse order.