



HTC One Mini Battery Replacement

Follow the instructions in this repair guide to...

Written By: Daniela Delgado



INTRODUCTION

Follow the instructions in this repair guide to successfully remove the rear case of your HTC One Mini, locate the phone's battery, and remove it so that a new one may replace it.

TOOLS:

[Spudger](#) (1)

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)

[iOpener](#) (1)

[64 Bit Driver Kit](#) (1)

Step 1 — iOpener Heating



- Use an iOpener or hair dryer to apply heat to the lower speaker grille, in order to soften the adhesive underneath.

Step 2 — Remove Speaker Grills



- Slide a thin pry tool underneath the lower speaker cover and slide it across to separate the adhesive underneath.
- Remove the lower speaker cover.

Step 3 — Remove Screw



- Remove the screw under the speaker cover using a T6 Torx screwdriver.

Step 4






- Slide a thin guitar pick or pry tool between the edge of the display and the rear case, near the bottom of the phone.
- Carefully work your way up each side of the display and separate the rear case. There are three clips on each side.

Step 5 — Separate Rear Case





- Remove the rear case from the phone.

Step 6 — Remove Screws

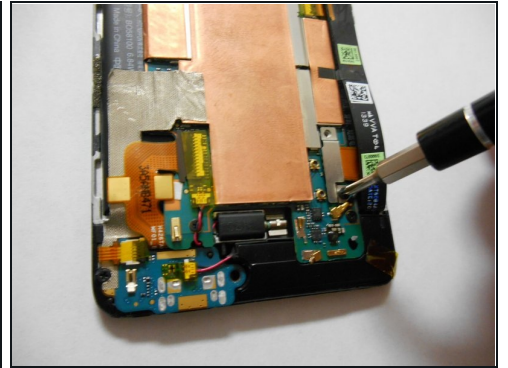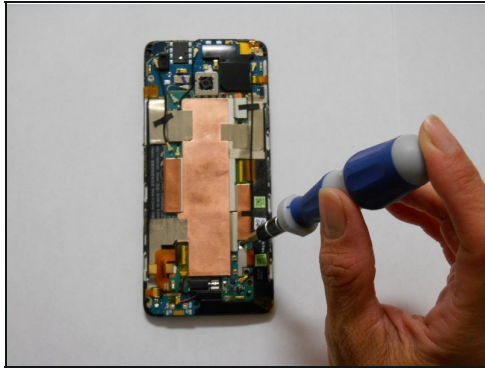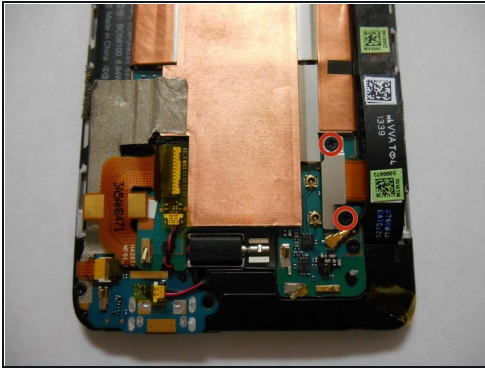




- Remove the two Phillips screws securing the battery connector.

Step 7

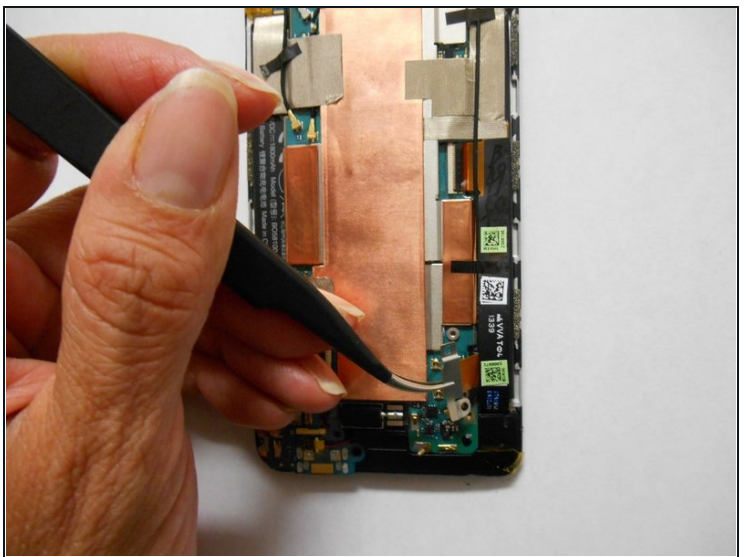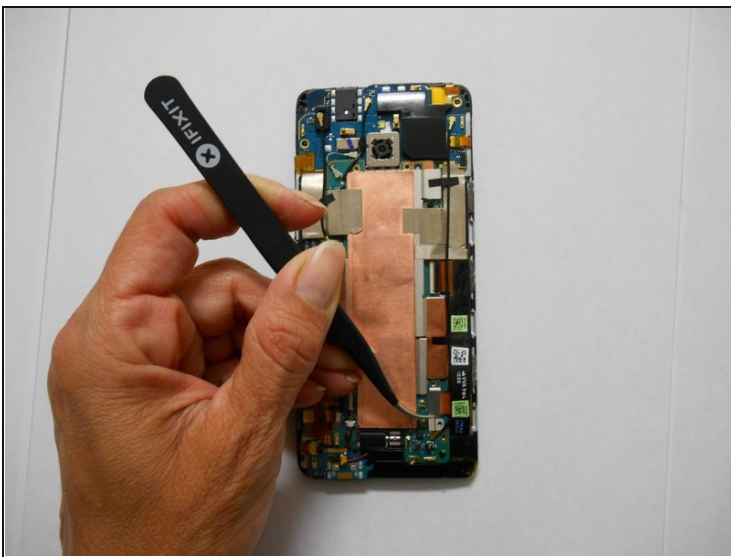




- Disconnect the battery by prying the metal cover straight up.

Step 8 — Remove screws

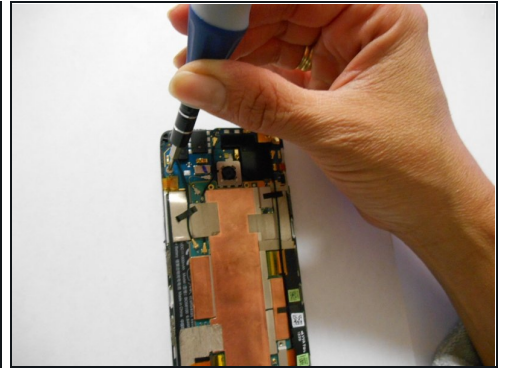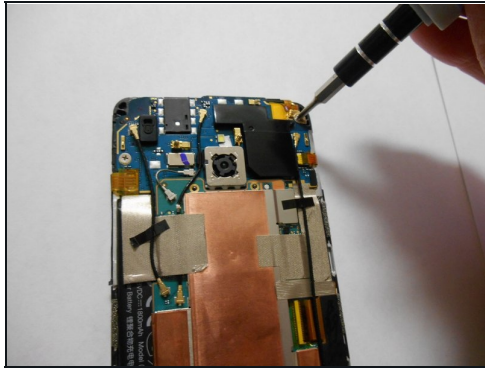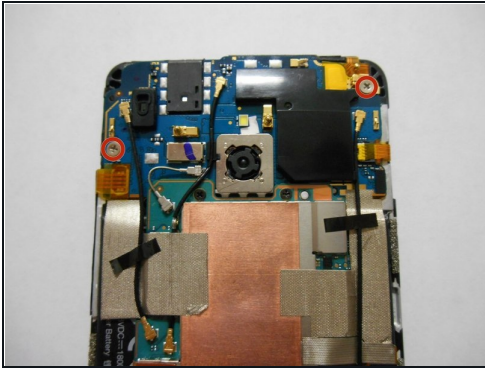




- Remove two Phillips screws.
 - ① The screw on the upper right corner secures a tiny golden washer. Remove this washer.

Step 9 — Remove Screws

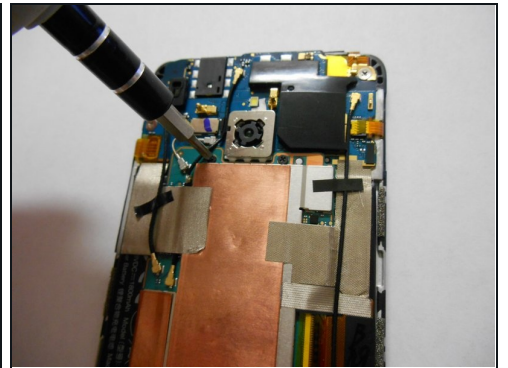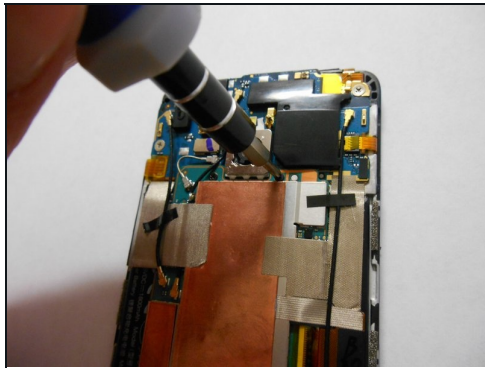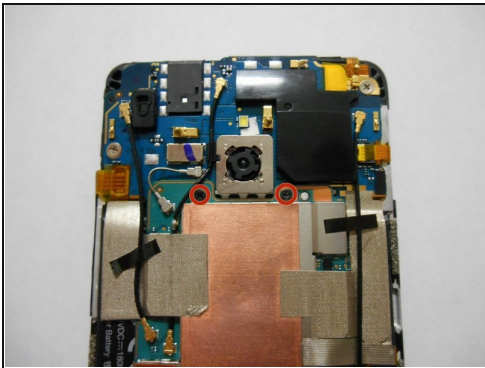




- Remove the two small black Phillips screws.

Step 10 — Remove Screws

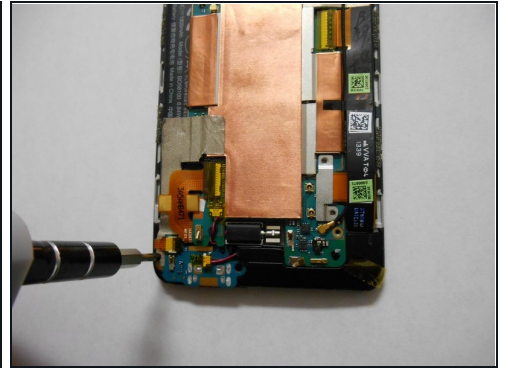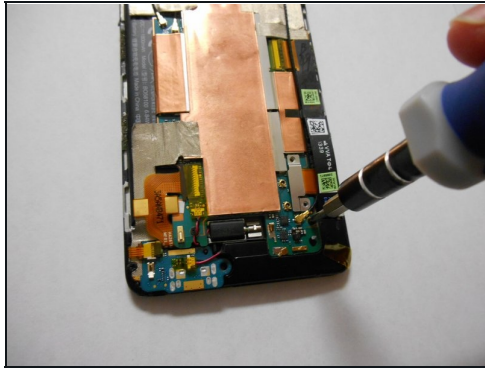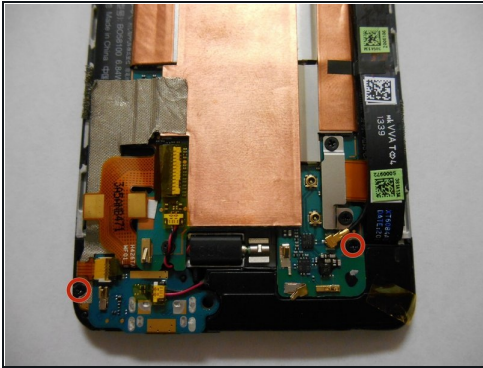


- Remove two more Phillips screws.

Step 11 — Remove protective foil.

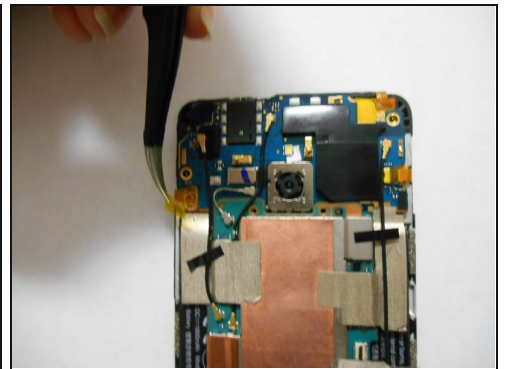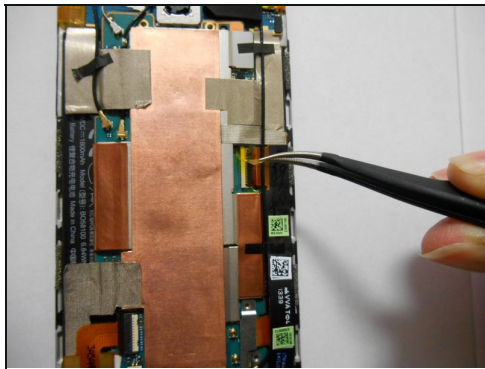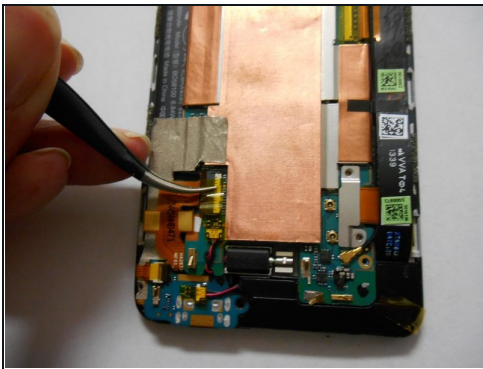


- Use [tweezers](#) to remove the yellow tape covering the flex cable connectors (total of five).

Step 12

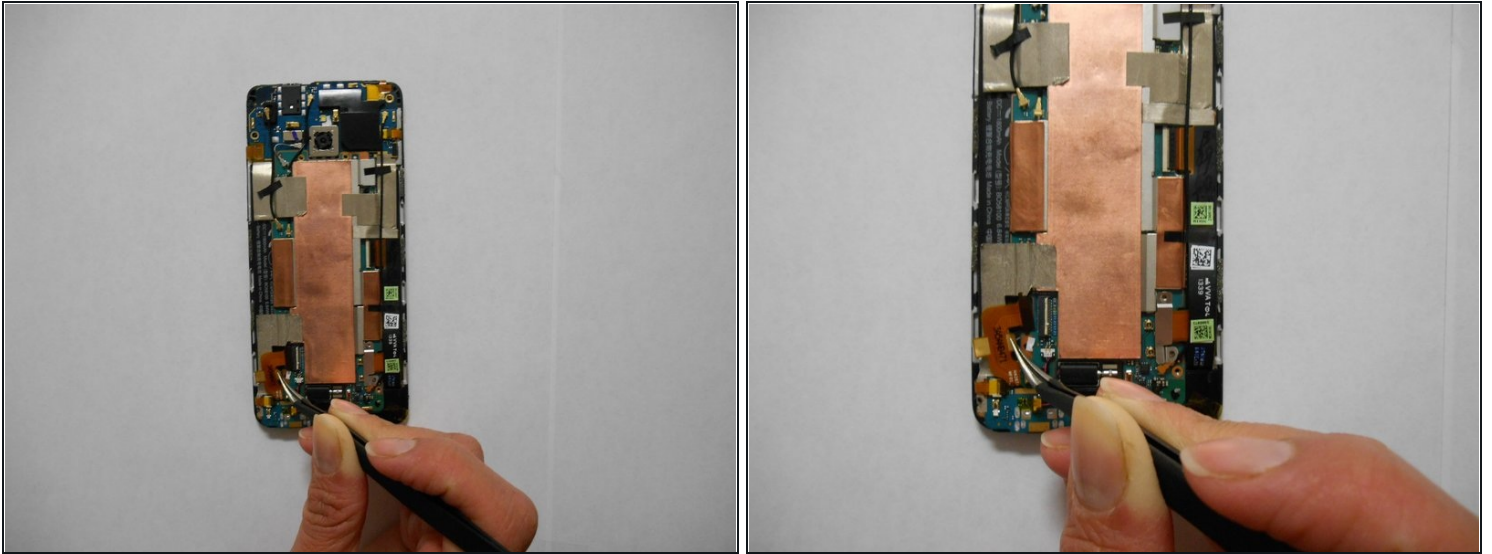



- Carefully disconnect the flex cables at the points where you removed the yellow tape in the previous steps.
- To disconnect, flip up the small latch on each connector, opposite its cable, and then gently pull the cable free.

Step 13

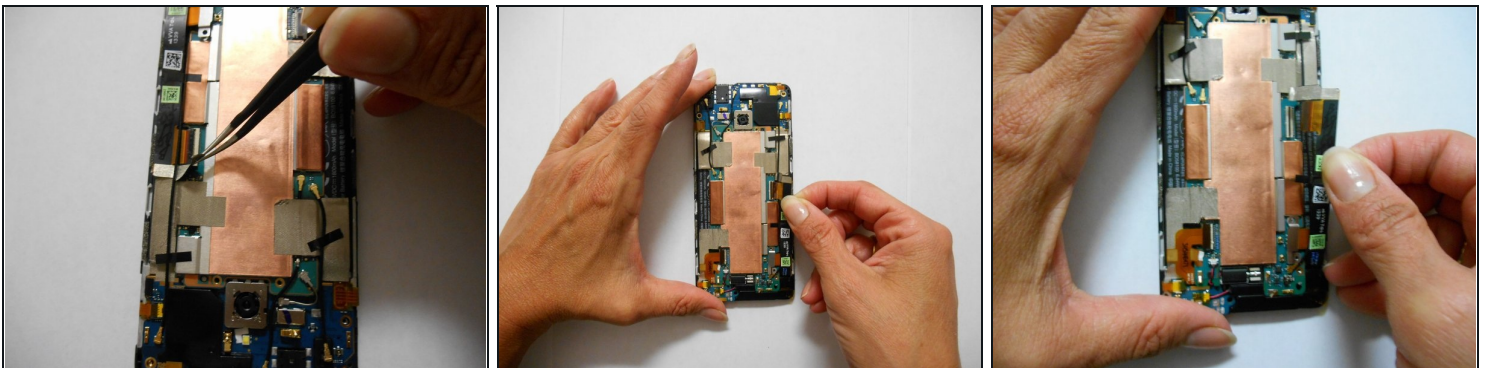




- Peel off the silver strip with your tweezers.
- Using your hands, detach the black strip from the board without removing it.

Step 14

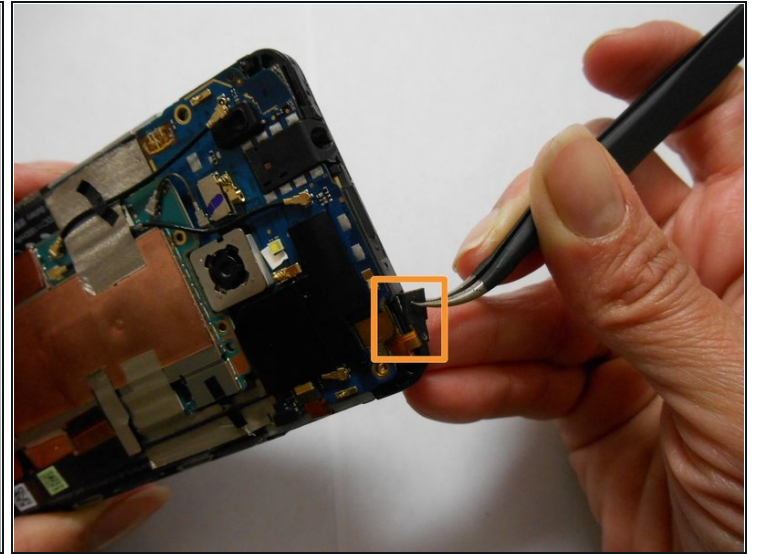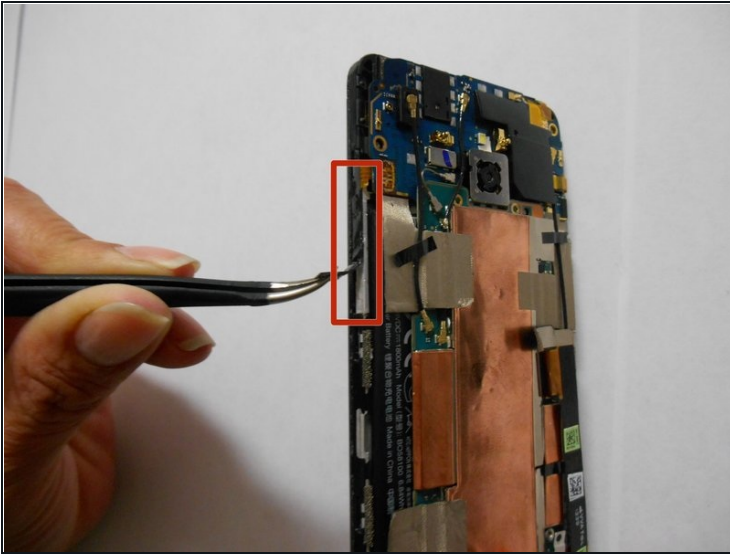


- Detach carefully with your tweezers the volume buttons.
- Detach the power button with your tweezers.

Step 15

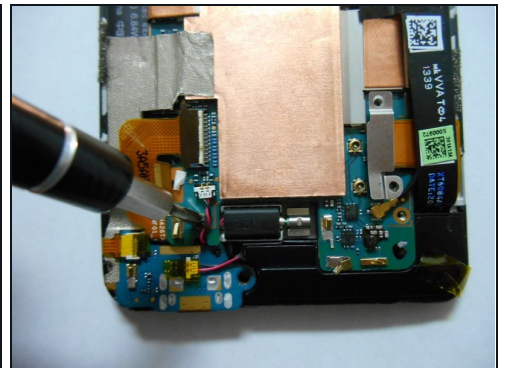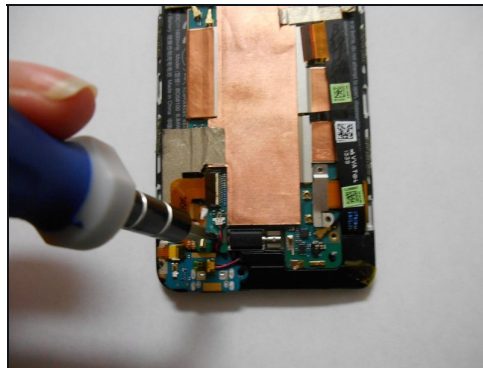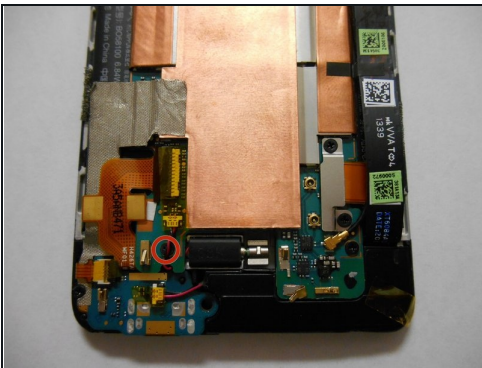

- Identify the screw behind the cable.
- Remove the screw using a Phillips screwdriver.


Step 16

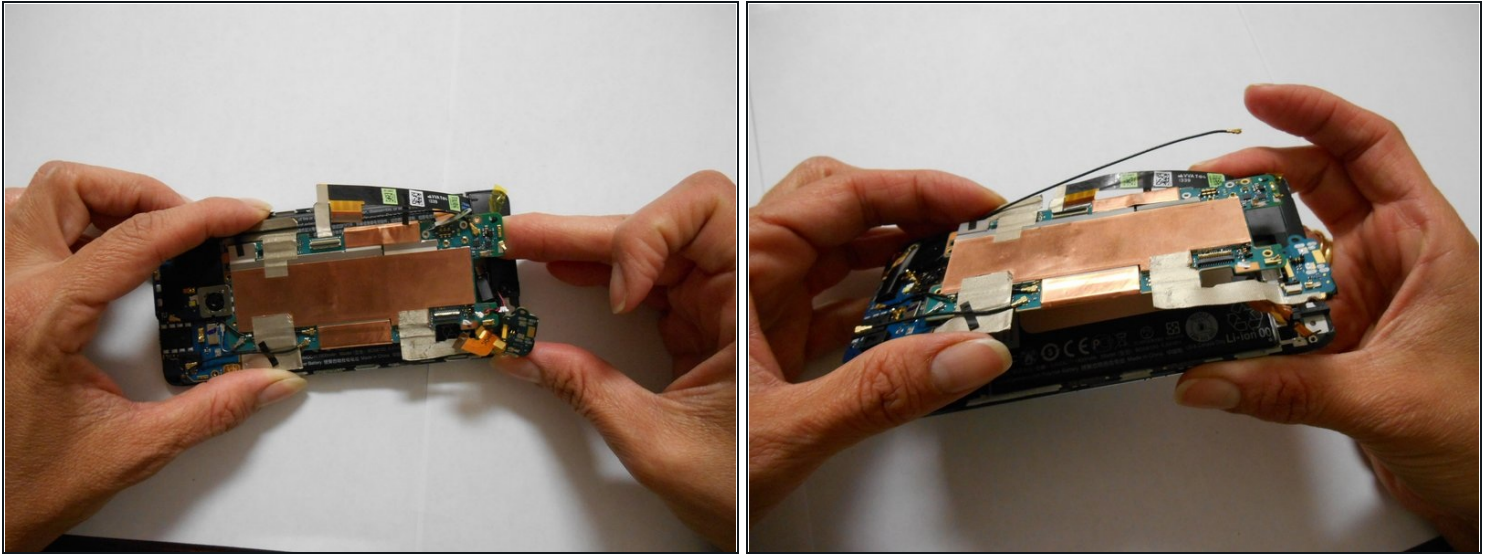

- Lift the motherboard, but don't try to remove it completely yet.

⚠ Handle the board only by the edges.

Step 17

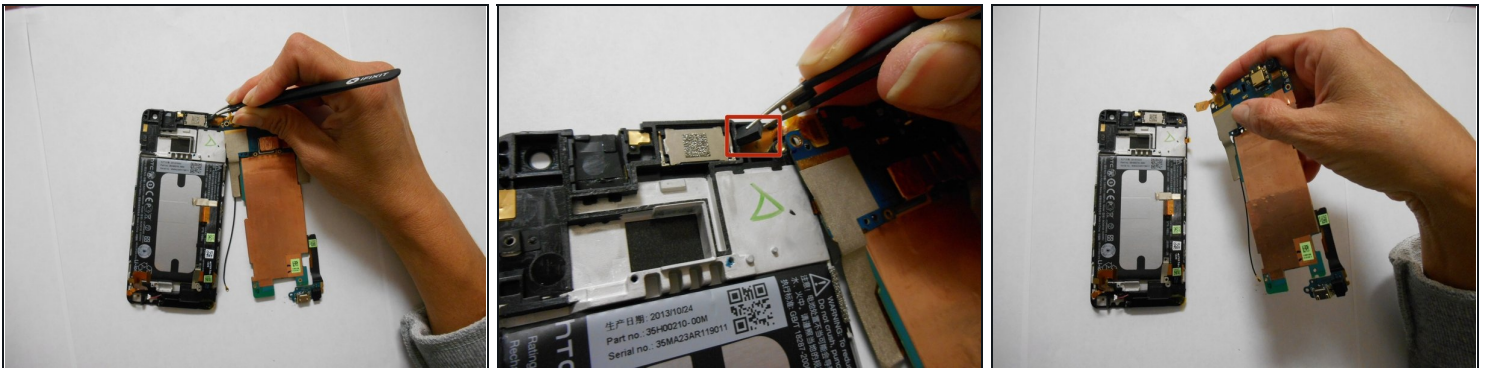


- Using your tweezers, remove the black square located in the power button.
- Remove the motherboard completely.

Step 18 — Remove Lower Speaker



- Using the spudger, use force to detach and remove the speaker.

Step 19

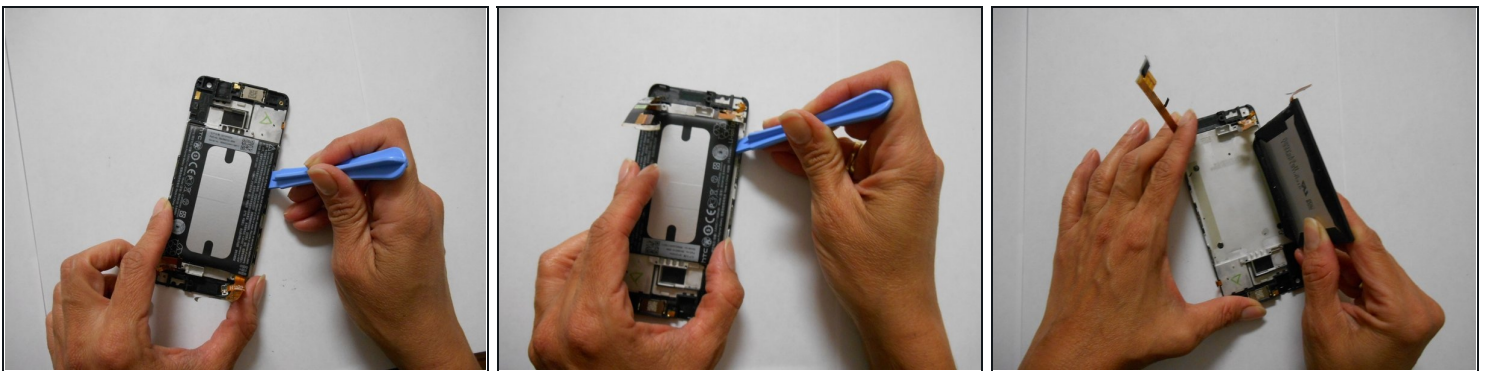

- Use a wide pry tool or credit card to gently pry the battery up and out of the phone.

⚠ Do not puncture or deform the battery in any way, or a dangerous fire or explosion may result.

To reassemble your device, follow these instructions in reverse order.