



Canon PIXMA MP620B Paper Tray Replacement

The paper tray can be removed by flipping the...

Written By: Val Fedorikhin



INTRODUCTION

The paper tray can be removed by flipping the printer upside down and pulling the paper tray out as if you were going to fill it with paper.

Step 1 — Flip the Printer Upside-down




- Gently turn over the entire machine and set down carefully.

Step 2 — Pull out the Paper tray



- Firmly grasp the tray and remove from rest of the printer.

Step 3 — You're Done!

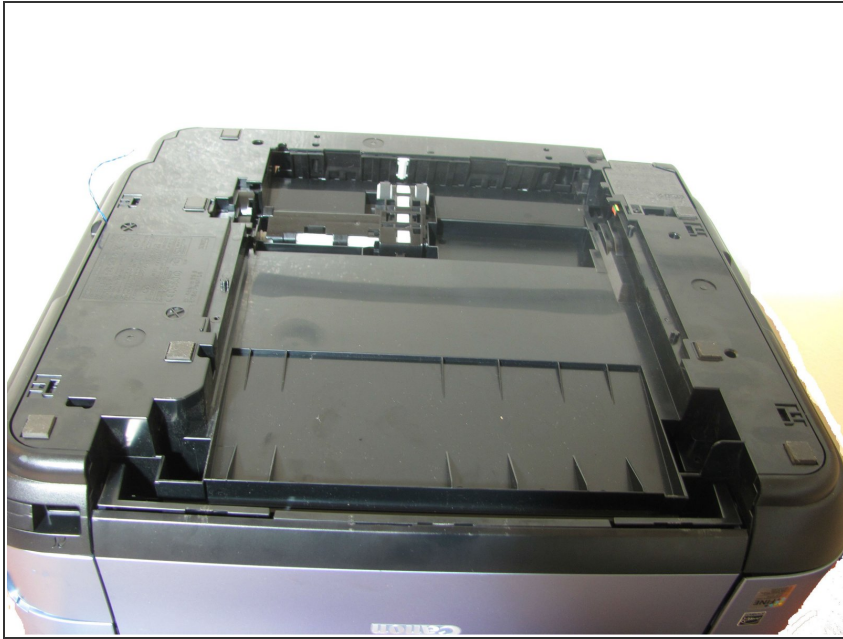

- Purchase a replacement paper tray. And Slide it in place of the old tray!

To reassemble your device, follow these instructions in reverse order.