




Kodak EasyShare LS743 Battery Door Replacement

Replacing the battery door

Written By: Odessa

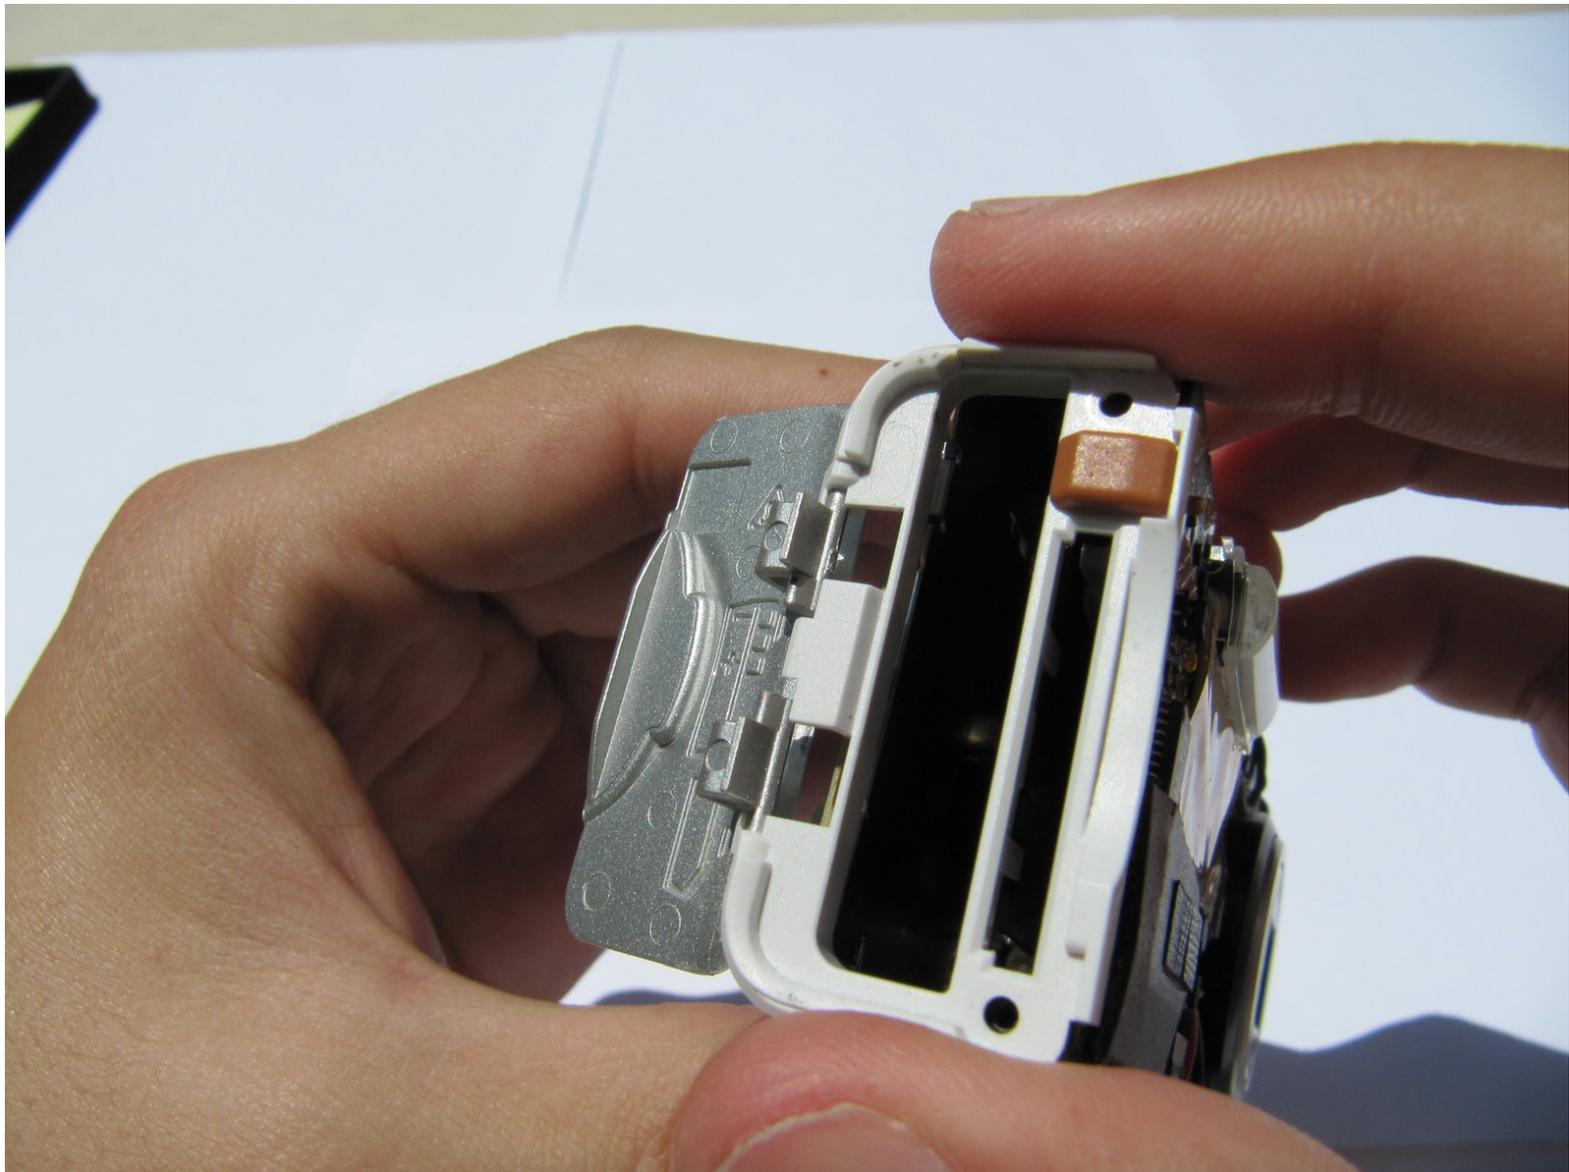


INTRODUCTION

This is a step-by-step guide in replacing the battery door

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

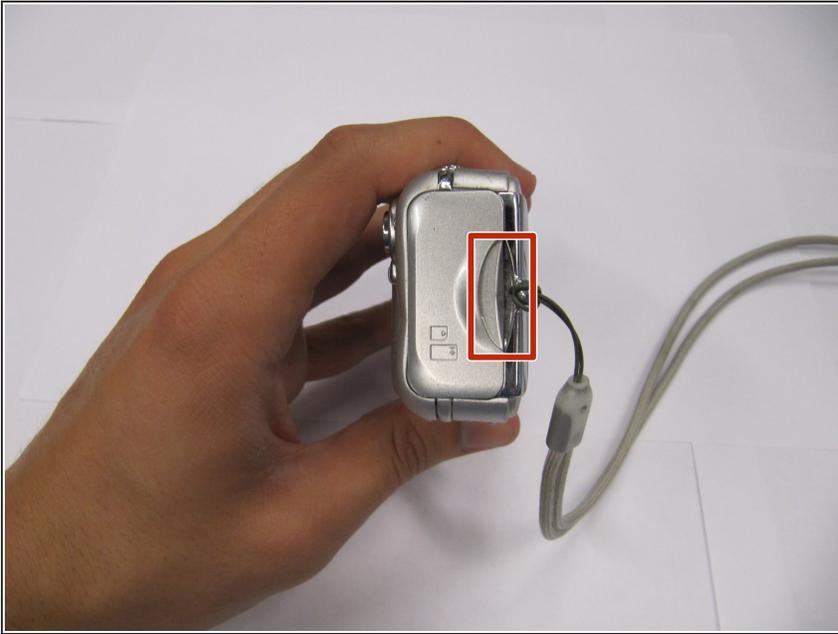

- Using your fingernail, open the battery cover.

Step 2

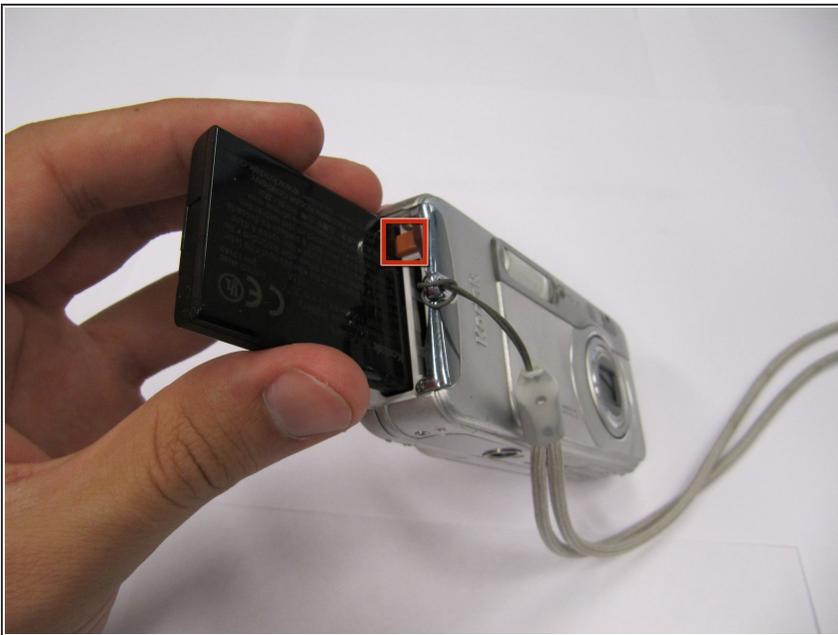

- Slide the orange latch sideways to eject the battery.
- Remove the battery from the battery slot.

Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Using a Phillips #00 screwdriver, remove two 5.39 mm screws next to the battery slot.
- Remove the metal piece holding down the lanyard, then remove the lanyard.

Step 4





- Using a Phillips #00 screwdriver, remove seven screws located on the outside case of the camera.
 - One 6.25 mm screw is located on the top right corner, right to the "OK" button.
 - Four 4.45 mm screws are on the bottom of the camera.
 - Two 2.95 mm screws are on the left side of the camera, above the USB port.

Step 5

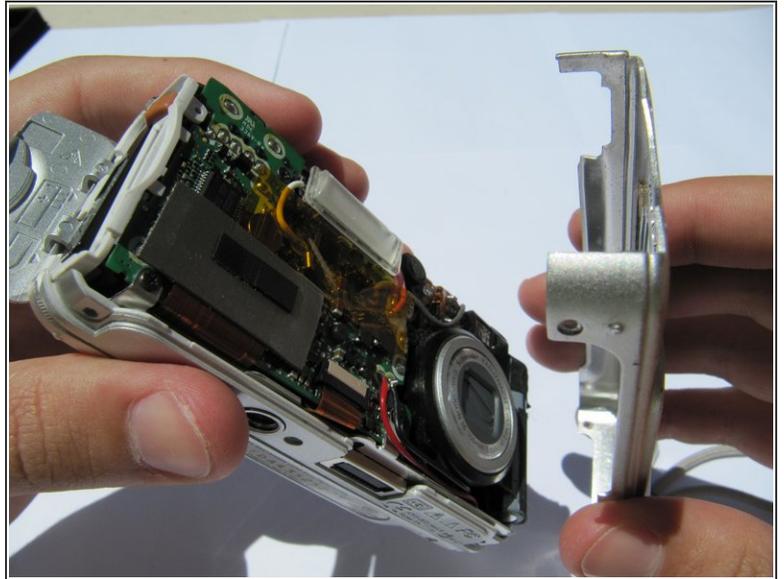

- Carefully remove the rear camera casing.
- Carefully remove the front camera casing.

Step 6 — Battery Door

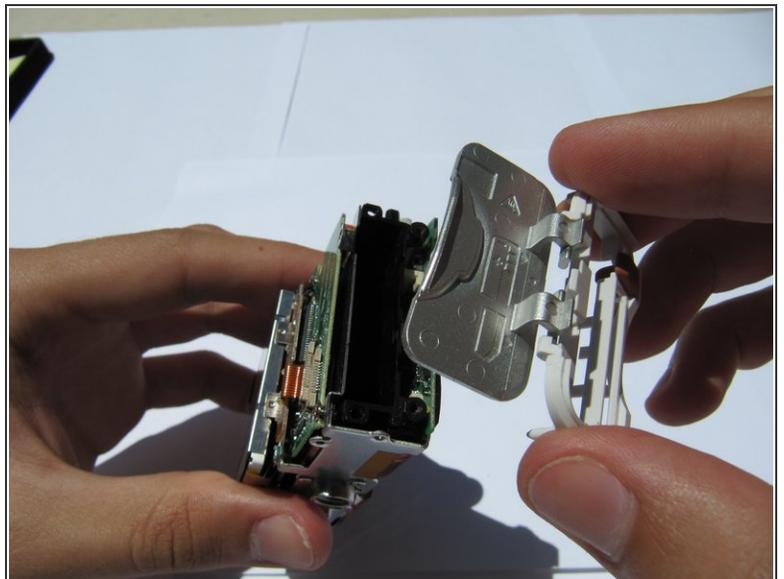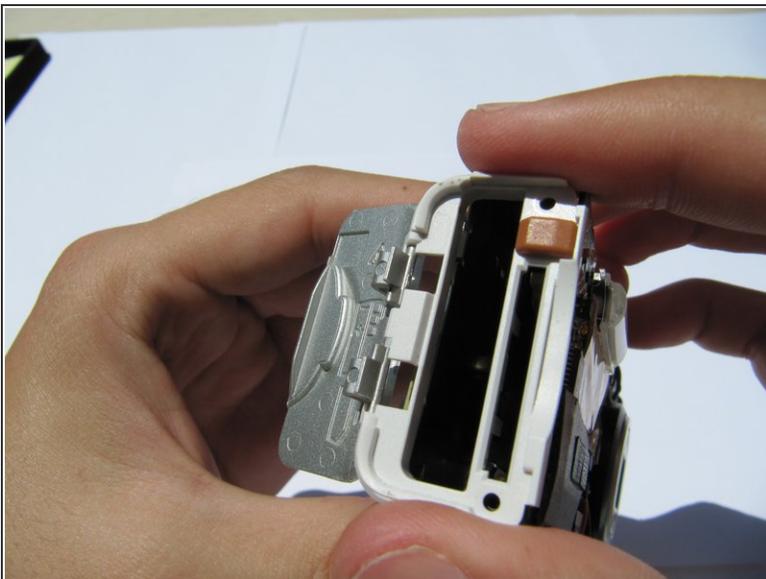

- Remove loose battery door.

To reassemble your device, follow these instructions in reverse order.