




# Kodak EasyShare LS743 Removing LCD Replacement

Removing the LCD screen.

Written By: Justin Mancherje

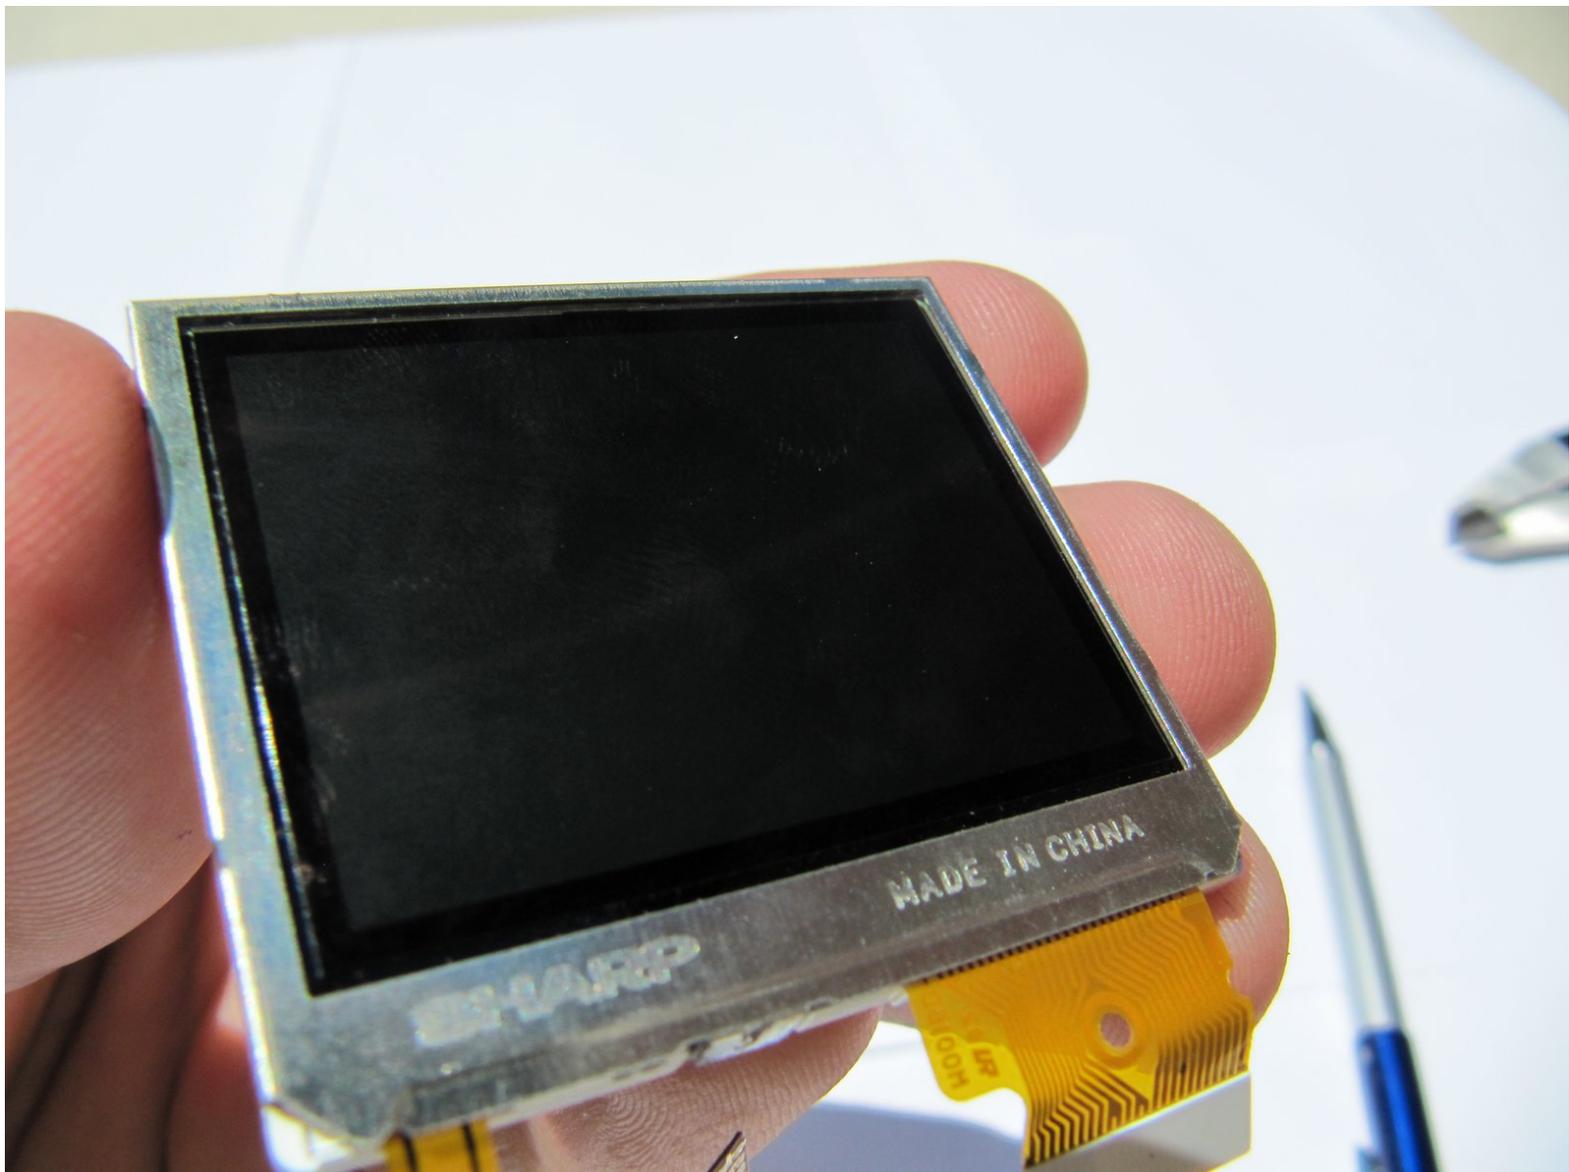

---

## INTRODUCTION


If the LCD screen is damaged or broken, you may want to remove it and repair or replace it.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

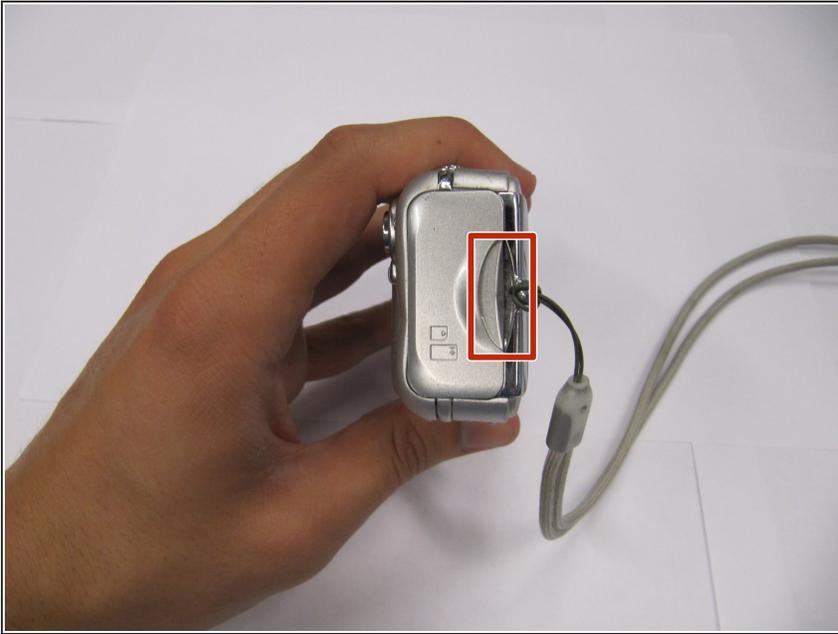

- Using your fingernail, open the battery cover.

## Step 2

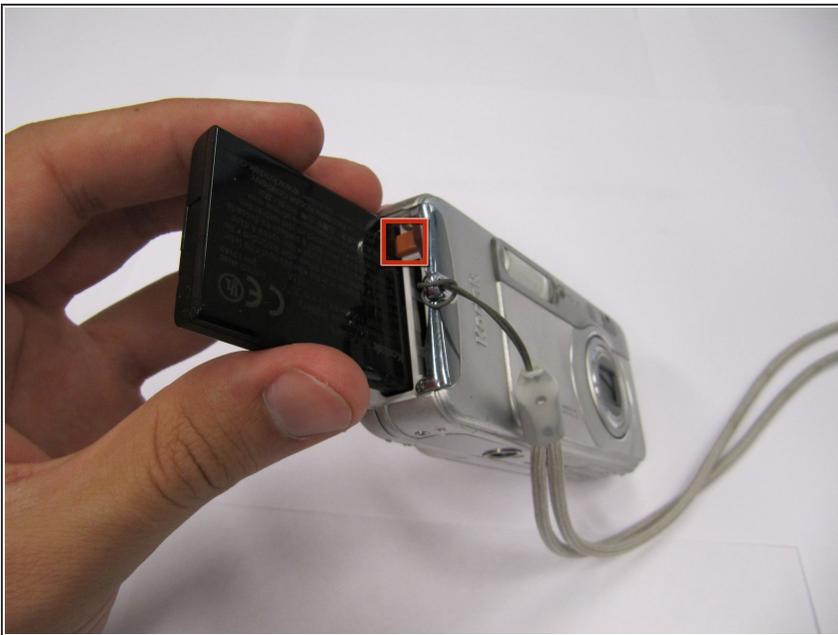

- Slide the orange latch sideways to eject the battery.
- Remove the battery from the battery slot.

### Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Using a Phillips #00 screwdriver, remove two 5.39 mm screws next to the battery slot.
- Remove the metal piece holding down the lanyard, then remove the lanyard.

### Step 4




- Using a Phillips #00 screwdriver, remove seven screws located on the outside case of the camera.
  - One 6.25 mm screw is located on the top right corner, right to the "OK" button.
  - Four 4.45 mm screws are on the bottom of the camera.
  - Two 2.95 mm screws are on the left side of the camera, above the USB port.

## Step 5

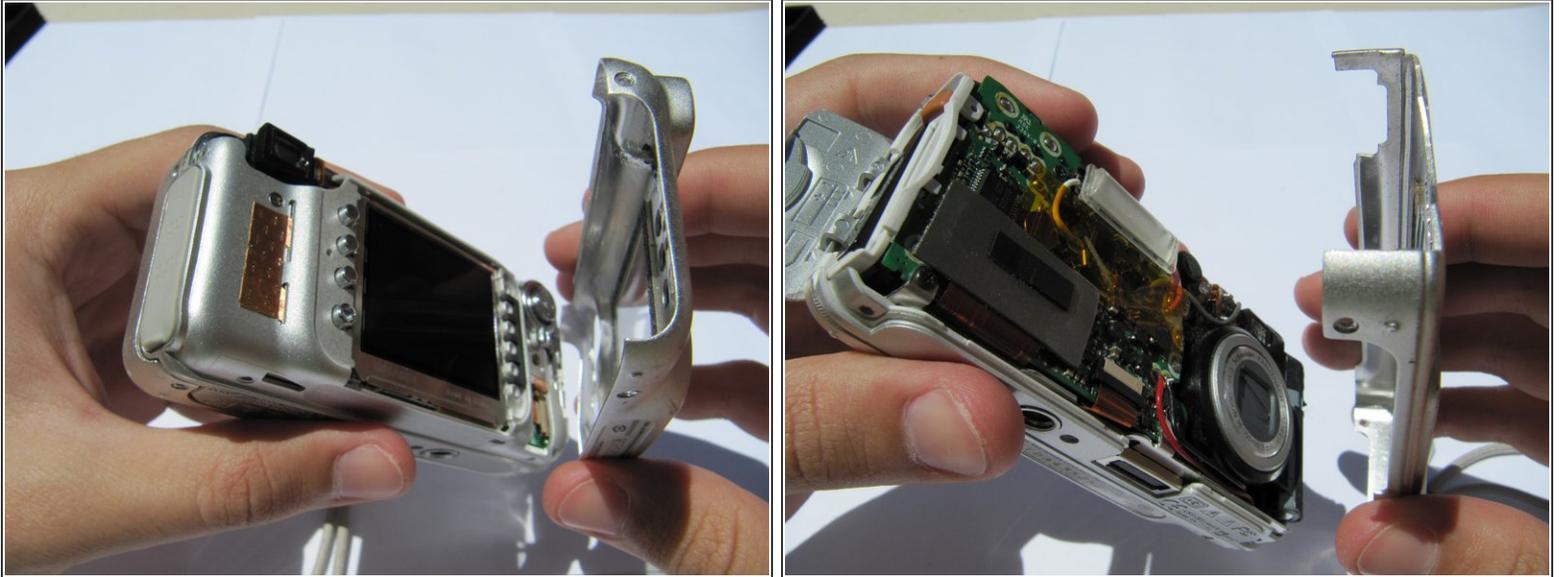

- Carefully remove the rear camera casing.
- Carefully remove the front camera casing.

## Step 6 — Removing LCD

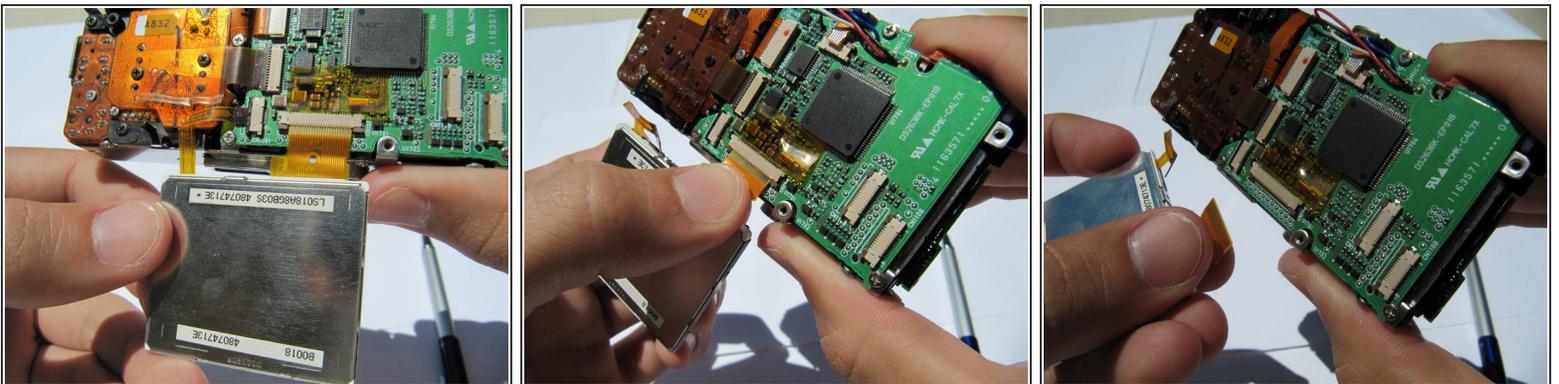

- Flip up the LCD screen to reveal the two orange ribbon cables.
- Disconnect the two ribbons cables from their sockets on the motherboard.

To reassemble your device, follow these instructions in reverse order.