



# Disassembling Samsung HMX-W300

Shows how to open up the camera without...

Written By: Robert



---

## INTRODUCTION

Shows how to open up the camera without damaging interior content.

---

### TOOLS:

- [1.5mm Hex Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Disassembling Samsung HMX-W300



- To remove the wristband of the device, grab the middle loop and pull the band through.

## Step 2




- Remove four screws with a Hex 1.5 mm screwdriver.

### Step 3



- Open the HDMI door on the side of the camera.
- Remove the single screw using a Phillips #00 screwdriver.


### Step 4

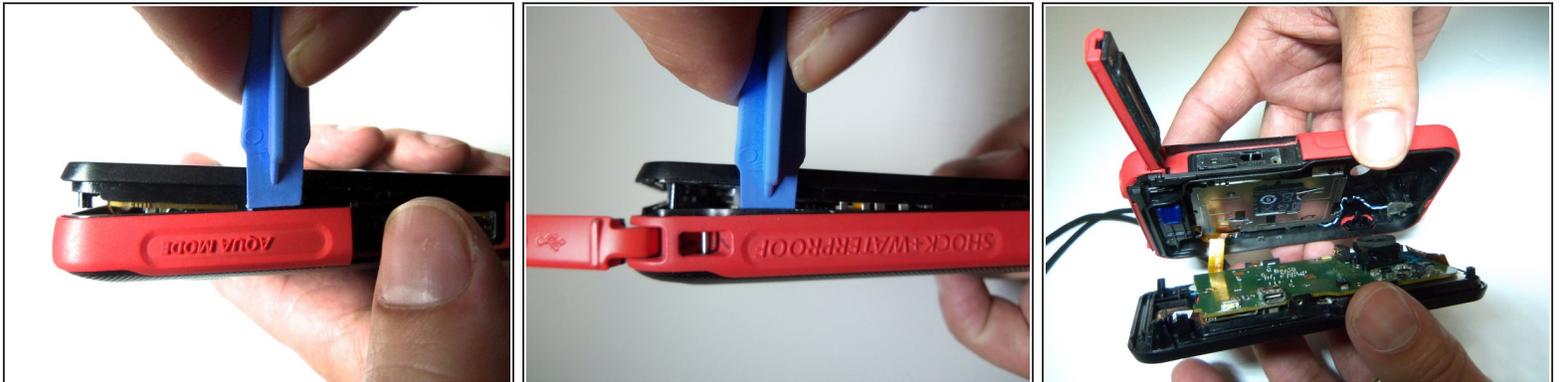

- Use the iFixit opening tool on both sides on the device. Pry apart both sections with light force.

**⚠ Do not apply too much force. There is a wire that attaches the front case with the rear case that can be damaged.**

## Step 5

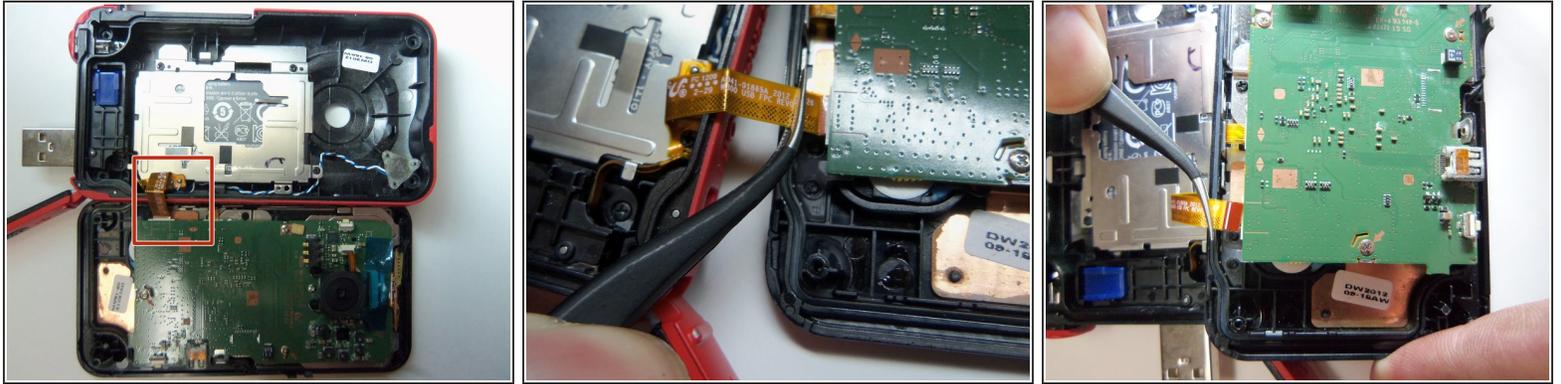

- Pull the wire ribbon out with a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.