




Canon PowerShot A590 IS Back Cover Replacement

You will remove screws from the bottom and...

Written By: Zach

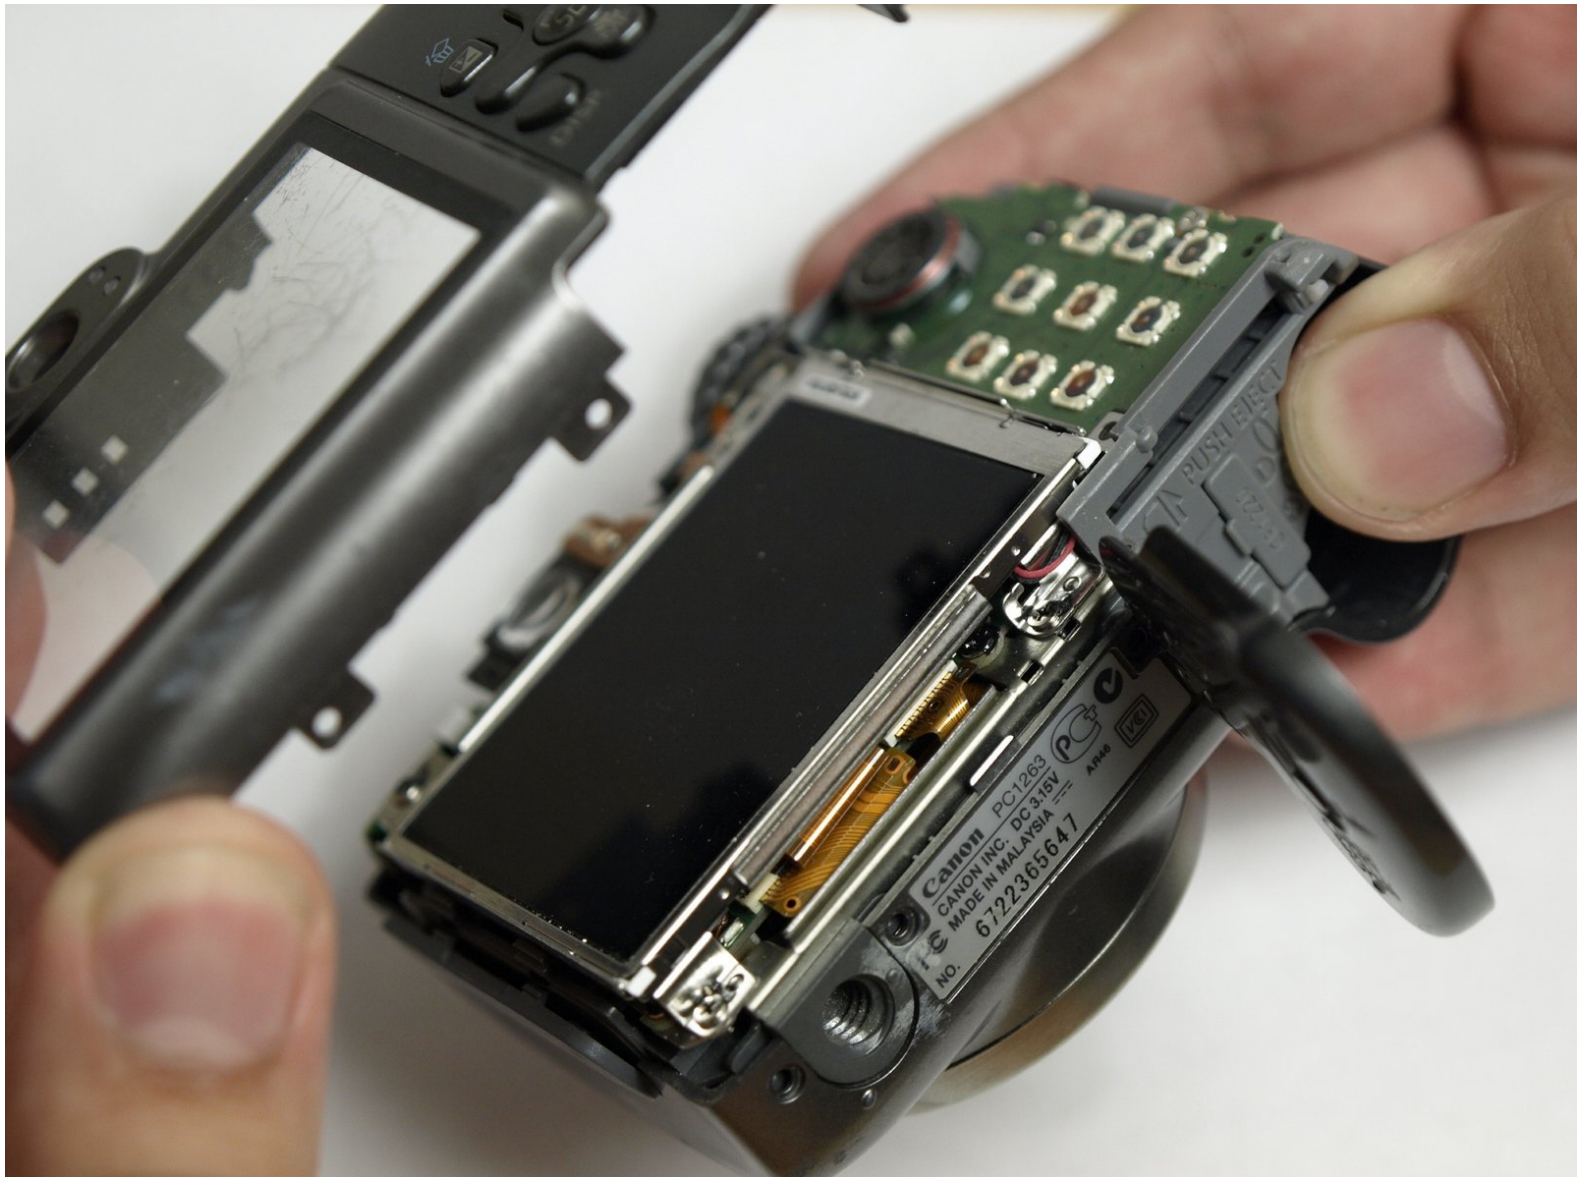

INTRODUCTION

You will remove screws from the bottom and sides of the camera in order to remove the cameras back cover.




TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Batteries




 The battery hatch is on the bottom of the camera.

 **CAUTION:** Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.

- While the switch is pushed forward, pull the cover away from the camera.

Step 2

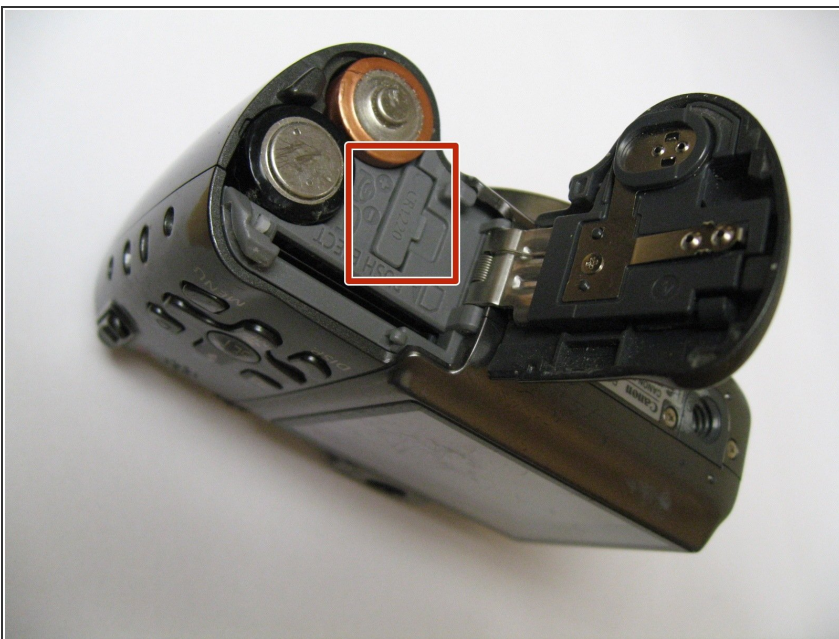

 This camera requires AA batteries.

- To remove batteries, simply allow them to fall out of the camera.
- Use a fingernail to lift the clock battery out of the camera.

Step 3



- ★ When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

Step 4 — Back Cover



- Remove the screw located under the rubber flap on the left side of the camera using a Phillips #00 screwdriver.

Step 5




- Remove the two screws located on the other side of the camera using a Phillips #00 screwdriver.

Step 6



- Remove the three screws located at the bottom of the camera using a Phillips #00 screwdriver.

Step 7

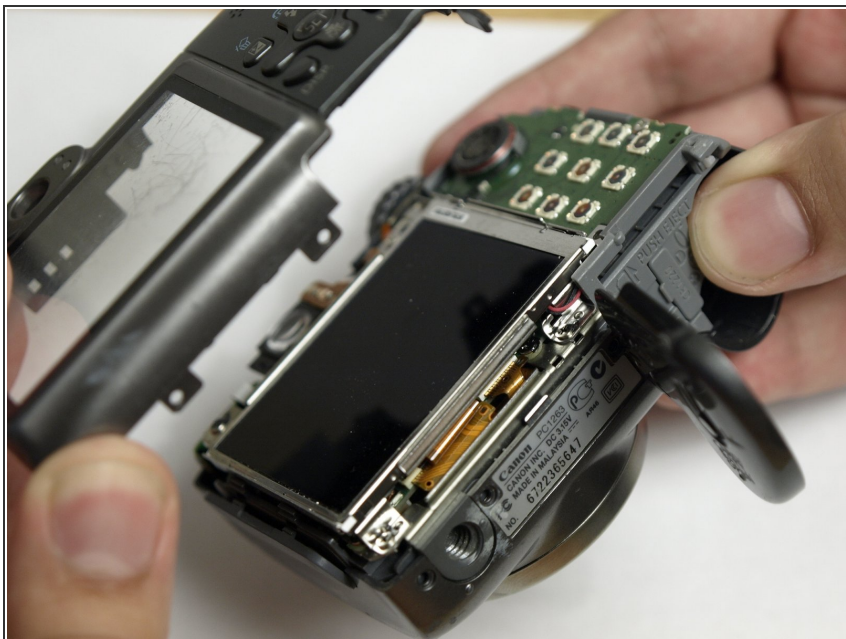

- Open the battery cover.
- Using the iFixit opening tool, push up gently around all edges of the camera.

To reassemble your device, follow these instructions in reverse order.